


# Automation1 iXC4e and XC4e PWM High-Performance Digital Drives

## HARDWARE MANUAL

Revision 2.03

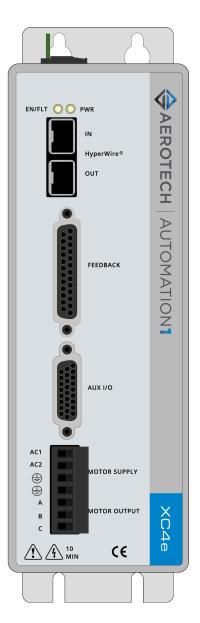



## GLOBAL TECHNICAL SUPPORT

Go to the Global Technical Support Portal for information and support about your Aerotech, Inc. products. The website supplies software, product manuals, Help files, training schedules, and PC-to-PC remote technical support. If necessary, you can complete Product Return (RMA) forms and get information about repairs and spare or replacement parts. To get help immediately, contact a service office or your sales representative. Include your customer order number in your email or have it available before you call.

This manual contains proprietary information and may not be reproduced, disclosed, or used in whole or in part without the express written permission of Aerotech, Inc. Product names mentioned herein are used for identification purposes only and may be trademarks of their respective companies.

Copyright © 2018-2022, Aerotech, Inc., All rights reserved.



## **Table of Contents**

Automation1 iXC4e and XC4e PWM High-Performance Digital Drives	1
Table of Contents	3
List of Figures	5
List of Tables	
EU Declaration of Conformity	
Agency Approvals	1 <i>′</i>
Safety Procedures and Warnings	13
Handling and Storage	
Installation Overview	
Chapter 1: iXC4e/XC4e Overview	19
1.1. Electrical Specifications	25
1.1.1. System Power Requirements	
1.2. Mechanical Specifications	
1.2.1. Mounting and Cooling	24
1.2.2. Dimensions	
1.3. Environmental Specifications	27
1.4. Drive and Software Compatibility	27
Chanter 2: Installation and Configuration	20
Chapter 2: Installation and Configuration 2.1. Input Power Connections	∠ະ
2.1.1. Control Supply Connector	
2.1.2. Motor Supply Connector	کا
2.1.3. Transformer Options	ا ک
2.1.4. Minimizing Noise for EMC/CE Compliance	۶۵ د
2.2. Motor Power Output Connector	5
2.2.1. Brushless Motor Connections	
2.2.1.1. Brushless Motor Powered Motor and Feedback Phasing	
2.2.1.2. Brushless Motor Unpowered Motor and Feedback Phasing	42
2.2.2. DC Brush Motor Connections	
2.2.2.1. DC Brush Motor Phasing	
2.2.3. Stepper Motor Connections	
2.2.3.1. Stepper Motor Phasing	
2.3. Feedback Connector	
2.3.1. Primary Encoder Inputs	
2.3.1.1. Square Wave Encoder (Primary)	
2.3.1.2. Absolute Encoder (Primary)	4
2.3.1.3. Sine Wave Encoder (Primary) [-MX2/-MX3 Option]	49
2.3.1.4. Encoder Phasing	5
2.3.2. Hall-Effect Inputs	
2.3.3. Thermistor Input	5:
2.3.4. Encoder Fault Input	54
2.3.5. End of Travel and Home Limit Inputs	
2.3.5.1. End of Travel and Home Limit Phasing	5
2.3.6. Brake Outputs	5
2.4. Safe Torque Off Input (STO)	
2.4.1. STO Standards	
2.4.2. STO Functional Description	
2.4.3. STO Startup Validation Testing	
2.4.4. STO Diagnostics	
2.5. Auxiliary I/O Connector	
2.5.1. Auxiliary Encoder Inputs	
2.5.1.1. Square Wave Encoder (Auxiliary)	
2.5.1.2. Absolute Encoder (Auxiliary)	
2.5.1.3. Sine Wave Encoder (Auxiliary) [-MX3 Option]	
2.5.2. Position Synchronized Output (PSO)	
2.5.3. Digital Outputs	
2.5.4. Digital Inputs	
2.5.5. High-Speed Inputs	/8

2.5.6. Analog Output 0	79
2.5.7. Analog Input 0 (Differential)	80
2.6. Brake Power Supply Connector	
2.7. HyperWire Interface	
2.8. External Shunt Option [-SX1]	
2.9. Sync Port	85
2.10. System Interconnection	
2.11. PC Configuration and Operation Information	89
Chapter 3: -EB1 I/O Option Board	91
3.1. Digital Outputs [-EB1]	
3.2. Digital Inputs [-EB1]	96
3.3. Analog Outputs [-EB1]	
3.4. Analog Inputs [-EB1]	100
3.5. Position Synchronized Output Interface [-EB1]	101
Chapter 4: Cables and Accessories	103
4.1. Joystick Interface	
4.2. Handwheel Interface	
Chapter 5: Maintenance	
5.1. Preventative Maintenance	
5.2. Fuse Specifications	109
Appendix A: Warranty and Field Service	111
••	
Appendix B: Revision History	113
Indox	115

## **List of Figures**

Figure 1-1:	iXC4e Digital Drive-Based Controller	19
Figure 1-2:	XC4e Digital Drive	
Figure 1-3:	Functional Diagram	22
Figure 1-4:	Dimensions	25
Figure 1-5:	Dimensions [-EB1]	26
Figure 2-1:	Control Supply Connections	29
Figure 2-2:	Motor Supply Connections	30
Figure 2-3:	TV0.3-28-56-ST Transformer Control and Motor Power Wiring (40 VDC Bus)	32
Figure 2-4:	TV0.3-28-56-ST Transformer Control and Motor Power Wiring (80 VDC Bus)	
Figure 2-5:	TV0.3-28-56-ST Transformer Control and Motor Power Wiring (160 VDC Bus)	34
Figure 2-6:	TV0.3-28 Transformer Control and Motor Power Wiring (40 VDC Bus)	35
Figure 2-7:	TV0.3-56 Transformer Control and Motor Power Wiring (80 VDC Bus)	36
Figure 2-8:	TM3/TM5 Transformer Control and Motor Power Wiring	
Figure 2-9:	Brushless Motor Configuration	40
Figure 2-10:	Positive Motor Direction	41
Figure 2-11:	Encoder and Hall Signal Diagnostics	41
Figure 2-12:	Brushless Motor Phasing Oscilloscope Example	
Figure 2-13:	Brushless Motor Phasing Goal	
Figure 2-14:	DC Brush Motor Configuration	
Figure 2-15:	Positive Motor Direction	
Figure 2-16:	Stepper Motor Configuration	
Figure 2-17:	Positive Motor Direction	
Figure 2-18:	Square Wave Encoder Schematic (Feedback Connector)	
Figure 2-19:	Absolute Encoder Schematic (Feedback Connector)	
Figure 2-20:	Sine Wave Encoder Phasing Reference Diagram	
Figure 2-21:	Sine Wave Encoder Schematic (Feedback Connector)	
Figure 2-22:	Encoder Phasing Reference Diagram (Standard)	
Figure 2-23:	Position Feedback in the Diagnostic Display	
Figure 2-24:	Hall-Effect Inputs Schematic (Feedback Connector)	
Figure 2-25:	Thermistor Input Schematic (Feedback Connector)	
Figure 2-26:	Encoder Fault Input Schematic (Feedback Connector)	
Figure 2-27:	End of Travel and Home Limit Input Connections	
Figure 2-28:	End of Travel and Home Limit Input Schematic (Feedback Connector)	
Figure 2-29:	End of Travel and Home Limit Input Diagnostic Display	
Figure 2-30:	Brake Connected to the 25-Pin Feedback Connector (Typical)	
Figure 2-31:	Typical STO Configuration	
Figure 2-32:	STO Timing	
Figure 2-33:	Square Wave Encoder Interface (Aux I/O Connector)	
Figure 2-34:	Absolute Encoder Schematic (Auxiliary I/O Connector)	
Figure 2-35:	Sine Wave Encoder Phasing Reference Diagram	
Figure 2-36:	Sine Wave Encoder Schematic (Auxiliary I/O Connector)	
Figure 2-37:	PSO Interface	
Figure 2-38:	Digital Output Schematic (Aux I/O Connector)	
Figure 2-39:	Digital Outputs Connected in Current Sourcing Mode	
Figure 2-40:	Digital Outputs Connected in Current Sinking Mode	
Figure 2-41:	Digital Inputs Schematic (Aux I/O Connector)	
Figure 2-42:	Digital Inputs Connected to Current Sourcing Devices	
Figure 2-43:	Digital Inputs Connected to Current Sinking Devices	
	O	

Figure 2-44:	High-Speed Inputs	78
Figure 2-45:		
Figure 2-46:		
Figure 2-47:	Drive-Based System Wiring Drawing (Best Practice)	86
Figure 2-48:	PC-Based System Wiring Drawing (Best Practice)	86
Figure 2-49:	Drive-Based Controller System Interconnection (Best Practice)	87
Figure 2-50:	PC-Based Controller System Interconnection (Best Practice)	88
Figure 3-1:	-EB1 I/O Option Board Connectors (iXC4e shown)	91
Figure 3-2:	Digital Outputs Schematic [-EB1]	94
Figure 3-3:	Digital Outputs Connected in Current Sourcing Mode [-EB1]	95
Figure 3-4:	Digital Outputs Connected in Current Sinking Mode [-EB1]	95
Figure 3-5:	Digital Inputs Schematic [-EB1]	97
Figure 3-6:	Digital Inputs Connected to Current Sourcing (PNP) Devices [-EB1]	98
Figure 3-7:	Digital Inputs Connected to Current Sinking (NPN) Devices [-EB1]	98
Figure 3-8:	Analog Output Typical Connection [-EB1]	99
Figure 3-9:	Analog Input Typical Connection [-EB1]	100
Figure 3-10:	PSO Output Sources Current	102
Figure 3-11:	PSO Output Sinks Current	102
Figure 3-12:	PSO TTL Outputs Schematic	102
Figure 4-1:	Two Axis Joystick Interface (to the Aux I/O of two drives)	104
Figure 4-2:	Two Axis Joystick Interface (to the I/O board)	105
Figure 4-3:	Handwheel Interconnection to Aux I/O Connector	106
Figure 4-4:	Handwheel Interconnection to the Aux I/O through a BBA32 Module	106

## **List of Tables**

Table 1-1:	Features and Options	21
Table 1-2:	Electrical Specifications	
Table 1-3:	Mounting Specifications	
Table 1-4:	Environmental Specifications	27
Table 1-5:	Drive and Software Compatibility	27
Table 2-1:	Control Supply Wiring Specifications	29
Table 2-2:	Mating Connector Part Numbers for the Control Supply Connector	
Table 2-3:	Motor Supply Connector Wiring Specifications	30
Table 2-4:	Mating Connector Part Numbers for the Motor Supply Connector	30
Table 2-5:	Nominal Motor Operating Voltages / Required AC Voltages	31
Table 2-6:	Transformer Options	31
Table 2-7:	Motor Power Output Connector Pinout	39
Table 2-8:	Mating Connector Part Numbers for the Motor Power Output Connector	
Table 2-9:	Wire Colors for Aerotech-Supplied Brushless Motor Cables	40
Table 2-10:	Hall Signal Diagnostics	
Table 2-11:	Wire Colors for Aerotech-Supplied DC Brush Motor Cables	43
Table 2-12:	Wire Colors for Aerotech-Supplied Stepper Motor Cables	
Table 2-13:	Feedback Connector Pinout	45
Table 2-14:	Mating Connector Part Numbers for the Feedback Connector	45
Table 2-15:	Multiplier Options	46
Table 2-16:	Primary Encoder Input Pins on the Feedback Connector	
Table 2-17:	Square Wave Encoder Specifications	
Table 2-18:	Sine Wave Encoder Specifications	
Table 2-19:	Hall-Effect Feedback Pins on the Feedback Connector	
Table 2-20:	Thermistor Input Pin on the Feedback Connector	53
Table 2-21:	Encoder Fault Input Pin on the Feedback Connector	
Table 2-22:	End of Travel and Home Limit Pins on the Feedback Connector	
Table 2-23:	Brake Output Pins on the Feedback Connector	58
Table 2-24:	Brake Control Specifications	
Table 2-25:	STO Connector Pinout	59
Table 2-26:	Mating Connector Part Numbers for the STO Connector	59
Table 2-27:	STO Electrical Specifications	
Table 2-28:	STO Standards	
Table 2-29:	STO Standards Data	61
Table 2-30:	STO Signal Delay	63
Table 2-31:	Motor Function Relative to STO Input State	
Table 2-32:	STO Timing	64
Table 2-33:	Auxiliary I/O Connector Pinout	
Table 2-34:	Mating Connector Part Numbers for the Auxiliary I/O Connector	65
Table 2-35:	Auxiliary Encoder Pins on the Auxiliary I/O Connector	
Table 2-36:	Square Wave Encoder Specifications	
Table 2-37:	Sine Wave Encoder Specifications	
Table 2-38:	PSO Specifications	
Table 2-39:	PSO Pins on the Auxiliary I/O Connector	
Table 2-40:	Digital Output Specifications	
Table 2-41:	Digital Output Pins on the Auxiliary I/O Connector	
Table 2-42:	Digital Input Specifications	
Table 2-43:	Digital Input Pins on the Auxiliary I/O Connector	

Table 2-44:	High-Speed input Specifications	/8
Table 2-45:	High-Speed Input Pins on the Auxiliary I/O Connector	78
Table 2-46:	Analog Output Specifications	79
Table 2-47:	Analog Output Pins on the Auxiliary I/O Connector	79
Table 2-48:	Analog Input Specifications	80
Table 2-49:	Analog Input Pins on the Auxiliary I/O Connector	80
Table 2-50:	Brake Power Supply Connector Pinout	
Table 2-51:	Mating Connector Part Numbers for the Brake Power Supply Connector	81
Table 2-52:	HyperWire Card Part Number	82
Table 2-53:	HyperWire Cable Part Numbers	82
Table 2-54:	-SX1 Component Information	83
Table 2-55:	Maximum Additional Storage Energy for a Standard iXC4e/XC4e	84
Table 2-56:	Sync-Related Functions	85
Table 2-57:	Sync Port Cables	85
Table 3-1:	Digital Output Specifications [-EB1]	92
Table 3-2:	Digital Output 1 Connector Pinout [-EB1]	93
Table 3-3:	Mating Connector Part Numbers for the Digital Output 1 Connector [-EB1]	93
Table 3-4:	Digital Output 2 Connector Pinout [-EB1]	
Table 3-5:	Mating Connector Part Numbers for the Digital Output 2 Connector [-EB1]	93
Table 3-6:	Digital Input Specifications [-EB1]	96
Table 3-7:	Digital Input 1 Connector Pinout [-EB1]	
Table 3-8:	Mating Connector Part Numbers for the Digital Input 1 Connector [-EB1]	96
Table 3-9:	Digital Input 2 Connector Pinout [-EB1]	
Table 3-10:	Mating Connector Part Numbers for the Digital Input 2 Connector [-EB1]	97
Table 3-11:	Analog Output Specifications [-EB1]	99
Table 3-12:	Analog Output Connector Pinout [-EB1]	
Table 3-13:	Mating Connector Part Numbers for the Analog Output Connector [-EB1]	99
Table 3-14:	Differential Analog Input Specifications [-EB1]	100
Table 3-15:	Analog Input Connector Pinout [-EB1]	
Table 3-16:	Mating Connector Part Numbers for the Analog Input Connector [-EB1]	100
Table 3-17:	PSO Specifications [-EB1]	101
Table 3-18:	PSO Interface Connector Pinout [-EB1]	
Table 3-19:	Mating Connector Part Numbers for the PSO Interface Connector [-EB1]	101
Table 4-1:	Standard Interconnection Cables	103
Table 5-1:	LED Description	107
Table 5-2:	Troubleshooting	107
Table 5-3:	Preventative Maintenance	
Table 5-4:	Control Board Fuse Specifications	109

## **EU Declaration of Conformity**

ManufacturerAerotech, Inc.Address101 Zeta Drive

Pittsburgh, PA 15238-2811

USA

**Product** iXC4e/XC4e

**Model/Types** All

This is to certify that the aforementioned product is in accordance with the applicable requirements of the following directive(s):

2014/30/EU Electromagnetic Compatibility (EMC)

2014/35/EU Low Voltage Directive 2006/42/EC Machinery Directive 2011/65/EU RoHS 2 Directive

EU 2015/863 Amendment RoHS 3 Directive

and has been designed to be in conformity with the applicable requirements of the following standard(s) when installed and used in accordance with the manufacturer's supplied installation instructions.

EN 61010-1:2010/A1:2016 Safety Requirements for Electrical Equipment EN 61800-3:2004/A1:2011 EMC Requirements for Power Drives

IEC 61800-5-1:2016 Electrical Safety for Power Drive Systems
IEC 61800-5-2:2016 Functional Safety for Power Drive Systems

EN 55011:2000/A2:2003 Conducted and Radiated Emissions EN 55022:1998 Conducted and Radiated Emissions

Authorized Representative

/ Simon Smith, European Director

Aerotech Ltd

The Old Brick Kiln, Ramsdell, Tadley

Hampshire RG26 5PR

UK

Engineer Verifying

Compliance

Clar Robreson / Alex Weibel

Aerotech, Inc. 101 Zeta Drive

Pittsburgh, PA 15238-2811

USA

**Date** 1/13/2022

CE

This page intentionally left blank.

### **Agency Approvals**

Aerotech tested its XC4e drives and found that they obey the standards that follow:



**IMPORTANT**: iXC4e certification is pending.

**Approval:** CUS NRTL

Approving Agency: TUV SUD America Inc.
Certificate #: U8V 068995 0028 Rev. 02

**Standards:** CAN/CSA-C22.2 No. 61010-1:2012,

EN 61010-1:2010/A1:2016,

UL 61010-1:2012

**Approval:** Safety Components (STO)

**Approving Agency:** TUV SUD

**Certificate #:** Z10 068995 0030 Rev. 00

**Standards:** EN ISO 13849-1:2015 (up to PL e),

IEC 61508-1:2010 (up to SIL3), IEC 61508-2:2010 (up to SIL3),

IEC 61800-5-2:2016,

IEC 62061:2005 (up to SILCL3),

IEC 62061:2005/AMD1:2012 (up to SILCL3), IEC 62061:2005/AMD2:2015 (up to SILCL3)

Visit https://www.tuev-sued.de/product-testing/certificates to view Aerotech's TÜV SÜD certificates. Type the certificate number listed above in the search bar or type "Aerotech" for a list of all Aerotech certificates.

This page intentionally left blank.

## **Safety Procedures and Warnings**

**IMPORTANT**: This manual tells you how to carefully and correctly use and operate the drive.

• Read all parts of this manual before you install or operate the drive or before you do maintenance to your system.



- To prevent injury to you and damage to the equipment, obey the precautions in this manual.
- All specifications and illustrations are for reference only and were complete and accurate as of the release of this manual. To find the newest information about this product, refer to www.aerotech.com.

If you do not understand the information in this manual, contact Aerotech Global Technical Support.



**IMPORTANT**: This product has been designed for light industrial manufacturing or laboratory environments. If the product is used in a manner not specified by the manufacturer:

- The protection provided by the equipment could be impaired.
- The life expectancy of the product could be decreased.

Safety notes and symbols are placed throughout this manual to warn you of the potential risks at the moment of the safety note or if you fail to obey the safety note.



The voltage can cause shock, burn, or death.



You are at risk of physical injury. You could damage the drive.



A surface can be hot enough to burn you.



Your actions, the temperature of the system, or the condition of the atmosphere that surround the system could start a fire.



Components are sensitive to electrostatic discharge.



Unsecured cables could cause you to:

- trip and fall
- drag the product off of its mounting location
- damage the cable connections.




A blue circle symbol is an action or tip that you should obey. Some examples include:

- General tip
- Read the manual/section
- Wear protective safety equipment (eye protection, ear protection, gloves)
- If applicable, do not lift unassisted



**DANGER**: To decrease the risk of electrical shock, injury, death, and damage to the equipment, obey the precautions that follow.

- 1. Before you do maintenance to the equipment, disconnect the electrical power.
- 2. Restrict access to the drive when it is connected to a power source.
- 3. Do not connect or disconnect electrical components, wires, and cables while this product is connected to a power source.

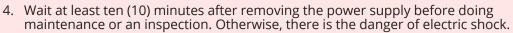

- 5. Supply each operator with the necessary protection from live electrical circuits.
- 6. Make sure that all components are grounded correctly and that they obey the local electrical safety requirements.
- 7. Install the necessary precautions to supply safety and protection to the operator.



**DANGER**: System travel can cause crush, shear, or pinch injuries. Restrict access to all motor and stage parts while your system is connected to a power source.

**WARNING**: To prevent damage to the equipment and decrease the risk of electrical shock and injury, obey the precautions that follow.



- 1. Make sure that all system cables are correctly attached and positioned.
- 2. Do not use the cables or the connectors to lift or move this product.
- 3. Use this product only in environments and operating conditions that are approved in this manual.
- 4. Only trained operators should operate this equipment.

## **Handling and Storage**

#### **Unpacking the Chassis**



**IMPORTANT**: All electronic equipment and instrumentation is wrapped in antistatic material and packaged with desiccant. Ensure that the antistatic material is not damaged during unpacking.

Inspect the shipping container for any evidence of shipping damage. If any damage exists, notify the shipping carrier immediately.

Remove the packing list from the shipping container. Make sure that all the items specified on the packing list are contained within the package.

The documentation for the drive is on the included installation device. The documents include manuals, interconnection drawings, and other documentation pertaining to the system. Save this information for future reference. Additional information about the system is provided on the Serial and Power labels that are placed on the chassis.

The system serial number label contains important information such as the:

- Customer order number (please provide this number when requesting product support)
- · Drawing number
- System part number

### Handling

**IMPORTANT**: It is the responsibility of the customer to safely and carefully lift and move the drive.



- Be careful when you move or transport the drive.
- Refer to Section 1.2. Mechanical Specifications for dimensions and weight specifications.
- Retain the shipping materials for future use.
- Transport or store the drive in its protective packaging.



#### **WARNING: Electrostatic Discharge (ESD) Sensitive Components!**

You could damage the power supply or drives if you fail to observe the correct ESD practices.

Wear an ESD wrist strap when you handle, install, or do service to the system assembly.

#### **Storage**

Store the drive in the original shipping container. If the original packaging included ESD protective packaging, make sure to store the drive in it. The storage location must be:

- dry
- free of dust
- · free of vibrations
- flat


Refer to Section 1.3. Environmental Specifications

This page intentionally left blank.

### **Installation Overview**

The images that follow show the order in which to make connections and settings that are typical to the iXC4e/XC4e. If a custom interconnect drawing was supplied with your system, that drawing is on your Storage Device and shows as a line item on your Sales Order in the Integration section.

Figure 1: Installation Connection Overview for the iXC4e

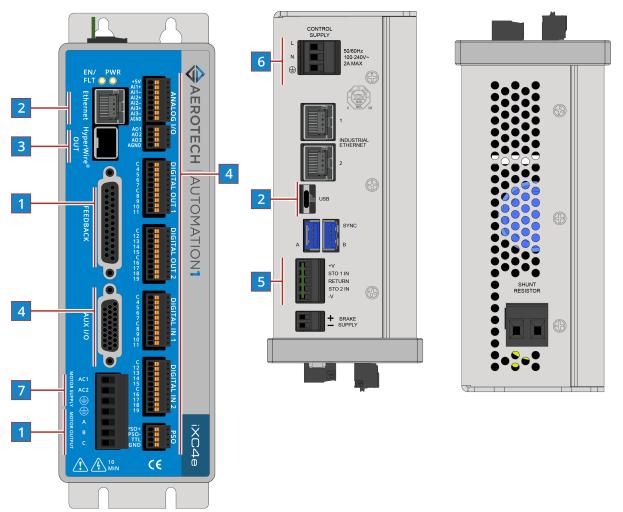

1	Connect the motor to the amplifier Motor Output connector.	Section 2.2.
	Connect the motor to the amplifier Feedback connector.	Section 2.3.
2	Connect the PC to the USB or Ethernet port.	N/A
3	Connect the next drive in the system to the HyperWire Out port.	Section 2.7.
4	Connect additional I/O as required by your application	Section 2.5./
_	(if you purchased the I/O option).	Chapter 3
5	Connect the Safe Torque Off (STO).	Section 2.4.
6	Connect the power supply to the Control Supply connector.	Section 2.1.1.
7	Connect the motor power to the Motor Supply connector.	Section 2.1.2.

ARROTECH AUTOMATION

STOTIN

RETURN

R

Figure 2: Installation Connection Overview for the XC4e

4	Connect the motor to the amplifier Motor Output connector.	Section 2.2.
	Connect the motor to the amplifier Feedback connector.	Section 2.3.
2	Connect a PC or drive-based controller HyperWire port to the HyperWire In	Section 2.7.
	port.	Section 2.7.
2	Connect additional I/O as required by your application	Section 2.5./
3	(if you purchased the I/O option).	Chapter 3
4	Connect the Safe Torque Off (STO).	Section 2.4.
5	Connect the power supply to the Control Supply connector.	Section 2.1.1.
6	Connect the motor power to the Motor Supply connector.	Section 2.1.2.


## Chapter 1: iXC4e/XC4e Overview

The iXC4e is a high-performance digital drive-based controller. It runs the Automation1-iSMC controller to generate commands for itself as well as for additional drives on the chain.

The XC4e is a high performance digital drive. The XC4e is based on the HyperWire communication protocol and receives commands from a PC or drive-based controller.

Both drives provide deterministic behavior, auto-identification, and are fully software configurable. A double precision floating point DSP controls the digital PID and current loops. Both drives offer standard Safe Torque Off (STO) inputs and optional Position Synchronized Output (PSO) outputs. And both drives are offered with optional encoder interpolation features (-MX2/-MX3), an auxiliary encoder input for dual loop control, dedicated analog and digital I/O (expandable with the -EB1 option), and separate power connections for motor and control supply voltages.

Figure 1-1: iXC4e Digital Drive-Based Controller

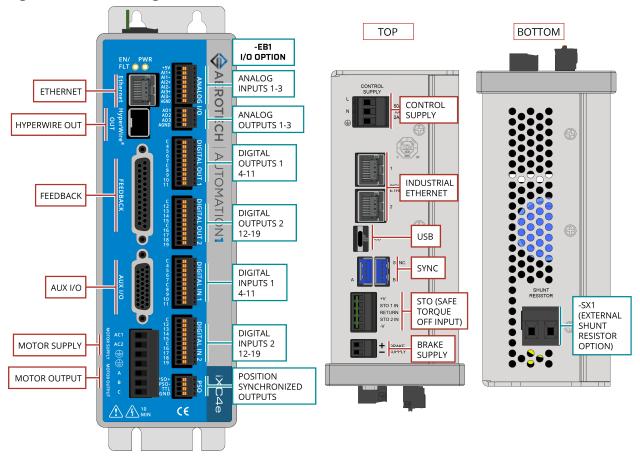

воттом TOP -EB1 I/O OPTION ANALOG INPUTS 1-3 CONTROL HYPERWIRE ANALOG SUPPLY **OUTPUTS 1-3** DIGITAL OUTPUTS 1 4-11 FEEDBACK FEEDBACK DIGITAL OUTPUTS 2 12-19 SYNC DIGITAL AUX I/O INPUTS 1 AUX I/O 4-11 STO (SAFE -SX1 TORQUE (EXTERNAL OFF INPUT) SHUNT RESISTOR OPTION) DIGITAL INPUTS 2 BRAKE AC2 MOTOR SUPPLY 12-19 **SUPPLY** POSITION MOTOR OUTPUT SYNCHRONIZED OUTPUTS 10 MIN Œ

Figure 1-2: XC4e Digital Drive

#### **Table 1-1: Features and Options**

#### **Standard Features**

- 100-240 VAC control supply inputs (Section 2.1.1.) 0-240 VAC motor supply inputs (producing 340 VDC) (Section 2.1.2.)
- Line driver square wave quadrature encoder input for position and velocity feedback (Section 2.3.1.)
- Absolute Encoder support on the Feedback Connector (Section 2.3.1.2.)
- One fail-safe brake output (Section 2.3.6.)
- Two STO sense inputs (Section 2.4.)
- Line driver square wave auxiliary quadrature encoder input or output for PSO (Section 2.5.1.)
- Absolute Encoder support on the Auxiliary I/O Connector (Section 2.5.1.2.)
- Four digital user outputs (Section 2.5.3.)
- Six digital user inputs


  - Four Digital Inputs (Section 2.5.4.)
     Two High-Speed Inputs (Section 2.5.5.)
- One 16-bit analog output (±10 V) (Section 2.5.6.)
- One 16-bit differential analog input (± 10 V) (Section 2.5.7.)
- One 10/100/1000 BASE-T Ethernet Port (iXC4e Only)
- One USB 2.0 Type C Port (iXC4e Only)

Options				
Peak Curren	t (Section 1.1.)			
-10	10 A Peak, 5 A Continuous Current			
-20	20 A Peak, 10 A Continuous Current			
-30	30 A Peak, 10 A Continuous Current			
<b>Expansion Bo</b>	oard (Chapter 3)			
-EB0	No expansion board			
-EB1	<ul> <li>I/O expansion board</li> <li>Three 16-bit analog outputs (±10 V)</li> <li>Three 16-bit differential analog inputs (±10 V)</li> <li>16 digital logic inputs (5 - 24 VDC); connect to current sourcing or sinking devices</li> <li>16 digital logic outputs (5 - 24 VDC); user defined as current sourcing or sinking</li> <li>Digital logic laser firing (PSO) output</li> </ul>			
Multiplier (So	ection 2.3.1.3.)			
-MX0	No encoder multiplier			
-MX2	Interpolation circuit allowing for analog sine wave input on the primary encoder channel with an interpolation factor of 65,536.			
-MX3	Interpolation circuit allowing for analog sine wave input on the primary encoder channel with an interpolation factor of 65,536 and an auxiliary encoder channel with an interpolation factor of 16,384.			
<b>PSO (Section</b>	2.5.2.)			
-PSO1	One-axis PSO firing (includes One-axis Part-Speed PSO)			
-PSO2	Two-axis PSO firing (includes Two-axis Part-Speed PSO)			
-PSO3	Three-axis PSO firing (includes Three-axis Part-Speed PSO)			
-PSO5	Two-axis Part-Speed PSO firing, which uses the PSO firing circuit based off of the commanded vector velocity of up to 2 axes (includes One-Axis PSO).			
-PSO6	Three-axis Part-Speed PSO firing, which uses the PSO firing circuit based off of the commanded vector velocity of 3 or more axes (includes One-Axis PSO).			
<b>External Shu</b>	nt (Section 2.8.)			
-SX0	No connector for the External Shunt			
-SX1	Connection provided for an external shunt resistor network			
Version				
-DEFAULT	Firmware Matches Software Line			
-LEGACY	Legacy Firmware Version X.XX.XXX			

The block diagram that follows shows a summary of the connector signals.

Figure 1-3: Functional Diagram

**Functional Diagram** 

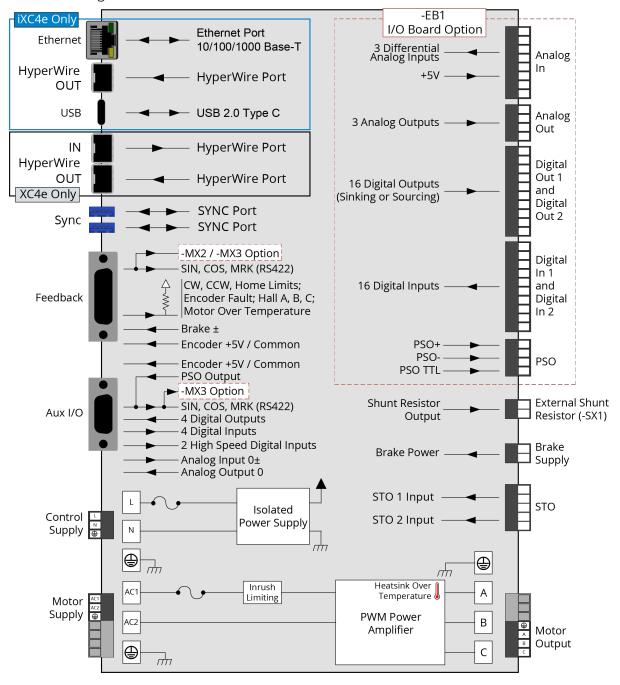

## 1.1. Electrical Specifications

**Electrical Specifications Table 1-2:** 

Description		-10 Option	-20 Option	-30 Option	
-	Input Voltage		0-240 VAC		
	Input Frequency	50-60 Hz			
Motor Cupply	Inrush Current		34 A <sub>pk</sub> @ 240 V		
Motor Supply	Max Continuous Input Current	5 A <sub>rms</sub>	10 A <sub>rms</sub>	10 A <sub>rms</sub>	
	Input Current	Refer to Section	1.1.1. System Powe	r Requirements	
	Input Voltage		100-240 VAC		
Control Supply	Input Frequency		50-60 Hz		
Control Supply	Inrush Current		68 A <sub>pk</sub> @ 240 V		
	Input Power		10 W		
Output Voltage (1)	•		340 VDC		
Peak Output Current (1 second) (3)		10 A	20 A	30 A	
Continuous Output Current (3)		5 A	10 A	10 A	
Power Amplifier Bandwidth		2500 Hz maximum (software selectable)			
Power Amplifier Efficiency		85% - 95% <sup>(2)</sup>			
PWM Switching Fr	equency	20 kHz			
Minimum Load In	ductance	0.1 mH @ 160 VDC (1 mH @ 320 VDC)			
User Power Suppl	y Output	5 VDC (@ 500 mA)			
Modes of Operation		Brushless; Brush; Stepper			
Protective Features		Output short circuit; Peak over current; DC bus over voltage; RMS over current; Over temperature; Control power supply under voltage; Power stage bias supply under voltage			
Isolation		Optical and transformer isolation between control and power stages.			
(1) AC input voltage ar	•				
(2) Dependent on tota	I output power: efficiency	increases with increasing	output power.		

### 1.1.1. System Power Requirements

The following equations can be used to determine total system power requirements. The actual power required from the mains supply will be the combination of actual motor power (work), motor resistance losses, and efficiency losses in the power electronics or power transformer.

Use an EfficiencyFactor of approximately 90% in the following equations.

#### **Brushless Motor**

**Output Power** 

Power Output [W] = Torque [N·m] \* Angular velocity[rad/sec] Rotary Motors

Power Output [W] = Force [N] \* Linear velocity[m/sec] Linear Motors

Rotary or Linear Motors Power Output [W] = Bemf [V] \* I(rms) \* 3

Power Loss =  $3 * I(rms)^2 * R(line-line)/2$ 

Power Input = (Power Output + Power Loss) / EfficiencyFactor

#### **DC Brush Motor**

Power Output [W] = Torque [N·m] \* Angular velocity[rad/sec]

Power Loss =  $I(rms)^2 * R$ 

Power Input = (Pout + Ploss) / EfficiencyFactor

<sup>(3)</sup> Current is measured as the peak amplitude in any motor phase

## 1.2. Mechanical Specifications

### 1.2.1. Mounting and Cooling

Install the drive in an IP54 compliant enclosure to comply with safety standards. Make sure that there is sufficient clearance surrounding the drive for free airflow and for the cables and connections.



**IMPORTANT**: The amount of airflow required to keep the drive temperature within a sufficient range is dependent on the operating conditions. You could be required to supply additional airflow to the drive.


**Table 1-3: Mounting Specifications** 

		iXC4e/XC4e	
Customer-Supplied Enclosure		IP54 Compliant	
Weight		~2.36 kg	
Mounting Hardware		M4 [#8] screws (four locations, not included)	
Mounting Orientation		Vertical (typical)	
Dimensions		Refer to Section 1.2.2. Dimensions	
Minimum Clearance	Airflow	~25 mm	
Will lift diff Clearance	Connectors	~100 mm	
Operating Temperature		Refer to Section 1.3. Environmental Specifications	

#### 1.2.2. Dimensions




**IMPORTANT**: iXC4e and XC4e dimensions are the same. iXC4e is shown.

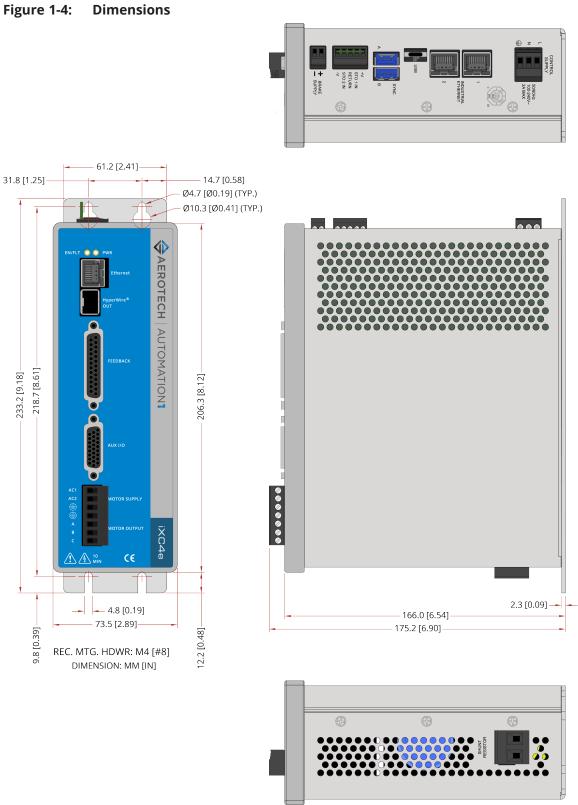



**IMPORTANT**: iXC4e-EB1 and XC4e-EB1 dimensions are the same. iXC4e-EB1 is shown.

Figure 1-5: Dimensions [-EB1]

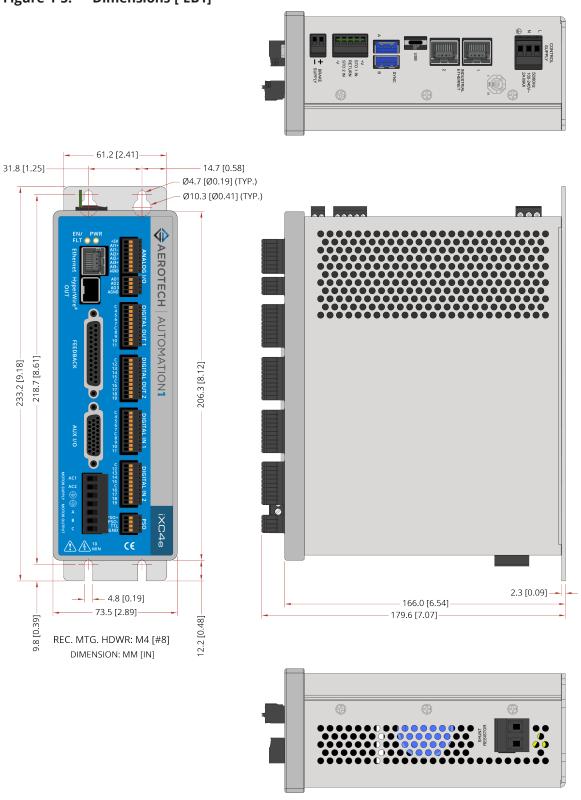

## 1.3. Environmental Specifications

The environmental specifications are listed below.

**Table 1-4: Environmental Specifications** 

Ambient	Operating: 0° to 40°C (32° to 104° F)
Temperature	Storage: -30° to 85°C (-22° to 185° F)
Humidity Non-condensing	The maximum relative humidity is 80% for temperatures that are less than 31°C and decreases linearly to 50% relative humidity at 40°C.
	0 m to 2,000 m (0 ft to 6,562 ft) above sea level.
Operating Altitude	If you must operate this product above 2,000 m or below sea level, contact Aerotech, Inc.
Pollution	Pollution Degree 2
Pollution	Typically only nonconductive pollution occurs.
Operation	Use only indoors

## 1.4. Drive and Software Compatibility

This table shows the available drives and which version of the software first supported each drive. In the **Last Software Version** column, drives that show a specific version number are not supported after that version.

Table 1-5: Drive and Software Compatibility

Drive Type	Software	First Software Version	Last Software Version
iXC4e	Automation1	2.0.0	Current
XC4e	Automation1	1.2.0	Current
	A3200	6.04	Current



This page intentionally left blank.

## **Chapter 2: Installation and Configuration**

The sections in this chapter include details on how to set up the electrical and safety components of your system. Obey all safety warnings, including those in Safety Procedures and Warnings.

### 2.1. Input Power Connections

The drive has two AC input power connectors. One connector is for control power and the other connector is for motor power. For a full list of electrical specifications, refer to Section 1.1. Refer to Section 2.10. for a System Interconnection Drawing.

### 2.1.1. Control Supply Connector


The Control Supply input supplies power to the communications and logic circuitry of the drive . The  $\bf L$  input is connected to an internal fuse. Refer to Table 5-4 for the internal fuse value and part number. The  $\bf N$  input is not connected to an internal fuse. An external fuse will be required if  $\bf N$  is not connected to Neutral.

The Control Supply contains an internal filter but you could be required to add an external filter for CE compliance. Install the external filter as close as possible to the drive. Use a Schaffner FN2080 filter, an Aerotech UFM-ST noise filter module, or equivalent device.



**IMPORTANT**: Refer to local electrical safety requirements to correctly size external system wires.

Figure 2-1: Control Supply Connections

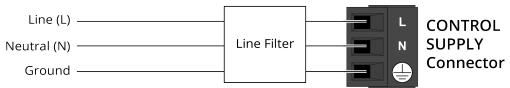

**Table 2-1: Control Supply Wiring Specifications** 

Pin	Description	Recommended Wire Size
L	Line (L): 100-240 VAC Control Power Input	0.8 mm <sup>2</sup> (#18 AWG)
N	Neutral (N) or 100-240 VAC Control Power Input with external fuse	0.8 mm <sup>2</sup> (#18 AWG)
	Protective Ground	0.8 mm <sup>2</sup> (#18 AWG)

Table 2-2: Mating Connector Part Numbers for the Control Supply Connector

Туре	Aerotech	Third Party	Screw	Wire Size:
	P/N	P/N	Torque: N·m	mm² [AWG]
3-Pin Terminal Block	ECK02388	Phoenix 1756272	0.22 - 0.25	2.5 - 0.05 [14-30]

#### 2.1.2. Motor Supply Connector

Motor power is applied to the **AC1** and **AC2** terminals of the Motor Supply connector.

Peak Current Option -10: The AC1 input is internally connected to a 5 A fuse.

Peak Current Option -20 and -30: The **AC1** input is internally connected to a 10 A fuse.

Refer to Table 5-4 for the internal fuse part numbers.

The **AC2** input is not internally fused. An external fuse is required if **AC2** is not connected to Neutral.




**IMPORTANT**: Before you operate the iXC4e/XC4e, install a ground connection for your safety and to prevent damage to the equipment.

For CE compliance, Aerotech recommends that you use an AC line filter. Connect the filter as close as possible to the drive. For more information about the AC line filter, refer to Section 2.1.4.



**IMPORTANT**: Refer to local electrical safety requirements to correctly size external system wires.

**Figure 2-2: Motor Supply Connections** 

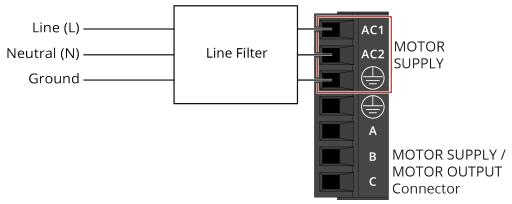

**Table 2-3: Motor Supply Connector Wiring Specifications** 

Pin	Description	Recommended Wire Size
AC1	0-240 VAC Motor Power Input	1.3 mm <sup>2</sup> (#16 AWG)
AC2	Neutral (N) or 240 VAC Motor Power Input with external fuse	1.3 mm <sup>2</sup> (#16 AWG)
	Protective Ground	1.3 mm <sup>2</sup> (#16 AWG)

Table 2-4: Mating Connector Part Numbers for the Motor Supply Connector

Туре	Aerotech	Third Part	Screw	Wire Size:
	P/N	P/N	Torque: Nm	mm²[AWG]
7-Pin Terminal Block	ECK02387	Phoenix 1756353	0.5 - 0.6	3.3 - 0.0516 [12-30]

### 2.1.3. Transformer Options

You can connect an external isolation transformer to the Motor Supply AC Input to reduce the operating voltage of the motor. Using a transformer can also reduce electrical noise.

Table 2-5: Nominal Motor Operating Voltages / Required AC Voltages

AC Voltage	DC Voltage
28	40
56	80
115	160
230	320

### **Table 2-6: Transformer Options**

Transformer	Description
TV0.3-28-56-ST	Generate 28 or 56 VAC from 115 VAC or 230 VAC input source voltage. When rectified by the drive, it produces a 40 or 80 VDC power bus.
TM3	Power up to 4 drives, providing 300 watts of power
TM5	Power up to 4 drives providing 500 watts of power
TV0.3-28	Generate 28 VAC from 115 VAC or 230 VAC input source voltage. When rectified by the drive, it produces a 40 VDC power bus.
TV0.3-56	Generate 56 VAC from 115 VAC or 230 VAC input source voltage. When rectified by the drive, it produces an 80 VDC power bus.
TV1.5, TV2.5, or TV5	1.5 kVA, 2.5 kVA, or 5 kVA isolation transformer; 115/230 VAC input; 28, 43, 56, 70, 115 VAC output

Integral Fuse 3.15A Slow-Blow F1-IN Thermal **MOTOR** ◬ F1-OUT AC LO - 50/60 HZ INPUT Switch SUPPLY 115V Ø 100V 0 ◬ <u> 4</u> ΟV 115V Ø 100V 0 CONTROL SUPPLY Frame Ground <u></u> TV0.3-28-56-ST Wiring 115 VAC INPUT Secondary = 28 VAC (40 VDC Bus) Integral Fuse 3.15A Slow-Blow F1-IN Internal Thermal Switch AC HI 230 VAC MOTOR ◬ 50/60 HZ INPUT SUPPLY 115V 0 100V 0 ◬ <u> 4</u> οv 0 115V 0 100V 0 CONTROL SUPPLY Frame Ground ◬ TV0.3-28-56-ST Wiring 230 VAC INPUT Secondary = 28 VAC (40 VDC Bus) FOLLOW ALL APPLICABLE WIRING AND SAFETY CODES. CONNECT ALL WIRING BEFORE /

HAZARDOUS VOLTAGES PRESENT POWERING TRANSFORMER 1. For 100 VAC primary input, parallel the 100 VAC taps and leave the 115 VAC taps unterminated. 2. For 200 VAC primary input, series the 100 VAC taps and leave the 115 VAC taps unterminated. 3. When using an isolation transformer, earth grounding of the AC2 input tap reduces electrical and audible noise emissions and provides increased servo performance. 4. Transformer Primary Wiring: 0.8 mm<sup>2</sup> (#18 AWG) 300 V wire. 5. Transformer Secondary Wiring: 1.3 mm<sup>2</sup> (#16 AWG) 300 V wire. 6. AC line filters are for CE compliance. Filters may also be located on the primary side of the transformer.

Figure 2-3: TV0.3-28-56-ST Transformer Control and Motor Power Wiring (40 VDC Bus)

Drawing: 620B1346-8, Rev.

Integral Fuse 3.15A Slow-Blow F1-IN Internal Thermal MOTOR ◬ F1-OUT • 50/60 HZ INPUT AC LO **SUPPLY** 115V 0 SAFETY 100V AC2 0 ◬ <u> 4</u> 0V 0 115V Ø 100V 0 CONTROL SUPPLY Frame Ground ◬ TV0.3-28-56-ST Wiring Secondary = 28+28 = 56 VAC (80 VDC Bus) 115 VAC INPUT Integral Fuse 3.15A Slow-Blow AC HI Internal 230 VAC MOTOR ◬ 50/60 HZ Switch 0 SUPPLY INPUT 28V • 0 SAFETY 100V 0 ◬ 0٧ 4 0V 115V 0 100V Ø Ø CONTROL SUPPLY Frame Ground ◬ TV0.3-28-56-ST Wiring Secondary = 28+28 = 56 VAC (80 VDC Bus) 230 VAC INPUT FOLLOW ALL APPLICABLE WIRING CONNECT ALL WIRING BEFORE HAZARDOUS VOLTAGES PRESENT AND SAFETY CODES. POWERING TRANSFORMER 1. For 100 VAC primary input, parallel the 100 VAC taps and leave the 115 VAC taps unterminated. 2. For 200 VAC primary input, series the 100 VAC taps and leave the 115 VAC taps unterminated. 3. When using an isolation transformer, earth grounding of the AC2 input tap reduces electrical and audible noise emissions and provides increased servo performance. 4. Transformer Primary Wiring: 0.8 mm<sup>2</sup> (#18 AWG) 300 V wire. 5. Transformer Secondary Wiring: 1.3 mm<sup>2</sup> (#16 AWG) 300 V wire. 6. AC line filters are for CE compliance. Filters may also be located on the primary side of Drawing: 620B1346-9, Rev. the transformer.

Figure 2-4: TV0.3-28-56-ST Transformer Control and Motor Power Wiring (80 VDC Bus)

Primary Fuse 4A Slow-Blow AC HI 115 VAC Thermal MOTOR Switch #18 WHT - 50/60 HZ INPUT SUPPLY splice 56V RED 115V BLK AC1 ◬ 100V ORN AC2 ◬ 0V GRY splice 115V BRN 56V YEI 100V GRN 0V BLU splice 0V BLK rh CONTROL Frame Ground SUPPLY TV0.3-28-56-ST Wiring 115 VAC INPUT Secondary = 115 VAC (160 VDC Bus) Primary Fuse 4A Slow-Blow #18 WHT AC HI Δ 230 VAC Thermal **MOTOR** #18 WHT splice 50/60 HZ INPUT Switch SUPPLY 56V RED 115V BLK AC1 <u> 8</u> 100V ORN AC2 ◬ 0V GRY splice splice 115V BRN 56V YEL 100V GRN OV BLU OV BLK rh CONTROL SUPPLY TV0.3-28-56-ST Wiring 230 VAC INPUT Secondary = 115 VAC (160 VDC Bus) FOLLOW ALL APPLICABLE WIRING CONNECT ALL WIRING BEFORE /

HAZARDOUS VOLTAGES PRESENT **POWERING TRANSFORMER** AND SAFETY CODES 1. For 100 VAC primary input, parallel the 100 VAC taps and leave the 115 VAC taps unterminated. 2. For 200 VAC primary input, series the 100 VAC taps and leave the 115 VAC taps unterminated. 3. When using an isolation transformer, earth grounding of the AC2 input tap reduces electrical and audible noise emissions and provides increased servo performance. 4. Additional or alternative fusing may be required for optimum protection 5. AC line filters are for CE compliance. Filters may also be located on the primary side of the transformer. 6. Transformer Primary Wiring: 0.8 mm<sup>2</sup> (#18 AWG) 300 V wire. 7. Transformer Secondary Wiring: 1.3 mm<sup>2</sup> (#16 AWG) 300 V wire. Drawing: 620B1346-3

Figure 2-5: TV0.3-28-56-ST Transformer Control and Motor Power Wiring (160 VDC Bus)

Primary Fuse 4A Slow-Blow AC HI Δ Thermal **MOTOR** - 50/60 HZ INPUT Switch #18 WHT AC LO SUPPLY splice 28V RED 115V BLK 100V ORN AC2 ◬ ◬ ⅓ 0V GRY 115V BRN 28V YEI 100V GRN 0V BLU splice 0V BLK CONTROL m SUPPLY Frame Ground <u> </u> TV0.3-28 Wiring 115 VAC INPUT Secondary = 28 VAC (40 VDC Bus) Primary Fuse 4A Slow-Blow 230 VAC MOTOR ◬ Thermal #18 WHT splice = 50/60 HZ INPUT ACTO SUPPLY 28V RED 115V BLK 100V ORN ◬ 0V GRY splice 115V BRN 28V YEI 100V GRN OV BLU OV BLK CONTROL ראי SUPPLY ◬ TV0.3-28 Wiring 230 VAC INPUT Secondary = 28 VAC (40 VDC Bus) FOLLOW ALL APPLICABLE WIRING CONNECT ALL WIRING BEFORE /

HAZARDOUS VOLTAGES PRESENT POWERING TRANSFORMER AND SAFETY CODES 1. For 100 VAC primary input, parallel the 100 VAC taps and leave the 115 VAC taps unterminated. 2. For 200 VAC primary input, series the 100 VAC taps and leave the 115 VAC taps unterminated. 3. When using an isolation transformer, earth grounding of the AC2 input tap reduces electrical and audible noise emissions and provides increased servo performance. 4. Additional or alternative fusing may be required for optimum protection 5. AC line filters are required for CE compliance. Filters may also be located on the primary side of the transformer. 6. Transformer Primary Wiring: 0.8 mm<sup>2</sup> (#18 AWG) 300 V wire. 7. Transformer Secondary Wiring: 1.3 mm<sup>2</sup> (#16 AWG) 300 V wire. Drawing: 620B1346-1

Figure 2-6: TV0.3-28 Transformer Control and Motor Power Wiring (40 VDC Bus)

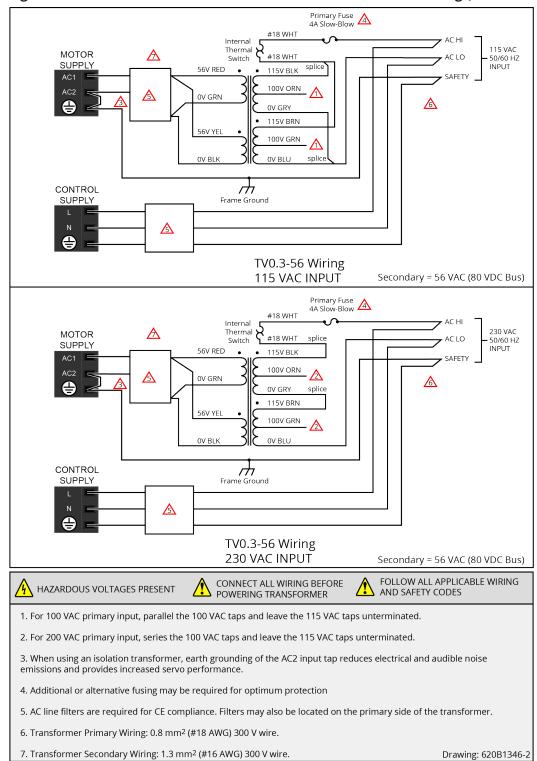


Figure 2-7: TV0.3-56 Transformer Control and Motor Power Wiring (80 VDC Bus)

TM3/TM5 TRANSFORMER MODULE MOTOR SUPPLY MOTOR SUPPLY CONTROL CONTROL SUPPLY AC2 3rd Drive 1st Drive MOTOR SUPPLY MOTOR SUPPLY CONTROL SUPPLY CONTROL SUPPLY 2nd Drive 4th Drive TM3 SHOWN FOLLOW ALL APPLICABLE WIRING AND SAFETY CODES. CONNECT ALL WIRING BEFORE POWERING TRANSFORMER /

//

HAZARDOUS VOLTAGES PRESENT 1. See the TM3 or TM5 manual for input voltage configuration 2. Wiring Specifications: 1.3  $\text{mm}^2$  (#16 AWG) 300 V wire.

Figure 2-8: TM3/TM5 Transformer Control and Motor Power Wiring

3. Control Supply output voltage (115 VAC in this example) is always the same as the AC Input Voltage to the unit.

## 2.1.4. Minimizing Noise for EMC/CE Compliance



**IMPORTANT**: The iXC4e/XC4e is a component designed to be integrated with other electronics. EMC testing must be conducted on the final product configuration.

To reduce electrical noise, observe the following motor feedback and input power wiring techniques.

- 1. Use shielded cable for motor and feedback connectors. Connect the shield to the backshell at each end of the cable.
- 2. Separate motor and power wiring from encoder and I/O wiring.
- 3. Mount drives, power supplies, and filter components on a conductive panel. Mount line filters close to the drive to keep the wire length between the drive and filter to a minimum. Use a line filter, such as Aerotech's UFM-ST, on the Motor Supply and Control Supply AC inputs.
- 4. Use the lowest motor voltage required by the application to reduce radiated emission.
- 5. Use an isolation transformer with grounded secondary to keep the effects of high frequency PWM amplifier currents to a minimum.
- 6. Use a separate wire for each ground connection to the drive. Use the shortest possible wire length.

The following additional changes could be required for EMC compliance and are recommended during initial EMC system evaluation.

- 1. Add a clamp-on ferrite to the feedback cable close to the drive. [Aerotech PN ECZ02348, Fair-rite PN 0446167281]
- Add a clamp-on ferrite to the Motor Supply and Control Supply wires, including the ground wire, close to the drive. [Aerotech PN ECZ02347, Fair-rite PN 0446164281]
- 3. Add a ferrite core to the UFM-ST AC input wires. Wrap the AC wires and ground wire around the core one time.

  [Ferrite core: Aerotech PN ECZ02350, Fair-rite PN 2646102002]
- 4. Add a ferrite core to the motor phase and ground wires close to the drive. Wrap all four wires around the ferrite core once. Remove ferrite beads from Aerotech supplied cables if installed. [Ferrite core: Aerotech PN ECZ02349, Fair-rite PN 2646626402]
- 5. Install a motor filter module MFM10-1 close to the drive. The ferrite core that you added to the motor phase and ground wires should be located between the drive and the MFM10-1.

# 2.2. Motor Power Output Connector



**DANGER**: Before you do maintenance to the equipment, disconnect the electrical power. Wait at least ten (10) minutes after removing the power supply before doing maintenance or an inspection. Otherwise, there is the danger of electric shock.

The drive can be used to drive the following motor types:

- Brushless (refer to Section 2.2.1.)
- DC Brush (refer to Section 2.2.2.)
- Stepper (refer to Section 2.2.3.)

For a complete list of electrical specifications, refer to Section 1.1.



**IMPORTANT**: Refer to local electrical safety requirements to correctly size external system wires.

The 7-pin terminal block style motor output connector is located on the front panel. The pinout for this connector is shown in Table 2-7.

 Table 2-7:
 Motor Power Output Connector Pinout

Pin	Description	Recommended Wire Size	Connector
	Earth Ground to Motor	1.3 mm <sup>2</sup> (#16 AWG)	AC1 No.
	Brushless Phase A Motor Lead		AC2
Α	DC Brush +	1.3 mm <sup>2</sup> (#16 AWG)	뒤
	Stepper		■ ⊕ PLY
В	Brushless Phase B Motor Lead	1.3 mm <sup>2</sup> (#16 AWG)	
Ь	Stepper	1.5 11111 (#10 / (Wd)	MOTOR
	Brushless Phase C Motor Lead		
C	DC Brush -	1.3 mm <sup>2</sup> (#16 AWG)	В
	Stepper Return		C

**Table 2-8: Mating Connector Part Numbers for the Motor Power Output Connector** 

Туре	Aerotech	Third Part	Screw	Wire Size:
	P/N	P/N	Torque: Nm	mm²[AWG]
7-Pin Terminal Block	ECK02387	Phoenix 1756353	0.5 - 0.6	3.3 - 0.0516 [12-30]

#### 2.2.1. Brushless Motor Connections

The configuration in Figure 2-9 shows a typical brushless motor connection.

Figure 2-9: Brushless Motor Configuration

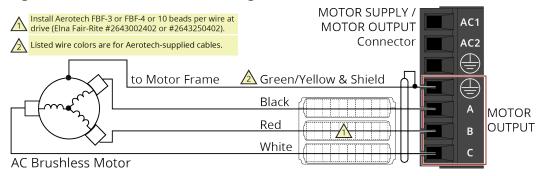


Table 2-9: Wire Colors for Aerotech-Supplied Brushless Motor Cables

• • • • • • • • • • • • • • • • • • • •				
Pin	Wire Color Set 1 <sup>(1)</sup>	Wire Color Set 2	Wire Color Set 3	Wire Color Set 4
$\wedge$	Green/Yellow &	Green/Yellow &	Green/Yellow &	Green/Yellow &
	Shield <sup>(2)</sup>	Shield	Shield	Shield
Α	Black	Blue & Yellow	Black #1	Black & Brown
В	B Red Red & Orange Black #2 Red & Orange		Red & Orange	
C White White & Brown Black #3 Violet & Blue				
(1) Wire Color Set #1 is the wire set typically used by Aerotech.				
(2) "&" indicates two wires (Red & Orange); " / " indicates a single wire (Green/White).				

Brushless motors are commutated electronically by the controller. The use of Hall effect devices for commutation is recommended.

The controller requires that the Back-EMF of each motor phase be aligned with the corresponding Hall-effect signal. To ensure proper alignment, motor, Hall, and encoder connections should be verified using one of the following methods: *powered*, through the use of a test program; or *unpowered* using an oscilloscope. Both methods will identify the A, B, and C Hall/motor lead sets and indicate the correct connections to the controller. Refer to Section 2.2.1.1. for powered motor phasing or Section 2.2.1.2. for unpowered motor and feedback phasing.

For Aerotech-supplied systems, the motor, encoder and Hall sensors are correctly configured and connection adjustments are not necessary.

A motor filter module can be installed between the drive and the motor to reduce the effects on PWM generated noise currents.

### 2.2.1.1. Brushless Motor Powered Motor and Feedback Phasing

Observe the state of the encoder and Hall-effect device signals in the Diagnostics section of the Status Utility.

**Table 2-10: Hall Signal Diagnostics** 

Hall-Signal Status	Definition
	0 V or logic low
ON	5 V or logic high

Figure 2-10: Positive Motor Direction


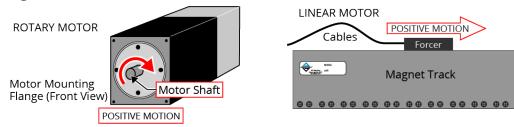



Figure 2-11: Encoder and Hall Signal Diagnostics

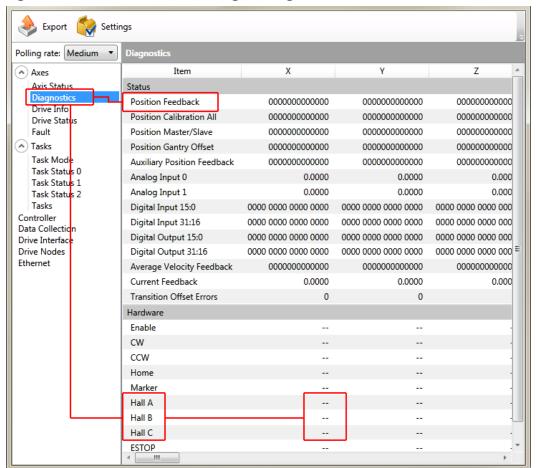

### 2.2.1.2. Brushless Motor Unpowered Motor and Feedback Phasing


Disconnect the motor from the controller and connect the motor in the test configuration shown in Figure 2-12. This method will require a two-channel oscilloscope, a 5V power supply, and six resistors (10,000 ohm, 1/4 watt). All measurements should be made with the probe common of each channel of the oscilloscope connected to a neutral reference test point (TP4, shown in Figure 2-12). Wave forms are shown while moving the motor in the positive direction.

Figure 2-12: Brushless Motor Phasing Oscilloscope Example

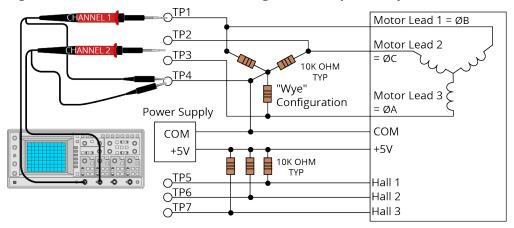

With the designations of the motor and Hall leads of a third party motor determined, the motor can now be connected to an Aerotech system. Connect motor lead A to motor connector A, motor lead B to motor connector B, and motor lead C to motor connector C. Hall leads should also be connected to their respective feedback connector pins (Hall A lead to the Hall A feedback pin, Hall B to Hall B, and Hall C to Hall C). The motor is correctly phased when the Hall states align with the Back EMF as shown in Figure 2-13. Use the CommutationOffset parameter to correct for Hall signal misalignment.

Figure 2-13: Brushless Motor Phasing Goal

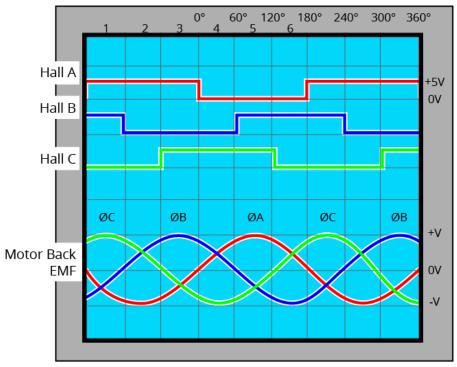

### 2.2.2. DC Brush Motor Connections

The configuration shown in Figure 2-14 is an example of a typical DC brush motor connection. Refer to Section 2.2.2.1. for information on motor phasing.

Figure 2-14: DC Brush Motor Configuration

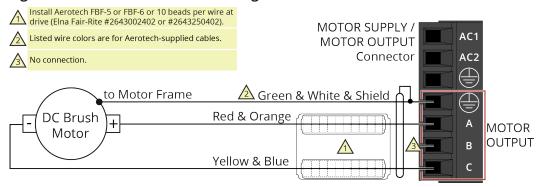


Table 2-11: Wire Colors for Aerotech-Supplied DC Brush Motor Cables


Pin	Wire Color Set 1 <sup>(1)</sup>	Wire Color Set 2	Wire Color Set 3	
	Green & White & Shield (2)	Green/Yellow & Shield	Green/Yellow & Shield	
Α	Red & Orange	Red	Red & Orange	
C Yellow & Blue Black Yellow & Blue				
(1) Wire Color Set #1 is the typical wire set used by Aerotech.				
(2) "8." (Red 8, Orange) indicates two wires: " / " (Green/White) indicates a single wire				

### 2.2.2.1. DC Brush Motor Phasing

A properly phased motor means that the positive motor lead should be connected to the ØA motor terminal and the negative motor lead should be connected to the ØC motor terminal. To determine if the motor is properly phased, connect a voltmeter to the motor leads of an un-powered motor:

- 1. Connect the positive lead of the voltmeter to the one of the motor terminals.
- 2. Connect the negative lead of the voltmeter to the other motor terminal.
- 3. Move or rotate the motor in the positive or clockwise (CW) direction by hand.

Figure 2-15: Positive Motor Direction

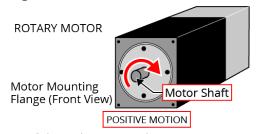

- 4. If the voltmeter indicates a negative value, swap the motor leads and move the motor by hand in the positive direction, again. When the voltmeter indicates a positive value, the motor leads have been identified.
- 5. Connect the motor lead from the positive lead of the voltmeter to the ØA motor terminal on the drive. Connect the motor lead from the negative lead of the voltmeter to the ØC motor terminal on the drive.

For Aerotech-supplied systems, the motor, encoder and Hall sensors are correctly configured and connection adjustments are not necessary.

## 2.2.3. Stepper Motor Connections

The configuration shown in Figure 2-16 is an example of a typical stepper motor connection. Refer to Section 2.2.3.1. for information on motor phasing.

In this case, the effective motor voltage is half of the applied bus voltage. For example, an 80 V motor bus supply is needed to get 40 V across the motor.

Figure 2-16: Stepper Motor Configuration

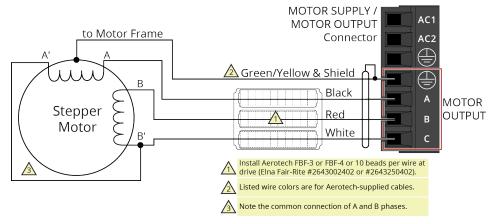


Table 2-12: Wire Colors for Aerotech-Supplied Stepper Motor Cables

Pin	Wire Color Set 1 <sup>(1)</sup>	Wire Color Set 2			
	Green/Yellow & Shield <sup>(2)</sup>	Green/Yellow & Shield			
А	Black	Brown			
В	Red	Yellow			
С	C White White & Red				
(1) Wire Color Set #1 is the typical wire set used by Aerotech.					
(2) "&" (Red & Orange) indicates two wires; " / " (Green/White) indicates a single wire.					

## 2.2.3.1. Stepper Motor Phasing


A stepper motor can be run with or without an encoder.

Without an Encoder: You do not need to phase the motor.

**With an Encoder:** Because the end of travel (EOT) limit inputs are relative to motor rotation, it is important to phase the motor.

Run a positive motion command. The motor is phased correctly if there is a positive scaling factor (determined by the CountsPerUnit parameters) and the motor moves in a clockwise direction when you view the motor from the front mounting flange (Figure 2-17). If the motor moves in a counterclockwise direction, swap the motor leads and re-run the command. After the motor has been phased, if you want to change the direction of positive motion, use the ReverseMotionDirection parameter.

Figure 2-17: Positive Motor Direction

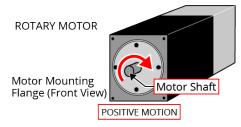

For Aerotech-supplied systems, the motor, encoder and Hall sensors are correctly configured and connection adjustments are not necessary.

## 2.3. Feedback Connector

The connector pin assignment is shown in Table 2-13 with detailed connection information in the following sections.

**Table 2-13: Feedback Connector Pinout** 

Pin #	Description	In/Out/Bi	Connector		
1	Reserved	N/A			
2	Motor Over Temperature Thermistor	Input			
3	+5V Power <sup>(1)</sup>	Output			
4	Plug and Play Serial Data (for Aerotech stages only)	Bidirectional			
5	Hall-Effect Sensor B (brushless motors only)	Input			
6	Encoder Marker Reference Pulse -	Input			
0	Absolute Encoder Clock -	Output			
7	Encoder Marker Reference Pulse +	Input			
,	Absolute Encoder Clock +	Output	14		
8	Absolute Encoder Data -	Bidirectional			
9	Reserved	N/A			
10	Hall-Effect Sensor A (brushless motors only)	Input			
11	Hall-Effect Sensor C (brushless motors only)	Input			
12	Clockwise End of Travel Limit	Input			
13	Brake Output -	Output			
14	Encoder Cosine +	Input			
15	Encoder Cosine -	Input			
16	+5V Power <sup>(1)</sup>	Output			
17	Encoder Sine +	Input	13 25		
18	Encoder Sine -	Input	13 -		
19	Absolute Encoder Data+	Bidirectional			
20	Signal Common	Output			
21	Signal Common	Output			
22	Home Switch Input	Input			
23	Encoder Fault Input	Input			
24	Counterclockwise End of Travel Limit	Input			
25	Brake Output +	Output			
(1) The r	(1) The maximum combined current output is 500 mA.				

**Table 2-14:** Mating Connector Part Numbers for the Feedback Connector

Mating Connector	Aerotech P/N	Third Party P/N	
25-Pin D-Connector	ECK00101	FCI DB25P064TXLF	
Backshell	ECK00656	Amphenol 17E-1726-2	

## 2.3.1. Primary Encoder Inputs

The primary encoder inputs are accessible through the Feedback connector. Use the PrimaryFeedbackType [A3200: PositionFeedbackType or VelocityFeedbackType] parameter to configure the drive to accept an encoder signal type.

Square Wave encoder signals: Section 2.3.1.1.

Absolute encoder signals: Section 2.3.1.2.

Sine Wave encoder signals (as permitted by the multiplier option): Section 2.3.1.3.

Refer to Section 2.3.1.4. for encoder feedback phasing.

Refer to Section 2.5. for the auxiliary encoder input on the Aux I/O connector.

**Table 2-15: Multiplier Options** 

Option	Primary Encoder Accepts	Auxiliary Encoder Accepts
-MX0	Square Wave or Absolute encoders	Square Wave or Absolute encoders
-MX2	Sine Wave (high performance), Square Wave, or Absolute encoders	Square Wave or Absolute encoders
-MX3	Sine Wave (high performance), Square Wave, or Absolute encoders	Sine Wave (standard performance), Square Wave, or Absolute encoders



**IMPORTANT**: Physically isolate the encoder wiring from motor, AC power, and all other power wiring

Table 2-16: Primary Encoder Input Pins on the Feedback Connector

Pin #	Description	In/Out/Bi
3	+5V Power <sup>(1)</sup>	Output
6	Encoder Marker Reference Pulse -	Input
0	Absolute Encoder Clock -	Output
7	Encoder Marker Reference Pulse +	Input
/	Absolute Encoder Clock +	Output
8	Absolute Encoder Data -	Bidirectional
14	Encoder Cosine +	Input
15	Encoder Cosine -	Input
16	+5V Power <sup>(1)</sup>	Output
17	Encoder Sine +	Input
18	Encoder Sine -	Input
19	Absolute Encoder Data+	Bidirectional
20	Signal Common	Output
21	Signal Common	Output
(1) The r	naximum combined current output is 500 mA.	


## 2.3.1.1. Square Wave Encoder (Primary)

The drive accepts RS-422 square wave encoder signals. The drive will generate a feedback fault if it detects an invalid signal state caused by an open or shorted signal connection. Use twisted-pair wiring for the highest performance and noise immunity.

**Table 2-17: Square Wave Encoder Specifications** 

Specification	Value	
Encoder Frequency	10 MHz maximum (25 ns minimum edge separation)	
x4 Quadrature Decoding	40 million counts/sec	

Figure 2-18: Square Wave Encoder Schematic (Feedback Connector)

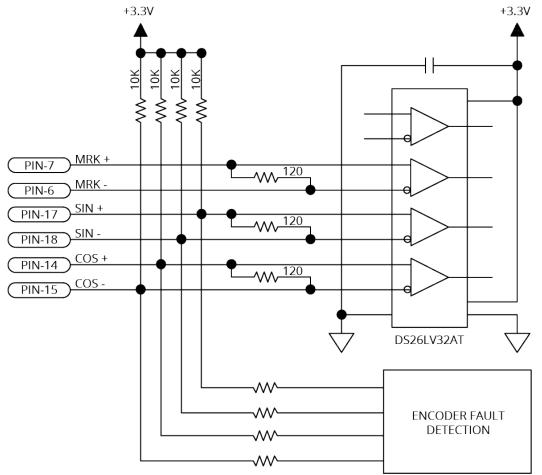


## 2.3.1.2. Absolute Encoder (Primary)

The drive retrieves absolute position data along with encoder fault information through a serial data stream from the absolute encoder. Use twisted-pair wiring for the highest performance and noise immunity. You cannot echo an absolute encoder signal.

Refer to Figure 2-19 for the serial data stream interface.

Refer to the Help file for information on how to set up your EnDat or BiSS absolute encoder parameters.

Figure 2-19: Absolute Encoder Schematic (Feedback Connector)

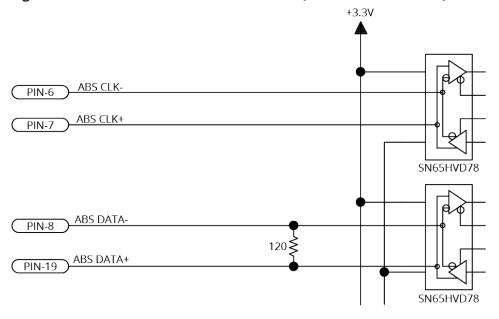

#### 2.3.1.3. Sine Wave Encoder (Primary) [-MX2/-MX3 Option]

The Sine Wave Encoder option provides higher positioning resolution by subdividing the fundamental output period of the encoder into smaller increments. The amount of subdivision is specified by the PrimaryEncoderMultiplicationFactor [A3200: EncoderMultiplicationFactor] parameter. Use Encoder Tuning [A3200: Feedback Tuning] to adjust the value of the gain, offset, and phase balance controller parameters to get the best performance. For more information, refer to the Help file.

High resolution or high-speed encoders can require increased bandwidth for correct operation. Use the High Speed Mode of the PrimaryEncoderMultiplierSetup [A3200: EncoderMultiplierSetup] parameter to enable the high bandwidth mode. Because this mode increases sensitivity to system noise, use it only if necessary.


The drive can generate emulated encoder signals. These signals can be output on the Auxiliary Encoder (AUX) connector, SYNC port connector, or used internally by the PSO. Refer to the EncoderDivider and PrimaryEmulatedQuadratureDivider [A3200: EmulatedQuadratureDivider] parameters and the encoder output functions [A3200: ENCODER OUT command] in the Help file for more information.

For the highest performance, use twisted pair double-shielded cable with the inner shield connected to signal common and the outer shield connected to frame ground. Do not join the inner and outer shields in the cable.

**Table 2-18: Sine Wave Encoder Specifications** 

Specification		Value		
		Primary	Auxiliary	
Input Frequency (max)		450 kHz, 2 MHz	450 kHz	
Input Amplitude <sup>(1)</sup>		0.6 to 1.75 Vpk-pk		
Internalation Factor (man)	-MX2	65,536	N/A	
Interpolation Factor (max)	-MX3	65,536	16,384	
-MX2/-MX3 Primary Encoder Channel Interpolation Latency		800 nsec (analog input to quadrature output)		
Input Common Mode		1.5 to 3.5 VDC		
(1) Measured as SIN(+) - SIN(-) or COS(+) - COS(-)				

Figure 2-20: Sine Wave Encoder Phasing Reference Diagram

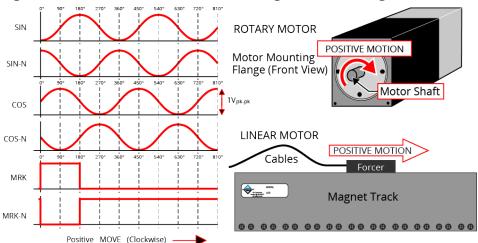

PIN-17 SIN
PIN-18 SIN
PIN-14 COS+

120Ω

PIN-7 MRK+

PIN-6 MRK-

Figure 2-21: Sine Wave Encoder Schematic (Feedback Connector)


50

#### 2.3.1.4. Encoder Phasing

Incorrect encoder polarity will cause the system to fault when enabled or when a move command is issued. Figure 2-22 illustrates the proper encoder phasing for clockwise motor rotation (or positive forcer movement for linear motors). To verify, move the motor by hand in the CW (positive) direction while observing the position of the encoder in the diagnostics display (see Figure 2-23).

For dual loop systems, the velocity feedback encoder is displayed in the diagnostic display (Figure 2-23).


Figure 2-22: Encoder Phasing Reference Diagram (Standard)

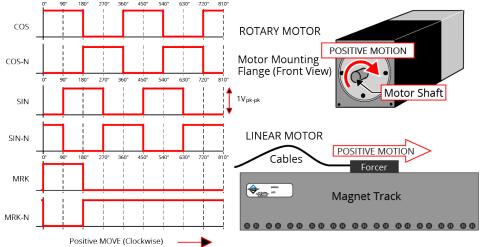



**IMPORTANT**: Encoder manufacturers may refer to the encoder signals as A, B, and Z. The proper phase relationship between signals is shown in Figure 2-22.

Figure 2-23: Position Feedback in the Diagnostic Display

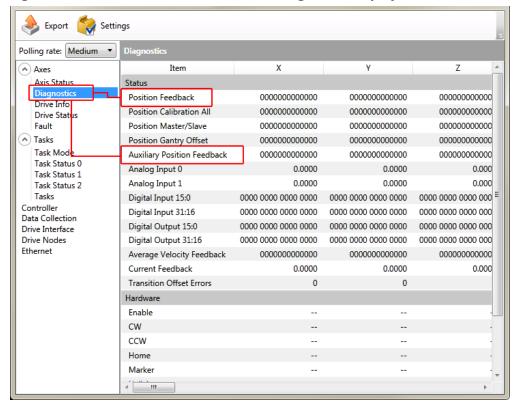

## 2.3.2. Hall-Effect Inputs


The Hall-effect switch inputs are recommended for AC brushless motor commutation but not absolutely required. The Hall-effect inputs accept 5 VDC level signals. Hall states (0,0,0) or (1,1,1) are invalid and will generate a "Hall Fault" axis fault.

Refer to Section 2.2.1.1. for Hall-effect device phasing.

Table 2-19: Hall-Effect Feedback Pins on the Feedback Connector

Pin #	Description	In/Out/Bi	
3	+5V Power <sup>(1)</sup>	Output	
5	Hall-Effect Sensor B (brushless motors only)	Input	
10	Hall-Effect Sensor A (brushless motors only)	Input	
11	Hall-Effect Sensor C (brushless motors only)	Input	
16	+5V Power <sup>(1)</sup>	Output	
20	Signal Common	Output	
21	Signal Common	Output	
(1) The r	(1) The maximum combined current output is 500 mA.		

Figure 2-24: Hall-Effect Inputs Schematic (Feedback Connector)

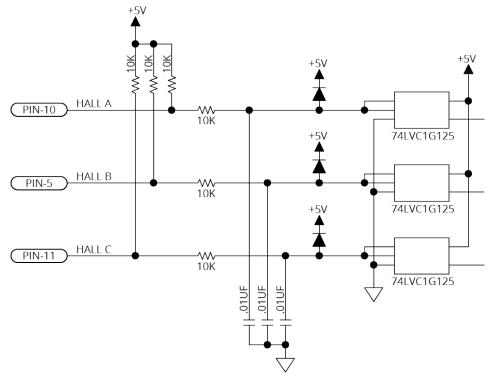

## 2.3.3. Thermistor Input


The thermistor input is used to detect a motor over temperature condition by using a positive temperature coefficient sensor. As the temperature of the sensor increases, so does the resistance. Under normal operating conditions, the resistance of the thermistor is low which will result in a low input signal. As the increasing temperature causes the resistance of the thermistor to increase, the sensor will trigger an over temperature fault.

The thermistor is connected between Pin 2 and Signal Common. The nominal trip value of the sensor is 1.385 k $\Omega$ . The circuit includes a 12 k $\Omega$  internal pull-up resistor which corresponds to a trip voltage of +0.52 V.

Table 2-20: Thermistor Input Pin on the Feedback Connector

Pin #	Description	In/Out/Bi
2	Motor Over Temperature Thermistor	Input

Figure 2-25: Thermistor Input Schematic (Feedback Connector)

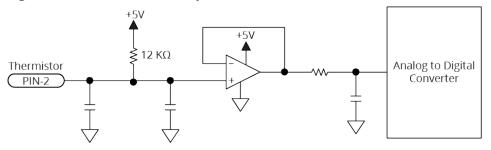


## 2.3.4. Encoder Fault Input

The encoder fault input is for use with encoders that have a fault output. This is provided by some manufacturers and indicates a loss of encoder function. The active state of this input is parameter configurable and the controller should be configured to disable the axis when the fault level is active. The nominal trip voltage of the encoder fault input is +2.5 V.

Table 2-21: Encoder Fault Input Pin on the Feedback Connector

Pin #	Description	In/Out/Bi
23	Encoder Fault Input	Input

Figure 2-26: Encoder Fault Input Schematic (Feedback Connector)

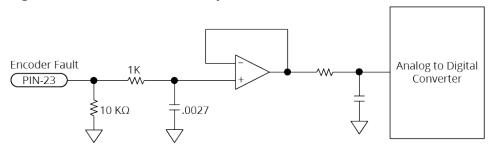

## 2.3.5. End of Travel and Home Limit Inputs

End of Travel (EOT) limits are required to define the end of the physical travel on linear axes. Positive or clockwise motion is stopped by the clockwise (CW) end of travel limit input. Negative or counterclockwise motion is stopped by the counterclockwise (CCW) end of travel limit input. The Home Limit switch can be parameter configured for use during the home cycle, however, the CW or CCW EOT limit is typically used instead. All of the end-of-travel limit inputs accept 0-24 VDC level signals. Limit directions are relative to the encoder polarity in the diagnostics display (refer to Figure 2-29).

Table 2-22: End of Travel and Home Limit Pins on the Feedback Connector

Pin #	Description	In/Out/Bi
12	Clockwise End of Travel Limit Input	
16	+5V Power	Output
20	Signal Common	Output
21	Signal Common	Output
22	Home Switch Input	Input
24	Counterclockwise End of Travel Limit	Input

The active state (High/Low) of the EOT limits is software selectable (by the EndOfTravelLimitSetup axis parameter). Figure 2-27 shows the possible wiring configurations for normally-open and normally-closed switches and the parameter setting to use for each configuration.




**IMPORTANT**: Use NPN-type normally-closed limit switches (Active High) to provide fail-safe behavior in the event of an open circuit.

**ACTIVE HIGH ACTIVE LOW** Typical (Normally Closed and Active High) +5V PIN-16 +5V PIN-16 **≥**10K **≥**10K CW LMT PIN-12 CW LMT **NORMALLY CLOSED ≥**10K **≶**10K \$10K ₹<sub>1K</sub> HM LMT PIN-22 HM LMT ≶1K LMT COM PIN-20 LMT COM **NPN Switches PNP Switches** +5V PIN-16 +5V PIN-16 \$10K **≶**10K CW LMT CW LMT PIN-12 **NORMALLY OPEN** PIN-12 \$10K 10K \$10K **₹**10k **≶**1K LMT COM PIN-20 **PNP Switches NPN Switches** 

Figure 2-27: End of Travel and Home Limit Input Connections


Figure 2-28: End of Travel and Home Limit Input Schematic (Feedback Connector)

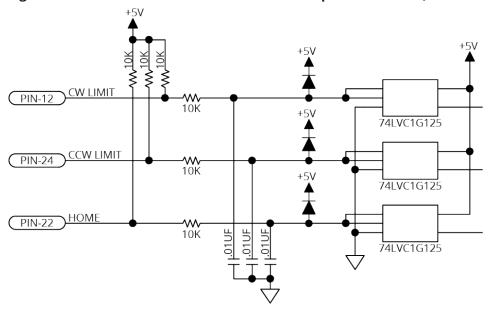

#### 2.3.5.1. End of Travel and Home Limit Phasing

If the EOT limits are reversed, you will be able to move further into a limit but be unable to move out. To correct this, swap the connections to the CW and CCW inputs at the Feedback connector or swap the CW and CCW limit functionality in the software using the EndOfTravelLimitSetup parameter. View the logic level of the EOT limit inputs in the Diagnostics display (shown in Figure 2-29).

Figure 2-29: End of Travel and Home Limit Input Diagnostic Display

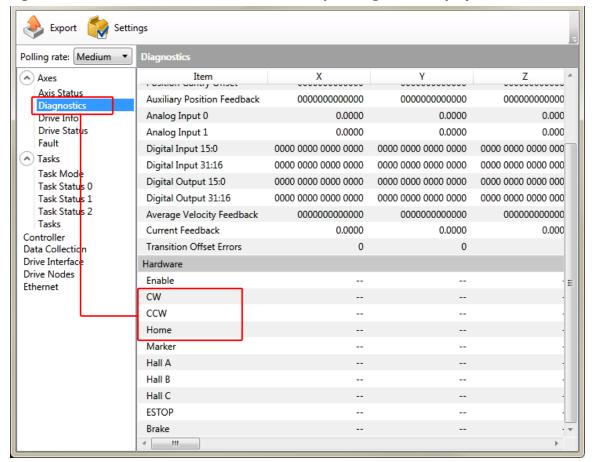

## 2.3.6. Brake Outputs

The drive has a dedicated brake control circuit. Configure the brake with the BrakeSetup [A3200: EnableBrakeControl] parameter for automatic control (typical). You can also use software commands to directly control the brake output.

Refer to Section 2.6. for more information on powering the brake circuit.

**Table 2-23: Brake Output Pins on the Feedback Connector** 


Pin #	Description	In/Out/Bi
13	Brake Output -	Output
25	Brake Output +	Output

**Table 2-24: Brake Control Specifications** 

Specification	Value
Maximum Voltage	24 VDC
Maximum Current	1 A

A varistor must be connected across the brake to minimize voltage transients.

Figure 2-30: Brake Connected to the 25-Pin Feedback Connector (Typical)

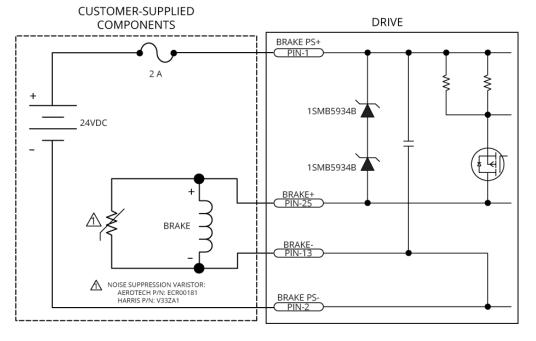

# 2.4. Safe Torque Off Input (STO)



**IMPORTANT**: iXC4e certification is pending.

The STO circuit is comprised of two identical channels, each of which must be energized in order for the drive to produce motion. Each STO input is opto-isolated and accepts 24 V levels directly without the need for external current limiting resistors.



**IMPORTANT**: The drive might be equipped with an STO bypass circuit board. The bypass circuit board defeats the STO safety circuit and allows the system to run at all times. To use the STO safety functionality, remove the circuit board and make connections as outlined in this section.



**IMPORTANT**: The application circuit and its suitability for the desired safety level is the sole responsibility of the user of the drive.



**WARNING**: STO wires must be insulated to prevent short circuits between connector pins. The primary concern is a short circuit between STO 1 IN and STO 2 IN wire strands.

Table 2-25: STO Connector Pinout

Pin #	Signal	Description	In/Out/Bi	Connector
1	Power Supply +	Use only to defeat STO by connecting to STO 1 IN and STO 2 IN. Not for customer use.	Output	
2	STO 1 IN	STO Channel 1 Positive Input	Input	+V
3	RETURN	STO Negative Input	Input	STO 1 IN RETURN
4	STO 2 IN	STO Channel 2 Positive Input	Input	STO 2 IN
5	Power Supply -	Use only to defeat STO by connecting to RETURN. Not for customer use.	Output	

Table 2-26: Mating Connector Part Numbers for the STO Connector

Description	Aerotech P/N	Phoenix P/N	Tightening Torque (Nm)	Wire Size: AWG [mm²]
5-Pin Terminal Block	ECK02393	1827622	0.22 - 0.25	2.5 - 0.05 [14-30]

**Table 2-27: STO Electrical Specifications** 


Status	Value
STO off (motion allowed)	18-24 V, 7 ma
STO on (safe state entered, no motion)	0-6 V
Recommended Wire Gauge	22-26 AWG (0.5 - 0.14 mm <sup>2</sup> )
STO System Power Supply	PELV
STO Wire Length (maximum)	50 m

Figure 2-31 shows one safety device connected to multiple drives in parallel.



**WARNING**: The drive does not check for short circuits on the external STO wiring. If this is not done by the external safety device, short circuits on the wiring must be excluded. Refer to EN ISO 13849-2. For Category 4 systems, the exclusion of short circuits is mandatory.

Figure 2-31: Typical STO Configuration

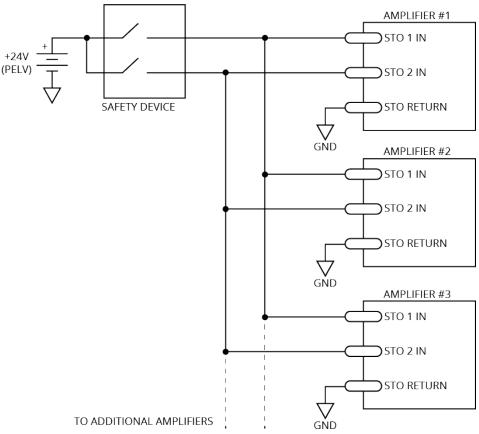

## 2.4.1. STO Standards

Table 2-28 describes and specifies the safety requirements at the system level for the Safe Torque Off (STO) feature of the drive. This assumes that diagnostic testing is performed according to Section 2.4.4. and Table 2-29.

Table 2-28: STO Standards

Standard	Maximum Achievable Safety
EN/IEC 61800-5- 2:2016	SIL 3
EN/IEC 61508-1:2010	SIL 3
EN/IEC 61508-2:2010	SIL 3
EN ISO 13849-1:2015	Category 4, PL e
EN/IEC 62061:2005 with Amendments	SIL 3

Table 2-29: STO Standards Data

Standard	Value
	MTTF <sub>D</sub> > 1000 years,
EN ISO 13849-1:2015	DC <sub>AVG</sub> 99%
	Maximum PL e, Category 4
	Lifetime = 20 years
EN 150 42040 4 2045	No proof test required
EN ISO 13849-1:2015	Interval for manual STO test:
EN/IEC 61508	<ul> <li>Once per year for SIL2/PL d/category 3</li> <li>Once per three months for SIL3/PL e/category 3</li> </ul>
	<ul> <li>Once per three months for SIL3/PL e/category 3</li> <li>Once per day for SIL3/PL e/category 4</li> </ul>
	SIL3
EN/IEC 61508	PFH < 3 FIT
	SFF > 99%

## 2.4.2. STO Functional Description

The motor can only be activated when voltage is applied to both STO 1 and STO 2 inputs. The STO state will be entered if power is removed from either the STO 1 or the STO 2 inputs. When the STO state is entered, the motor cannot generate torque or force and is therefore considered safe.

The STO function is implemented with two redundant channels in order to meet stated performance and SIL levels. STO 1 disconnects the high side power amplifier transistors and STO 2 disconnects the low side power amplifier transistors. Disconnecting either set of transistors effectively prevents the drive from being able to produce motion.

The drive software monitors each STO channel and will generate an Emergency Stop software fault when either channel signals the stop state. Each STO channel contains a fixed delay which allows the drive to perform a controlled stop before the power amplifier transistors are turned off.

A typical configuration requiring a controlled stop has the Emergency Stop Fault mask bit set in the FaultMask, FaultMaskDecel, and FaultMaskDisable parameters. This stops the axis using the rate specified by the AbortDecelRate parameter. The software will disable the axis as soon as the deceleration ramp is complete. This is typically configured to occur before the STO channel turns off the power amplifier transistors.

The software controlled stop functionality must be excluded when considering overall system safety. This is because the software is not safety rated and cannot be included as part of the safety function.

The drive will tolerate short diagnostic pulses on the STO 1+ and STO 2+ inputs. The parameter "STOPulseFilter" specifies the maximum pulse width that the drive will ignore.

To resume normal operation, apply power to both STO 1 and STO 2 inputs and use the *Acknowledge All* button or the AcknowledgeAll() or FaultAcknowledge() function to clear the Emergency Stop software fault. The recommended use of the Emergency Stop Fault fault mask bits prevent the system from automatically restarting.

You can achieve longer delay times through the use of an external delay timer, such as the Omron G9SA-321 Safety Relay Unit. Place this device between the system ESTOP wiring and the drive's STO inputs. Connect the ESTOP signal directly to a digital input, in addition to the external timer, to allow the drive to begin a software-controlled stop as soon as the ESTOP signal becomes active. Use the EmergencyStopFaultInput [A3200: ESTOPFaultInput] parameter to configure a digital input as an ESTOP input.

Non-standard STO delay times are provided by special factory order. In this case, the non-standard STO delay time is indicated by a label placed on the slice amplifier's main connector (STO DELAY = xx sec).

Table 2-30: STO Signal Delay

	Value
STO Time Delay	450-550 msec

**Table 2-31: Motor Function Relative to STO Input State** 

STO 1	STO 2 Motor Function		
Unpowered	Unpowered	No force/torque	
Unpowered (1)	Powered <sup>(1)</sup>	No force/torque	
Powered <sup>(1)</sup> Unpowered <sup>(1)</sup> No force/torque			
Powered	Powered	Normal Operation	
1. This is considered a Fault Condition since STO 1 and STO 2 do not match. Refer to Section 2.4.4.			

## 2.4.3. STO Startup Validation Testing

Verify the state of the STO 1 and STO 2 channels by manually activating the external STO hardware. Each STO channel must be tested separately in order to detect potential short circuits between the channels. The current state of the STO 1 and STO 2 inputs is shown in the Status Utility. A "–" indicates that the STO input is powered by a high voltage level (24 V). An "ON" indicates that the voltage source has been removed from the input (open circuit or 0 V), and that the STO channel is in the safe state.



**DANGER**: The STO circuit does not remove lethal voltage from the motor terminals. AC mains power must be removed before servicing.

## 2.4.4. STO Diagnostics


Activation of STO means removing power from the drive's STO inputs. This is typically done by pressing the emergency stop switch. The drive initiates a diagnostic check every time the STO is activated after the Diagnostic Test Delay Time has elapsed. The diagnostic check verifies that each channel has entered the safe state. The drive is held in the safe state if it determines that one of the channels has not properly entered the safe state. An open circuit or short to 24 V in either STO channel will result in this condition (refer to Section 2.4.3.). The Status Utility screen can be used to verify the levels of the STO input signals while trouble shooting.

In order to meet the listed SIL level, the STO circuit must be activated (power removed from both inputs) according to the interval specified in Table 2-29.

Table 2-32: STO Timing

Time	Description	Value
T1	STO Delay Time (STO input active to motor power off)	450-550 msec
T2	STO deactivated to motor power on (the software is typically configured so that the motor does not automatically reenergize).	< 1 msec
T3	Diagnostic Test Delay Time	550-610 msec



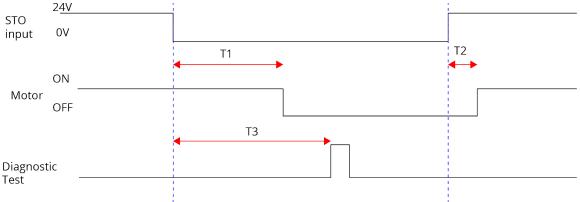

The software is typically configured to execute a controlled stop when the STO state is first detected. If power is reapplied to the STO inputs before the STO Delay Time, an STO hardware shutdown will not occur but a software stop may, depending on the width of the STO pulse. The controller will ignore STO active pulses shorter in length than the STOPulseFilter parameter setting.

# 2.5. Auxiliary I/O Connector

The Auxiliary I/O connector has 1 analog input, 6 digital inputs, 1 analog output, 4 digital outputs, a secondary line driver encoder input, and a secondary absolute encoder interface.

Table 2-33: Auxiliary I/O Connector Pinout

Pin#	Description	In/Out/Bi	Connector		
1	Auxiliary Sine +	Bidirectional			
'	Absolute Encoder Data +	Bidirectional			
2	Auxiliary Sine -	Bidirectional			
	Absolute Encoder Data -	Bidirectional			
3	High-Speed Input 20 + / PSO External Sync. +	Input			
4	High-Speed Input 20 - / PSO External Sync	Input			
5	High-Speed Input 21 +	Input			
6	High-Speed Input 21 -	Input			
7	Digital Output 0	Output			
8	Digital Output 1	Output			
9	Digital Output 2	Output			
10	Auxiliary Cosine +	Bidirectional			
10	Absolute Encoder Clock +	Output	(80 (80 (80)		
11	Auxiliary Cosine-	Bidirectional			
''	Absolute Encoder Clock -	Output			
12	+5 Volt (500 mA max)	Output			
13	Analog Input 0+ (Differential)	Input			
14	Analog Input 0- (Differential)	Input			
15	Digital Output Common	Output			
16	Digital Output 3	Output			
17	Digital Input 0 / CCW EOT Input (1)	Input			
18	Digital Input 1 / CW EOT Input (1)	Input			
19	Auxiliary Marker- / PSO output (2) / TTL Output	Bidirectional			
20	Auxiliary Marker+ / PSO output (2)	Bidirectional			
21	Common	Output			
22	Analog Output 0	Output			
23	Analog Common	Output			
24	Digital Input Common	Output			
25	Digital Input 2 / Home Input (1)	Input			
26	Digital Input 3	Input			
	(1) Software configured option				
(2) For P	SO, refer to Section 2.5.2.				

Table 2-34: Mating Connector Part Numbers for the Auxiliary I/O Connector

<b>Mating Connector</b>	Aerotech P/N	Third Party P/N		
Connector	ECK01259	Kycon K86-AA-26P		
Backshell ECK01022 Amphenol 17-172				
NOTE: These items are provided as a set under the Aerotech P/N: MCK-26HDD.				

## 2.5.1. Auxiliary Encoder Inputs

The Auxiliary Encoder connector gives you a second encoder input channel. This channel is typically used for dual loop applications.

Use the AuxiliaryFeedbackType [A3200: PositionFeedbackType or VelocityFeedbackType] parameter to configure the drive to accept an encoder signal type.

Square Wave encoder signals: Section 2.5.1.1.

Absolute encoder signals: Section 2.5.1.2.

Sine Wave encoder signals (with the -MX3 option): Section 2.5.1.3.

You can configure the Auxiliary Encoder interface as an output that will transmit encoder signals for external use. Use the DriveEncoderOutputConfigureInput() function [A3200: EncoderDivider parameter] to configure the Sine ± and Cosine ± connector pins as RS-422 outputs. You can only echo incremental square wave primary encoder inputs or, with the -MX2 or -MX3 option, incremental sine wave primary encoder inputs. You cannot use the absolute encoder interface when you echo incremental signals.

Table 2-35: Auxiliary Encoder Pins on the Auxiliary I/O Connector

Pin#	Description	In/Out/Bi	
1	Auxiliary Sine +	Bidirectional	
'	Absolute Encoder Data +	Bidirectional	
2	Auxiliary Sine -	Bidirectional	
	Absolute Encoder Data -	Bidirectional	
10	Auxiliary Cosine +	Bidirectional	
	Absolute Encoder Clock +	Output	
11	Auxiliary Cosine-	Bidirectional	
	Absolute Encoder Clock -	Output	
12	+5 Volt (500 mA max)	Output	
19	Auxiliary Marker- / PSO output <sup>(2)</sup> / TTL Output	Bidirectional	
20	Auxiliary Marker+ / PSO output <sup>(2)</sup>	Bidirectional	
21	Common	Output	
(2) For PSO, refer to Section 2.5.2.			


## 2.5.1.1. Square Wave Encoder (Auxiliary)

The drive accepts RS-422 square wave encoder signals. The drive will generate a feedback fault if it detects an invalid signal state caused by an open or shorted signal connection. Use twisted-pair wiring for the highest performance and noise immunity.

**Table 2-36: Square Wave Encoder Specifications** 

Specification	Value
Encoder Frequency	10 MHz maximum (25 ns minimum edge separation)
x4 Quadrature Decoding	40 million counts/sec

Figure 2-33: Square Wave Encoder Interface (Aux I/O Connector)

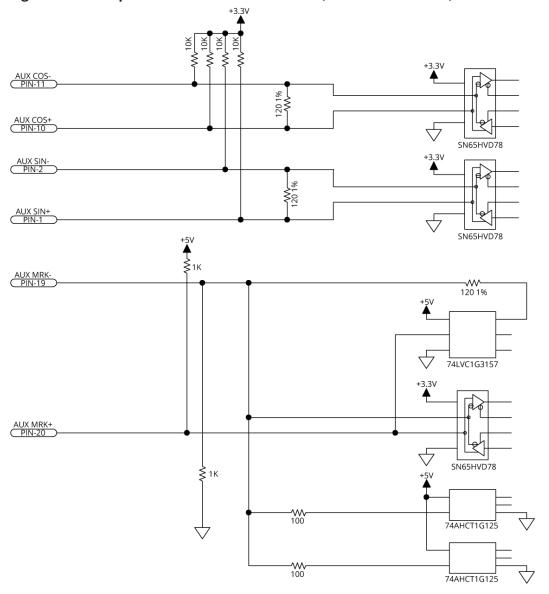


## 2.5.1.2. Absolute Encoder (Auxiliary)

The drive retrieves absolute position data along with encoder fault information through a serial data stream from the absolute encoder. Use twisted-pair wiring for the highest performance and noise immunity. You cannot use an absolute encoder with incremental signals on the Auxiliary I/O Connector.

Refer to Figure 2-34 for the serial data stream interface.

Refer to the Help file for information on how to set up your EnDat or BiSS absolute encoder parameters.

Figure 2-34: Absolute Encoder Schematic (Auxiliary I/O Connector)

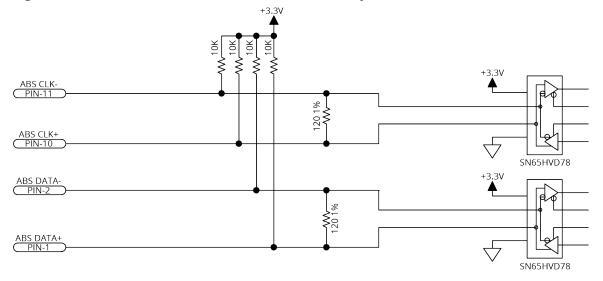

## 2.5.1.3. Sine Wave Encoder (Auxiliary) [-MX3 Option]

The Sine Wave Encoder option provides higher positioning resolution by subdividing the fundamental output period of the encoder into smaller increments. The amount of subdivision is specified by the AuxiliaryEncoderMultiplicationFactor parameter. Use Encoder Tuning [A3200: Feedback Tuning] to adjust the value of the gain, offset, and phase balance controller parameters to get the best performance. For more information, refer to the Help file.


You cannot use the sine wave encoder on the auxiliary connector with the -MX3 multiplier option as an input to the PSO. The -MX3 option does not generate emulated quadrature signals from the auxiliary connector.

For the highest performance, use twisted pair double-shielded cable with the inner shield connected to signal common and the outer shield connected to frame ground. Do not join the inner and outer shields in the cable.

**Table 2-37: Sine Wave Encoder Specifications** 

Specification		Value		
		Primary	Auxiliary	
Input Frequency (max)		450 kHz, 2 MHz	450 kHz	
Input Amplitude <sup>(1)</sup>		0.6 to 1.75 Vpk-pk		
Interpolation Factor (max)	-MX2	65,536	N/A	
	-MX3	65,536	16,384	
-MX2/-MX3 Primary Encoder Channel Interpolation Latency		800 nsec (analog input to quadrature output)		
Input Common Mode		1.5 to 3.5 VDC		
(1) Measured as SIN(+) - SIN(-) or COS(+) - COS(-)				

Figure 2-35: Sine Wave Encoder Phasing Reference Diagram

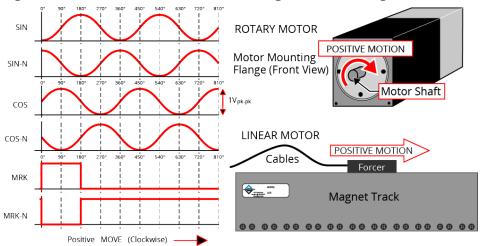

PIN-10 AUX COS+

PIN-10 AUX COS
PIN-10 AUX COS
PIN-10 AUX MRK+

120Ω

120Ω

120Ω

Figure 2-36: Sine Wave Encoder Schematic (Auxiliary I/O Connector)

## 2.5.2. Position Synchronized Output (PSO)

The PSO signal is available on the dual-function AUX Marker/PSO signal lines. Use the PSO pulse external sync functions [A3200: PSOOUTPUT PULSE EXTSYNC command] to configure the auxiliary marker as an output. Refer to the Help file for more information.

Use the PsoOutputConfigureOutput() function [A3200: PSOOUTPUT CONTROL command] to transmit the PSO output signal on the Marker ± pins differentially. Or, use the PsoOutputConfigureOutput() function [A3200: PSOOUTPUT CONTROL command] to configure the Marker - pin as a 5V TTL PSO output.

The differential signal format is recommended when using long cable lengths in noisy environments or when high frequency pulse transmission is required. It is best to locate the line receiver close to the receiving electronics. A 5 V TTL signal is used to drive an opto coupler or general purpose TTL input. This signal is active high and is driven to 5 V when a PSO fire event occurs. When the drive is reset or after initial power up, the PSO pins (refer to Table 2-39), are not actively driven and the fail safe state is defined by pull-up and pull-down resistors as shown in Figure 2-37.

The -EB1 I/O option board has additional PSO signal formats. Refer to Section 3.5. for more information.


**Table 2-38: PSO Specifications** 

Specification		Value	
Output	TTL	5 V, 16 mA (max)	
Maximum PSO Output (Fire) Frequency	TTL	12.5 MHz	
Maximum F30 Output (Fire) Frequency	RS-422	12.5 MHz	
Output Latency	TTL	15 ns	
[Fire event to output change]	RS-422	15 ns	

Table 2-39: PSO Pins on the Auxiliary I/O Connector

Pin#	Description	In/Out/Bi
19	Auxiliary Marker- / PSO output / TTL Output	Bidirectional
20	Auxiliary Marker+ / PSO output	Bidirectional
21	Common	Output

Figure 2-37: PSO Interface

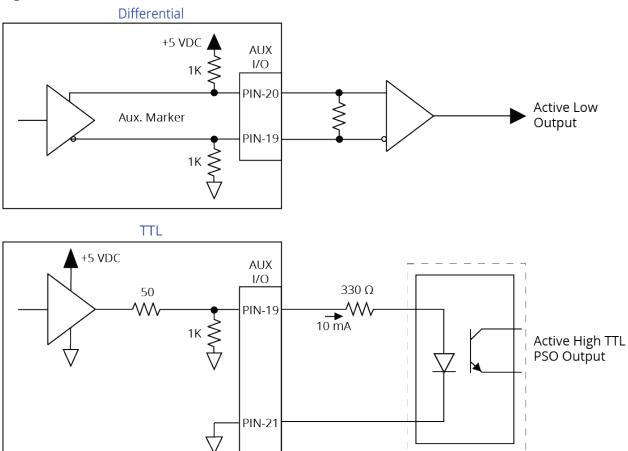

## 2.5.3. Digital Outputs

Optically-isolated solid-state relays drive the digital outputs. You can connect the digital outputs in current sourcing or current sinking mode but you must connect all four outputs in the same configuration. Refer to Figure 2-39 and Figure 2-40.

You must install suppression diodes on digital outputs that drive relays or other inductive devices. To see an example of a current sourcing output that has diode suppression, refer to Figure 2-39. To see an example of a current sinking output that has diode suppression, refer to Figure 2-40.

The digital outputs are not designed for high-voltage isolation applications and they should only be used with ground-referenced circuits.


The digital outputs have overload protection. They will resume normal operation when the overload is removed.

**Table 2-40: Digital Output Specifications** 

<b>Digital Output Specifications</b>	Value
Maximum Voltage	24 V (26 V Maximum)
Maximum Sink/Source Current	250 mA/output
Output Saturation Voltage	0.9 V at maximum current
Output Resistance	3.7 Ω
Rise / Fall Time	250 μs (2K pull up to 24V)
Reset State	Output Off (High Impedance State)

Table 2-41: Digital Output Pins on the Auxiliary I/O Connector

Pin#	Description	In/Out/Bi
7	Digital Output 0	Output
8	Digital Output 1	Output
9	Digital Output 2	Output
15	Digital Output Common	Output
16	Digital Output 3	Output

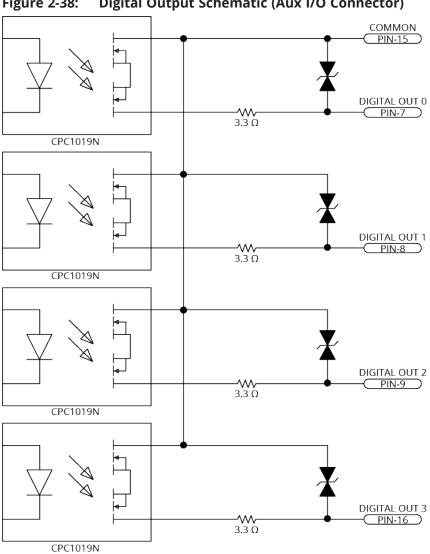

**Digital Output Schematic (Aux I/O Connector)** Figure 2-38:

AUX I/O Connector

PIN-15

DIGITAL OUTPUT 0

PIN-8

DIGITAL OUTPUT 1

DIGITAL OUTPUT 2


DIGITAL OUTPUT 2

DIGITAL OUTPUT 3

Figure 2-39: Digital Outputs Connected in Current Sourcing Mode

⚠ DIODE REQUIRED ON EACH OUTPUT THAT DRIVES AN INDUCTIVE DEVICE (COIL), SUCH AS A RELAY.

Figure 2-40: Digital Outputs Connected in Current Sinking Mode

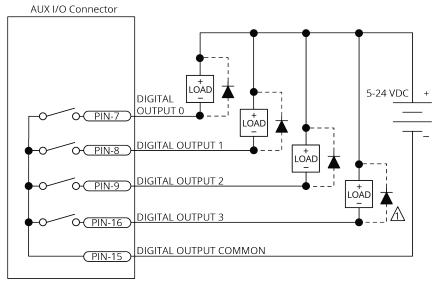

 $\bigwedge$  DIODE REQUIRED ON EACH OUTPUT THAT DRIVES AN INDUCTIVE DEVICE (COIL), SUCH AS A RELAY.

## 2.5.4. Digital Inputs

You can connect the digital inputs to current sourcing or current sinking devices but you must connect all four inputs in the same configuration. Refer to Figure 2-42 and Figure 2-43. The digital inputs are not designed for high-voltage isolation applications. They should only be used with ground-referenced circuits.

Table 2-42: Digital Input Specifications

Input Voltage	Input Voltage Approximate Input Current		Turn Off Time
+5 V to +24 V	6 mA	10 µs	43 µs

Table 2-43: Digital Input Pins on the Auxiliary I/O Connector

Pin#	Description	In/Out/Bi
17	Digital Input 0 / CCW EOT Input (1)	Input
18	Digital Input 1 / CW EOT Input (1)	Input
24	Digital Input Common	Output
25	Digital Input 2 / Home Input (1)	Input
26	Digital Input 3	Input
(1) Software configured option		

Figure 2-41: Digital Inputs Schematic (Aux I/O Connector)

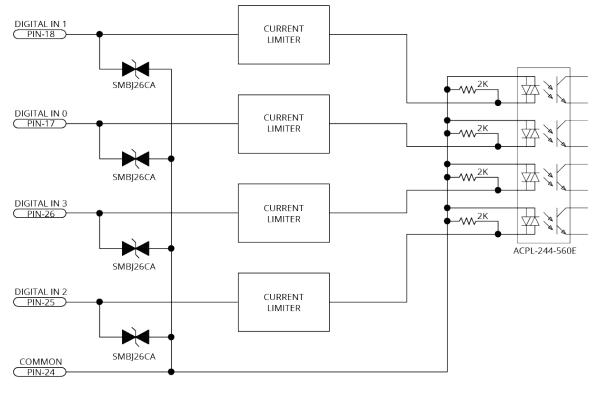


Figure 2-42: Digital Inputs Connected to Current Sourcing Devices


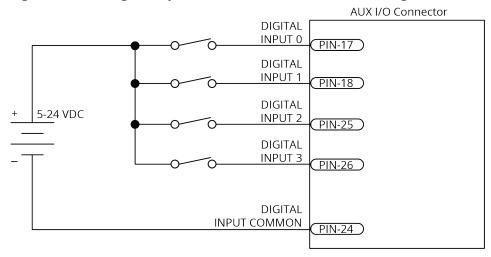


Figure 2-43: Digital Inputs Connected to Current Sinking Devices

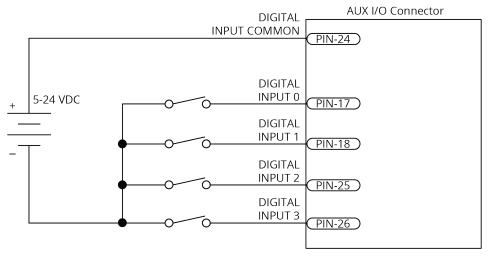

### 2.5.5. High-Speed Inputs

High-speed inputs 20 and 21 can be used as general purpose inputs or as the trigger signal for high speed data collection. Refer to the DriveDataCaptureConfigureTrigger() function [A3200: DATAACQ TRIGGER command] topic in the Help file for more information.

You can use the external PSO synchronization functions [A3200: PSOOUTPUT PULSE EXTSYNC command] to synchronize waveform generation with an external synchronization signal. When you activate this feature, the PSO Waveform module will not generate the configured waveform when an output event is received until the rising edge of the synchronization signal occurs.


Table 2-44: High-Speed Input Specifications

Specification	Value		
Input Voltage	5V - 24 V input voltages		
Input Current	10 mA		
Input Device	HCPL-0630		
Delay	50 nsec		

Table 2-45: High-Speed Input Pins on the Auxiliary I/O Connector

Pin#	Description	In/Out/Bi
3	High-Speed Input 20 + / PSO External Sync. +	Input
4	High-Speed Input 20 - / PSO External Sync	Input
5	High-Speed Input 21 +	Input
6	High-Speed Input 21 -	Input

Figure 2-44: High-Speed Inputs

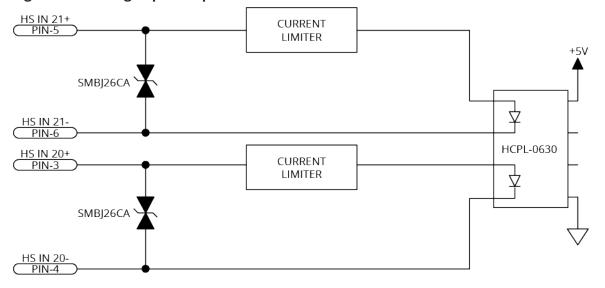

## 2.5.6. Analog Output O

The analog output can be set from within a program or it can be configured to echo the state of select servo loop nodes.

The analog output is set to zero when you power on the system or reset the drive.


**Table 2-46: Analog Output Specifications** 

Specification	Value
Output Voltage	-10 V to +10 V
Output Current	5 mA
Resolution (bits)	16 bits

Table 2-47: Analog Output Pins on the Auxiliary I/O Connector

Pin#	Description	In/Out/Bi
22	Analog Output 0	Output
23	Analog Common	Output

Figure 2-45: Analog Output 0 Schematic

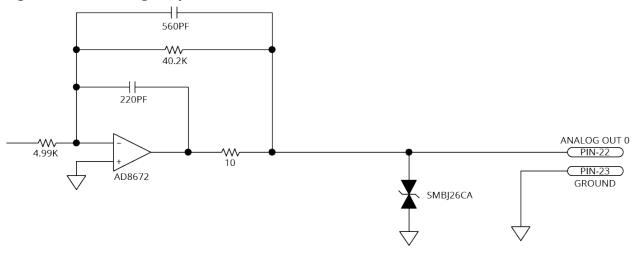

## 2.5.7. Analog Input O (Differential)

To interface to a single-ended, non-differential voltage source, connect the signal common of the source to the negative input and connect the analog source signal to the positive input. A floating signal source must be referenced to the analog common. Refer to Figure 2-46.


**Table 2-48: Analog Input Specifications** 

Specification	Value	
(AI+) - (AI-)	+10 V to -10 V <sup>(1)</sup>	
Resolution (bits)	16 bits	
Input Impedance	1 ΜΩ	
1. Signals outside of this range may damage the input		

Table 2-49: Analog Input Pins on the Auxiliary I/O Connector

Pin#	Description	In/Out/Bi
13	Analog Input 0+ (Differential)	Input
14	Analog Input 0- (Differential)	Input
23	Analog Common	Output

Figure 2-46: Analog Input 0 Schematic

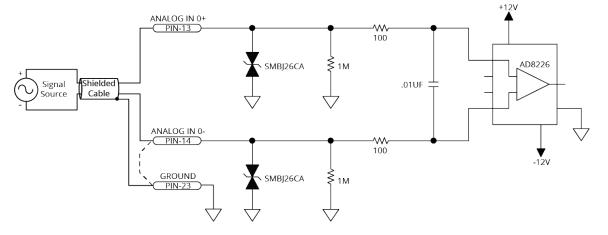

# 2.6. Brake Power Supply Connector

This port is the power supply connection to the on-board brake control circuit. Refer to Section 2.3.6. for more information about the brake output interface.

**Table 2-50: Brake Power Supply Connector Pinout** 

Pin#	Description	In/Out/Bi	Connector
1	Brake Power Supply (+)	Input	+
2	Brake Power Supply (-)	Input	<b>-</b>

**Table 2-51: Mating Connector Part Numbers for the Brake Power Supply Connector** 

Description	Aerotech P/N	Phoenix P/N	Tightening Torque (Nm)	Wire Size: AWG [mm²]
2-Pin Terminal Block	ECK02390	1827616	0.22 - 0.25	0.14 - 1.5 [26-16]

# 2.7. HyperWire Interface

The HyperWire bus is the high-speed communications connection from the controller. It operates at 2 gigabits per second. The controller sends all command and configuration information through the HyperWire bus.

HyperWire cables can be safely connected to or disconnected from a HyperWire port while the PC and/or drive is powered on. However, any changes to the HyperWire network topology will disrupt communication and you must reset the controller to re-establish communication.



**WARNING**: Do not connect or disconnect HyperWire cables while you are loading firmware or damage to the drives may occur.

## Table 2-52: HyperWire Card Part Number

Part Number	Description
HYPERWIRE-PCIE	HyperWire adapter, PCle x4 interface

### **Table 2-53: HyperWire Cable Part Numbers**

Part Number	Description
HYPERWIRE-AO10-5	HyperWire cable, active optical, 0.5 m
HYPERWIRE-AO10-10	HyperWire cable, active optical, 1.0 m
HYPERWIRE-AO10-30	HyperWire cable, active optical, 3.0 m
HYPERWIRE-AO10-50	HyperWire cable, active optical, 5.0 m
HYPERWIRE-AO10-200	HyperWire cable, active optical, 20.0 m

# 2.8. External Shunt Option [-SX1]

4

**DANGER**: The shunt resistor dissipates a high quantity of power. To prevent the danger of electric shock or fire, you must obey the precautions that follow:

- Correctly size, mount, and protect the external shunt resistor.
- Do not touch the shunt resistor terminals. There are lethal voltages on the terminals.
- Do not touch the surface of the drive or the external shunt resistor. The temperature can exceed 70°C.
- Restrict access to the shunt resistor while it is connected to a power source.

The -SX1 option provides a connection for a user-provided shunt resistor to dissipate excess energy and keep the internal drive voltage within safe levels. The drive switches this resistor "ON" when the internal bus voltage reaches approximately 380 VDC. This option is generally required for systems that have a large amount of stored mechanical energy that must be dissipated during deceleration.

Table 2-54: -SX1 Component Information

Component	Description	Aerotech P/N
Recommended Shunt Resistor	50 Ω (min), 300 W	ECR01039
Recommended Sharit Resistor	Vishay/Dale: RBEF030050R00KFBVT	ECK01039
	Screw Torque Value: 0.6 - 0.8 N·m	
1-Pin Mating Connector [QTY. 2]	Wire Size: 0.2 - 6 mm <sup>2</sup> [24-10 AWG]	ECK02452
	Phoenix: 0708250	
F101 Fuse on the Control Board	8 A S.B.	EIF01022
Recommended Wire Size	16 AWG (1.3 mm <sup>2</sup> ) High Temperature	

### **Equation 1:**

Calculate the kinetic energy of the system. Any energy that is not lost to the system could be regenerated to the DC bus.

$$E_M = \left[rac{1}{2}
ight] \left[J_M + J_L
ight] \omega_M^2$$
 or  $E_M = \left[rac{1}{2}
ight] \left[M_M + M_L
ight] v_M^2$  (for inear motors)

J<sub>M</sub> rotor inertia (kg⋅m²)

J<sub>L</sub> load inertia (kg⋅m²)

 $\omega_{\rm m}$  motor speed before deceleration (rad/s)

 $M_M$  forcer mass (kg)  $M_L$  load mass (kg)  $v_m$  velocity (m/s)

#### **Equation 2:**

You will need a shunt resistor if the regenerated energy is greater than the Maximum Additional Storage Energy that the internal bus capacitor can store (Table 2-55).

$$E_{Ca}=rac{1}{2}C\left(V_{M}^{2}-V_{NOM}^{2}
ight)$$

C bus capacitor (F) [1,200 μF]

V<sub>M</sub> turn on voltage for shunt circuit (V) [380 V] nominal bus voltage (V) [160 V or 320 V, Typical]

V<sub>NOM</sub> [160 V or 320 V, Typical]

Table 2-55: Maximum Additional Storage Energy for a Standard iXC4e/XC4e

Bus Voltage	Maximum Additional Energy
160 V	71.3 J
320 V	25.2 J

If a shunt resistor is required, calculate the value of resistance necessary to dissipate the energy.

### Equations 3, 4, and 5:

Calculate the parameters of the shunt resistor.

### **Equation 3:**

$$P_{PEAK} = rac{E_M - E_{Ca}}{t_D}$$

 $P_{\text{PEAK}}$  peak power that the regeneration circuit must accommodate (W)  $t_{\text{D}}$  deceleration time (s)

### **Equation 4:**

$$P_{AV} = rac{E_M - E_{Ca}}{t_{CYCLE}}$$

P<sub>AV</sub> average power dissipated on shunt resistor (W)

t<sub>CYCLE</sub> time between deceleration events (s)

## **Equation 5:**

$$R=rac{\left(2V_{M}-V_{HYS}
ight)^{2}}{4P_{PEAK}}$$

V<sub>HYS</sub> hysteresis voltage of regeneration circuit (V) [10 V, Typical]

### Additional useful equations:

1 lb·ft = 1.356 N·m

1 rad/s = 9.55 rpm

## 2.9. Sync Port

The Sync port is a bi-directional high speed proprietary interface that lets you transmit encoder signals between drives. This is typically used for multi-axis PSO applications where one or two drives send their encoder signals to a main drive that has the PSO logic and PSO output signal. The drive contains two Sync ports, labeled A and B.

To avoid signal contention, all Sync ports default to the input state during reset and immediately after power is applied to the drive.

**Table 2-56: Sync-Related Functions** 

Function	Description	
DriveEncoderOutputConfigureDivider(),		
DriveEncoderOutputConfigureInput(),		
DriveEncoderOutputOn(),	Configure each Sync port as an input or an output	
DriveEncoderOutputOff()		
[A3200: ENCODER OUT command]		
PsoDistanceConfigureInputs()		
[A3200: PSOTRACK INPUT command]	Let the PSO to track the SYNC A or SYNC B port.	
PsoWindowConfigureInput()	Let the P30 to track the 31NC A of 31NC B port.	
[A3200: PSOWINDOW INPUT command]		

The Sync port uses low-voltage differential signaling (LVDS) and standard USB 3.0 type A (cross over) cables.

**Table 2-57: Sync Port Cables** 

,	
Part Number	Desciption
CBL-SYNC-3	Length 3 dm; Connectors: USB Type A to USB Type A
CBL-SYNC-5	Length 5 dm; Connectors: USB Type A to USB Type A
CBL-SYNC-7	Length 7 dm; Connectors: USB Type A to USB Type A
CBL-SYNC-10	Length 10 dm; Connectors: USB Type A to USB Type A

# 2.10. System Interconnection

Figure 2-47: Drive-Based System Wiring Drawing (Best Practice)

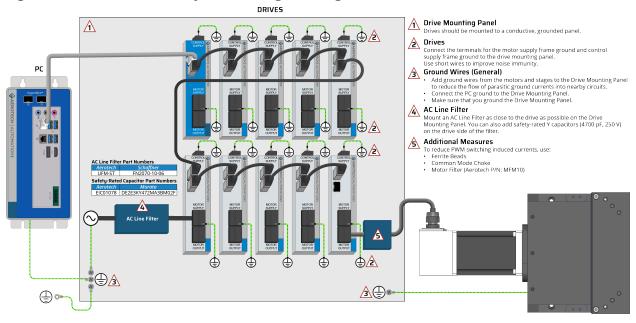
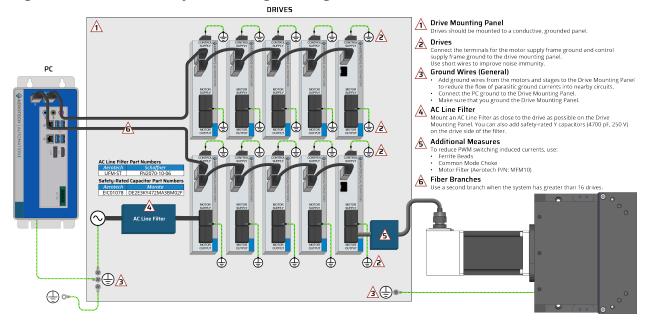


Figure 2-48: PC-Based System Wiring Drawing (Best Practice)



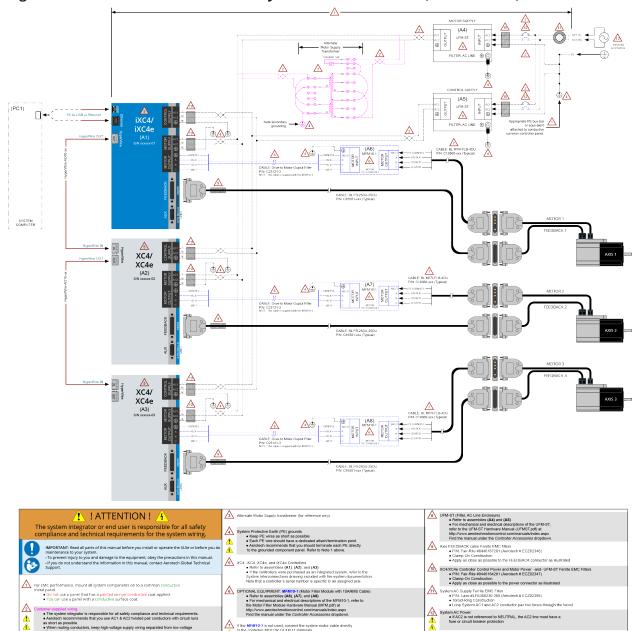


Figure 2-49: Drive-Based Controller System Interconnection (Best Practice)

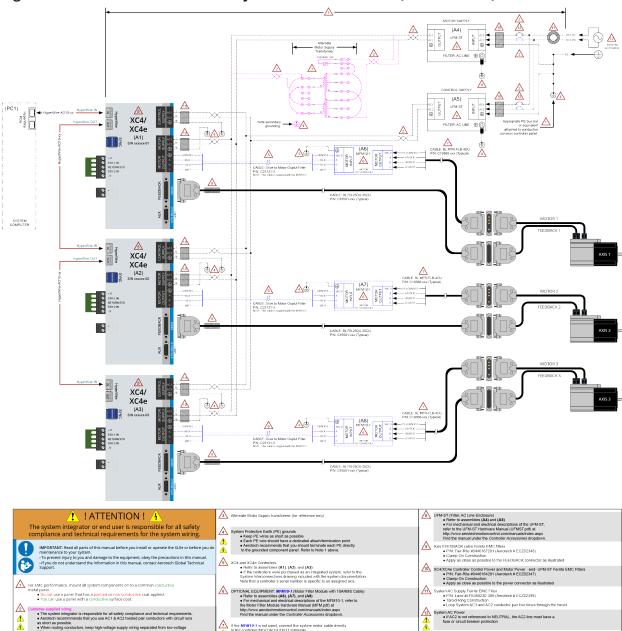


Figure 2-50: PC-Based Controller System Interconnection (Best Practice)

# 2.11. PC Configuration and Operation Information


For more information about hardware requirements, PC configuration, programming, system operation, and utilities, refer to the Help file.



# Chapter 3: -EB1 I/O Option Board

The -EB1 I/O option board has 16 digital inputs, 16 digital outputs, 3 analog inputs, 3 analog outputs, and PSO outputs.

Figure 3-1: -EB1 I/O Option Board Connectors (iXC4e shown)

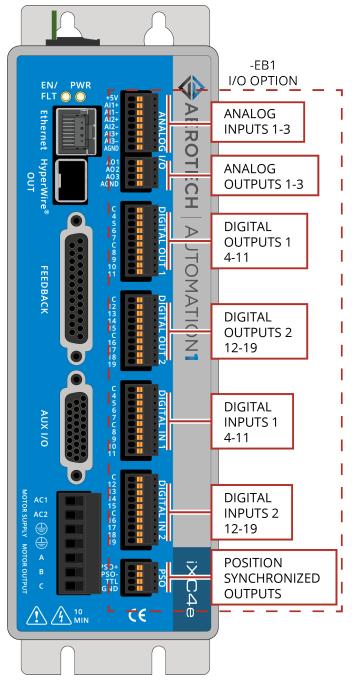

# 3.1. Digital Outputs [-EB1]

Optically-isolated solid-state relays drive the digital outputs. You can connect the digital outputs in current sourcing or current sinking mode but you must connect all four outputs in a port in the same configuration. Refer to Figure 3-3 and Figure 3-4.

The digital outputs are not designed for high-voltage isolation applications and they should only be used with ground-referenced circuits.

You must install suppression diodes on digital outputs that drive relays or other inductive devices. To see an example of a current sourcing output that has diode suppression, refer to Figure 3-3. To see an example of a current sinking output that has diode suppression, refer to Figure 3-4.

The digital outputs have overload protection. They will resume normal operation when the overload is removed.

Table 3-1: Digital Output Specifications [-EB1]

<b>Digital Output Specifications</b>	Value
Maximum Voltage	24 V (26 V Maximum)
Maximum Sink/Source Current	250 mA/output
Output Saturation Voltage	0.9 V at maximum current
Output Resistance	3.7 Ω
Rise / Fall Time	250 μs (2K pull up to 24V)
Reset State	Output Off (High Impedance State)

Table 3-2: Digital Output 1 Connector Pinout [-EB1]

Pin#	Description	In/Out/Bi	Connector
1	Output Common for Outputs 4-7	Output	
2	Output 4 (Optically-Isolated)	Output	
3	Output 5 (Optically-Isolated)	Output	4
4	Output 6 (Optically-Isolated)	Output	5   6
5	Output 7 (Optically-Isolated)	Output	7
6	Output Common for Outputs 8-11	Output	<b>©  </b>
7	Output 8 (Optically-Isolated)	Output	8
8	Output 9 (Optically-Isolated)	Output	10
9	Output 10 (Optically-Isolated)	Output	11
10	Output 11 (Optically-Isolated)	Output	

Table 3-3: Mating Connector Part Numbers for the Digital Output 1 Connector [-EB1]

<b>Mating Connector</b>	Aerotech P/N	Third Party P/N	Wire Size: mm² [AWG]
10-Pin Terminal Block	ECK02395	Phoenix 1700841	0.5 - 0.14 [20-26]

Table 3-4: Digital Output 2 Connector Pinout [-EB1]

Pin#	Description	In/Out/Bi	Connector
1	Output Common for Outputs 12-15	Output	
2	Output 12 (Optically-Isolated)	Output	<b>©  </b> •
3	Output 13 (Optically-Isolated)	Output	12
4	Output 14 (Optically-Isolated)	Output	13 14
5	Output 15 (Optically-Isolated)	Output	15
6	Output Common for Outputs 16-19	Output	C I -
7	Output 16 (Optically-Isolated)	Output	16
8	Output 17 (Optically-Isolated)	Output	17
9	Output 18 (Optically-Isolated)	Output	18 <b>   </b>
10	Output 19 (Optically-Isolated)	Output	

Table 3-5: Mating Connector Part Numbers for the Digital Output 2 Connector [-EB1]

Mating Connector	Aerotech P/N	Third Party P/N	Wire Size: mm² [AWG]
10-Pin Terminal Block	ECK02395	Phoenix 1700841	0.5 - 0.14 [20-26]

COMMON PIN-1 DIGITAL OUT 4 -**W**-3.3 Ω CPC1019N DIGITAL OUT 5 CPC1019N DIGITAL OUT 6
PIN-4 -**W**-3.3 Ω CPC1019N DIGITAL OUT 7 CPC1019N

Figure 3-2: **Digital Outputs Schematic [-EB1]** 

Digital Output Connector [-EB1]

PIN-1

DIGITAL OUTPUT 4

PIN-2

DIGITAL OUTPUT 5

DIGITAL OUTPUT 6

DIGITAL OUTPUT 6

DIGITAL OUTPUT 7


DIGITAL OUTPUT 7

DIGITAL OUTPUT 7

Figure 3-3: Digital Outputs Connected in Current Sourcing Mode [-EB1]

↑ DIODE REQUIRED ON EACH OUTPUT THAT DRIVES AN INDUCTIVE DEVICE (COIL), SUCH AS A RELAY.

Figure 3-4: Digital Outputs Connected in Current Sinking Mode [-EB1]

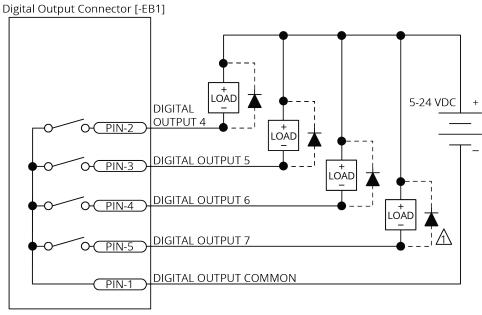

DIODE REQUIRED ON EACH OUTPUT THAT DRIVES AN INDUCTIVE DEVICE (COIL), SUCH AS A RELAY.

# 3.2. Digital Inputs [-EB1]

Input bits are arranged in groups of 4 and each group shares a common pin. This lets a group be connected to current sourcing or current sinking devices, based on the connection of the common pin in that group.

To be able to connect an input group to current sourcing devices, connect the input group's common pin to the power supply return (-). Refer to Figure 3-6.

To be able to connect an input group to current sinking devices, connect the input group's common pin to the power supply source (+). Refer to Figure 3-7.

The digital inputs are not designed for high-voltage isolation applications. They should only be used with ground-referenced circuits.

**Table 3-6: Digital Input Specifications [-EB1]** 

Input Voltage	Approximate Input Current	Turn On Time	Turn Off Time
+5 V to +24 V	6 mA	10 µs	43 µs

**Table 3-7: Digital Input 1 Connector Pinout [-EB1]** 

Pin#	Description	In/Out/Bi	Connector
1	Input Common for Inputs 4-7	Output	
2	Input 4 (Optically-Isolated)	Input	
3	Input 5 (Optically-Isolated)	Input	4
4	Input 6 (Optically-Isolated)	Input	6
5	Input 7 (Optically-Isolated)	Input	7
6	Input Common for Inputs 8-11	Output	<b>G</b>
7	Input 8 (Optically-Isolated)	Input	8
8	Input 9 (Optically-Isolated)	Input	10
9	Input 10 (Optically-Isolated)	Input	11
10	Input 11 (Optically-Isolated)	Input	

Table 3-8: Mating Connector Part Numbers for the Digital Input 1 Connector [-EB1]

<b>Mating Connector</b>	Aerotech P/N	Third Party P/N	Wire Size: mm <sup>2</sup> [AWG]
10-Pin Terminal Block	ECK02395	Phoenix 1700841	0.5 - 0.14 [20-26]


Table 3-9: Digital Input 2 Connector Pinout [-EB1]

Pin#	Description	In/Out/Bi	Connector
1	Input Common for Inputs 12-15	Output	
2	Input 12 (Optically-Isolated)	Input	<b>C II</b> •
3	Input 13 (Optically-Isolated)	Input	12
4	Input 14 (Optically-Isolated)	Input	13
5	Input 15 (Optically-Isolated)	Input	15
6	Input Common for Inputs 16-19	Output	<b>©</b>   •
7	Input 16 (Optically-Isolated)	Input	16
8	Input 17 (Optically-Isolated)	Input	17
9	Input 18 (Optically-Isolated)	Input	18
10	Input 19 (Optically-Isolated)	Input	

Table 3-10: Mating Connector Part Numbers for the Digital Input 2 Connector [-EB1]

<b>Mating Connector</b>	Aerotech P/N	Third Party P/N	Wire Size: mm <sup>2</sup> [AWG]
10-Pin Terminal Block	ECK02395	Phoenix 1700841	0.5 - 0.14 [20-26]

Figure 3-5: Digital Inputs Schematic [-EB1]

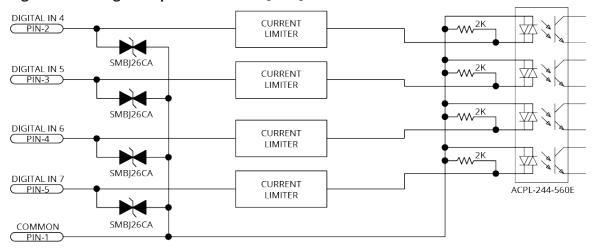



**IMPORTANT**: Each bank of four inputs must be connected in an all sourcing or all sinking configuration.

Figure 3-6: Digital Inputs Connected to Current Sourcing (PNP) Devices [-EB1]


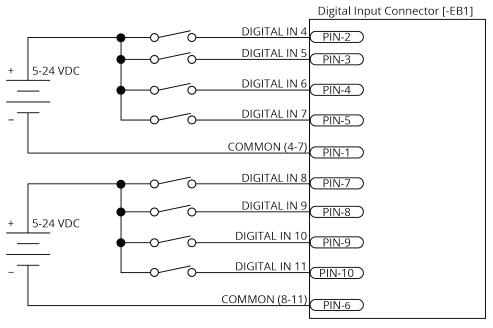


Figure 3-7: Digital Inputs Connected to Current Sinking (NPN) Devices [-EB1]

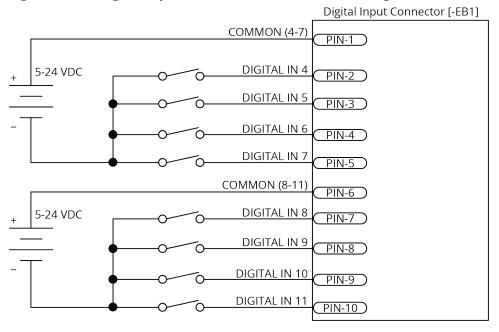

# 3.3. Analog Outputs [-EB1]

The analog outputs can be set from within a program or they can be configured to echo the state of select servo loop nodes.

The analog outputs are set to zero when you power on the system or reset the drive.

Table 3-11: Analog Output Specifications [-EB1]

0 1 1	-
Specification	Value
Output Voltage	-10 V to +10 V
Output Current	5 mA
Resolution (bits)	16 bits


**Table 3-12: Analog Output Connector Pinout [-EB1]** 

Pin #	Description	In/Out/Bi	Connector
1	Analog Output 1	Output	
2	Analog Output 2	Output	2
3	Analog Output 3	Output	3    •
4	Ground	N/A	4

**Table 3-13:** Mating Connector Part Numbers for the Analog Output Connector [-EB1]

Туре	Aerotech P/N	Third Party P/N	Wire Size: mm² [AWG]
4-Pin Terminal Block	ECK02399	Phoenix 1768004	0.5- 0.14 [20-26]

Figure 3-8: Analog Output Typical Connection [-EB1]

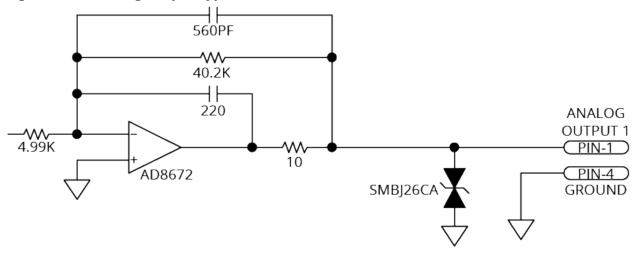

# 3.4. Analog Inputs [-EB1]

To interface to a single-ended, non-differential voltage source, connect the signal common of the source to the negative input and connect the analog source signal to the positive input. A floating signal source must be referenced to the analog common. Refer to Figure 3-9.

Table 3-14: Differential Analog Input Specifications [-EB1]

Specification	Value			
(Al+) - (Al-)	+10 V to -10 V <sup>(1)</sup>			
Resolution (bits)	16 bits			
Input Impedance	1 ΜΩ			
1. Signals outside of this range may damage the input				


Table 3-15: Analog Input Connector Pinout [-EB1]

Pin#	Description	In/Out/Bi	Connector
1	+5V (250 mA max)	Output	
2	Analog Input 1+	Input	
3	Analog Input 1-	Input	3
4	Analog Input 2+	Input	4
5	Analog Input 2-	Input	5
6	Analog Input 3+	Input	<b>6 1</b> •
7	Analog Input 3-	Input	7
8	Ground	N/A	8

Table 3-16: Mating Connector Part Numbers for the Analog Input Connector [-EB1]

<b>Mating Connector</b>	Aerotech P/N	Third Party P/N	Wire Size: mm² [AWG]
8-Pin Terminal Block	ECK02397	Phoenix 1908101	0.5 - 0.14 [20-26]

Figure 3-9: Analog Input Typical Connection [-EB1]

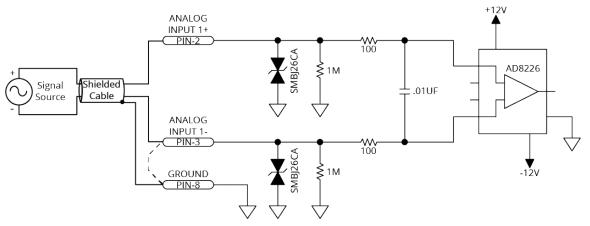

# 3.5. Position Synchronized Output Interface [-EB1]

The PSO output signal is available on the -EB1 option board in two signal formats: TTL and Isolated. The PSO signal is also available on the AUX I/O connector. Refer to Section 2.5.2.

Table 3-17: PSO Specifications [-EB1]

Specification	Value	
Output	TTL	5 V, 16 mA (max)
σιτραί	Isolated	5-24 V, 250 mA
Maximum PSO Output (Fire) Frequency	TTL	12.5 MHz
Maximum F30 Output (Fire) Frequency	Isolated	5 MHz
Output Latency	TTL	5 ns
[Fire event to output change]	Isolated	150 ns

**Table 3-18: PSO Interface Connector Pinout [-EB1]** 

Pin #	Description	In/Out/Bi	Connector
1	PSO Output+	Output	
2	PSO Output-	Output	2
3	PSO Output (TTL)	Output	3
4	Ground	N/A	4

Table 3-19: Mating Connector Part Numbers for the PSO Interface Connector [-EB1]

Туре	Aerotech P/N	Third Party P/N	Wire Size: mm² [AWG]
4-Pin Terminal Block	ECK02399	Phoenix 1768004	0.5- 0.14 [20-26]


#### **Isolated Signals**

This output signal is a fully-isolated 5-24V compatible output capable of sourcing or sinking current. This output is normally open and only conducts current when a PSO fire event occurs.

The PSO Isolated Outputs are overload protected and will turn off if the maximum output current is exceeded.

Figure 3-10: PSO Output Sources Current


Figure 3-11: PSO Output Sinks Current

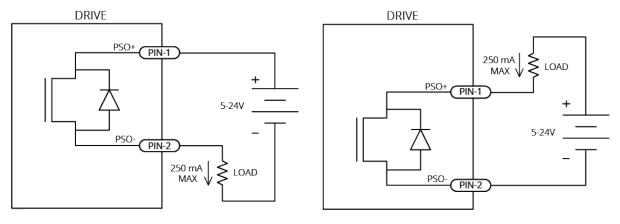

#### **TTL Signals**

This output signal is a 5V TTL signal which is used to drive an opto coupler or general purpose TTL input. This signal is active high and is driven to 5V when a PSO fire event occurs.

Figure 3-12: PSO TTL Outputs Schematic

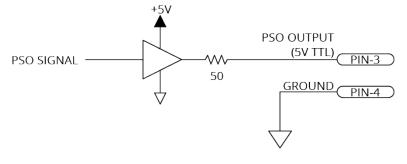

# **Chapter 4: Cables and Accessories**



**IMPORTANT**: Find Aerotech cable drawings on the website at http://www.aerotechmotioncontrol.com/manuals/index.aspx.

## **Table 4-1: Standard Interconnection Cables**


Cable Part #	Description	
Joystick	Refer to Section 4.1.	
ECZ01231	BBA32 Interconnect Cable	
ENET-CAT5e-xx <sup>(1, 2)</sup>	Ethernet CAT5e Cable	
USB-AMCM-xx <sup>(1, 2)</sup>	USB Cable A-Male to C-Male	
(1) The "-xx" indicates length in decimeters.		
(2) iXC4e Only		

# 4.1. Joystick Interface

Aerotech Multi-Axis Joystick (NEMA12 (IP54) rated) is powered from 5 V and has a nominal 2.5 V output in the center detent position. Three buttons are used to select axis pairs and speed ranges. An optional interlock signal is used to indicate to the controller that the joystick is present. Joystick control will not activate unless the joystick is in the center location. Third party devices can be used provided they produce a symmetric output voltage within the range of -10 V to +10 V.

Connecting joystick with an Aerotech cable, all Aerotech cables are labeled to identify the connector and connections. The joystick parameters must be set to match the analog and digital I/O connections. Refer to the Help file for programming information about how to change joystick parameters.

Figure 4-1: Two Axis Joystick Interface (to the Aux I/O of two drives)

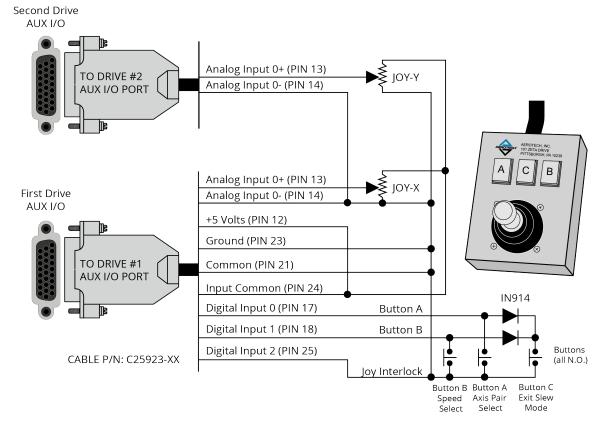

≨ joy-y В +5V (PIN 1) +5V ≸JOY-X (PIN 2) (PIN 3) AI1+ JOY-X AI1+ Al1-Common AI1 -(PIN 4) (PIN 5) AI2+ JOY-Y Al2+ Al2-AI2-Common AI3+ AI3 -AGND AGND (PIN 8) Common C (PIN 1) +5V IN914 C 4 5 6 7 C 8 9 10 4 (PIN 2) 5 (PIN 3) 6 (PIN 4) Button A Button B Joy Interlock Buttons (all N.O.) Button B Button A Button C Speed Axis Pair Exit Slew Select Mode Select CABLE P/N: C25926-XX

Figure 4-2: Two Axis Joystick Interface (to the I/O board)

## 4.2. Handwheel Interface

A handwheel can be used to manually control axis position. The handwheel must provide 5V differential quadrature signals to the drive.



**IMPORTANT**: You can find instructions on how to enable the handwheel in the online Help file.

Connect a handwheel to the Aux I/O as shown in Figure 4-3 or Figure 4-4.

Figure 4-3: Handwheel Interconnection to Aux I/O Connector


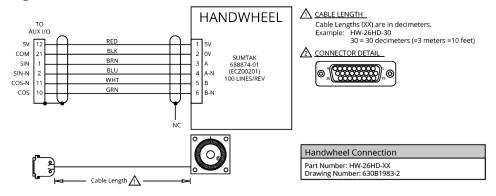


Figure 4-4: Handwheel Interconnection to the Aux I/O through a BBA32 Module



# **Chapter 5: Maintenance**

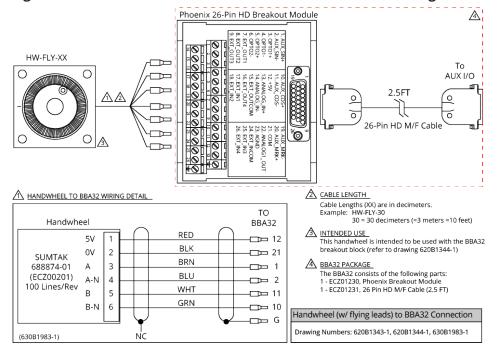

**IMPORTANT**: For your own safety and for the safety of the equipment:

- Do not remove the cover of the iXC4e/XC4e.
- Do not attempt to access the internal components.

A fuse that needs to be replaced indicates that there is a more serious problem with the system or setup. Contact Global Technical Support for assistance.

**DANGER**: If you must remove the covers and access any internal components be aware of the risk of electric shock.



- 1. Disconnect the Mains power connection.
- 2. Wait at least ten (10) minutes after removing the power supply before doing maintenance or an inspection. Otherwise, there is the danger of electric shock.
- 3. All tests must be done by an approved service technician. Voltages inside the controller and at the input and output power connections can kill you.

## Table 5-1: LED Description

LED	Color	Description	
PWR	GREEN	The light will illuminate and remain illuminated while power is applied.	
EN/FLT	GREEN	The axis is Enabled.	
	RED	The axis is in a Fault Condition.	
	GREEN/RED (alternates)	The axis is Enabled in a Fault Condition.	
		or	
		The light is configured to blink for setup.	

### Table 5-2: Troubleshooting

Symptom	Possible Cause and Solution
No Communication	Make sure the power LED is illuminated (this indicates that power is present).
	Make sure that all communication cables (HyperWire, for example) are fully inserted in their ports.

### 5.1. Preventative Maintenance

Do an inspection of the iXC4e/XC4e and the external wiring one time each month. It might be necessary to do more frequent inspections based on:

- The operating conditions of the system.
- How you use the system.

**Table 5-3: Preventative Maintenance** 

Check	Action to be Taken
Examine the chassis for hardware and parts that are damaged or loose. It is not necessary to do an internal inspection unless you think internal damage occurred.	Repair all damaged parts.
Do an inspection of the cooling vents.	Remove all material that collected in the vents.
Examine the work area to make sure there are no fluids and no electrically conductive materials.	Do not let fluids and electrically conductive material go into the chassis.
Examine all cables and connections to make sure they are correct.	Make sure that all connections are correctly attached and not loose. Replace cables that are worn. Replace all broken connectors.

## Cleaning



**DANGER**: Before you clean the iXC4e/XC4e, disconnect the electrical power from the drive.

Use a clean, dry, soft cloth to clean the iXC4e/XC4e. If necessary, use a cloth that is moist with water or isopropyl alcohol. If you use a moist cloth, make sure that moisture does not go into the drive. Also make sure that it does not go onto the outer connectors and components. Internal contamination from the cleaning solution can cause corrosion and electrical short circuits.

Do not clean the labels with a cleaning solution because it might remove the label information.

# **5.2. Fuse Specifications**



**WARNING**: Replace fuses only with the same type and value.

**Table 5-4: Control Board Fuse Specifications** 

Fuse	Description	Size	SCCR (1)	Aerotech P/N	Third Party P/N
F100	Control Power at Line Input (L)	2 A S.B.	35 A	EIF01044	Littelfuse 0877002.MXEP
F101	-SX1 (External Shunt) Option	8 A S.B.	1500 A	EIF01022	Littelfuse 0215008.HXP
F102	Motor Bus Supply at AC1 (-10 Peak Current Option)	5 A S.B.	1500 A	EIF01023	Littelfuse 215005.HXP
	Motor Bus Supply at AC1 (-20/-30 Peak Current Option)	10 A S.B.		EIF01020	Littelfuse 0215010.HXP
(1) Short	circuit current rating.				

This page intentionally left blank.

## **Appendix A: Warranty and Field Service**

Aerotech, Inc. warrants its products to be free from harmful defects caused by faulty materials or poor workmanship for a minimum period of one year from date of shipment from Aerotech. Aerotech's liability is limited to replacing, repairing or issuing credit, at its option, for any products that are returned by the original purchaser during the warranty period. Aerotech makes no warranty that its products are fit for the use or purpose to which they may be put by the buyer, whether or not such use or purpose has been disclosed to Aerotech in specifications or drawings previously or subsequently provided, or whether or not Aerotech's products are specifically designed and/or manufactured for buyer's use or purpose. Aerotech's liability on any claim for loss or damage arising out of the sale, resale, or use of any of its products shall in no event exceed the selling price of the unit.

THE EXPRESS WARRANTY SET FORTH HEREIN IS IN LIEU OF AND EXCLUDES ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, BY OPERATION OF LAW OR OTHERWISE. IN NO EVENT SHALL AEROTECH BE LIABLE FOR CONSEQUENTIAL OR SPECIAL DAMAGES.

#### **Return Products Procedure**

Claims for shipment damage (evident or concealed) must be filed with the carrier by the buyer. Aerotech must be notified within thirty (30) days of shipment of incorrect material. No product may be returned, whether in warranty or out of warranty, without first obtaining approval from Aerotech. No credit will be given nor repairs made for products returned without such approval. A "Return Materials Authorization (RMA)" number must accompany any returned product(s). The RMA number may be obtained by calling an Aerotech service center or by submitting the appropriate request available on our website (www.aerotech.com). Products must be returned, prepaid, to an Aerotech service center (no C.O.D. or Collect Freight accepted). The status of any product returned later than thirty (30) days after the issuance of a return authorization number will be subject to review.

Visit Global Technical Support Portal for the location of your nearest Aerotech Service center.

## **Returned Product Warranty Determination**

After Aerotech's examination, warranty or out-of-warranty status will be determined. If upon Aerotech's examination a warranted defect exists, then the product(s) will be repaired at no charge and shipped, prepaid, back to the buyer. If the buyer desires an expedited method of return, the product(s) will be shipped collect. Warranty repairs do not extend the original warranty period.

**Fixed Fee Repairs** - Products having fixed-fee pricing will require a valid purchase order or credit card particulars before any service work can begin.

**All Other Repairs** - After Aerotech's evaluation, the buyer shall be notified of the repair cost. At such time the buyer must issue a valid purchase order to cover the cost of the repair and freight, or authorize the product(s) to be shipped back as is, at the buyer's expense. Failure to obtain a purchase order number or approval within thirty (30) days of notification will result in the product(s) being returned as is, at the buyer's expense.

Repair work is warranted for ninety (90) days from date of shipment. Replacement components are warranted for one year from date of shipment.

#### **Rush Service**

At times, the buyer may desire to expedite a repair. Regardless of warranty or out-of-warranty status, the buyer must issue a valid purchase order to cover the added rush service cost. Rush service is subject to Aerotech's approval.

#### **On-site Warranty Repair**

If an Aerotech product cannot be made functional by telephone assistance or by sending and having the customer install replacement parts, and cannot be returned to the Aerotech service center for repair, and if Aerotech determines the problem could be warranty-related, then the following policy applies:

Aerotech will provide an on-site Field Service Representative in a reasonable amount of time, provided that the customer issues a valid purchase order to Aerotech covering all transportation and subsistence costs. For warranty field repairs, the customer will not be charged for the cost of labor and material. If service is rendered at times other than normal work periods, then special rates apply.

If during the on-site repair it is determined the problem is not warranty related, then the terms and conditions stated in the following "On-Site Non-Warranty Repair" section apply.

## **On-site Non-Warranty Repair**

If any Aerotech product cannot be made functional by telephone assistance or purchased replacement parts, and cannot be returned to the Aerotech service center for repair, then the following field service policy applies:

Aerotech will provide an on-site Field Service Representative in a reasonable amount of time, provided that the customer issues a valid purchase order to Aerotech covering all transportation and subsistence costs and the prevailing labor cost, including travel time, necessary to complete the repair.

#### **Service Locations**

http://www.aerotech.com/contact-sales.aspx?mapState=showMap

USA,	CA	IAN	DA,	MEXIC	(
	Ae	rote	ch, I	lnc.	
-					

Global Headquarters

**TAIWAN** 

Aerotech Taiwan Full-Service Subsidiary **CHINA** 

Aerotech China Full-Service Subsidiary

**UNITED KINGDOM** 

Aerotech United Kingdom Full-Service Subsidiary **GERMANY** 

Aerotech Germany Full-Service Subsidiary

# **Appendix B: Revision History**

Revision	Description
	The following sections have been updated:
2.03	• Section 2.1.2.
	Section 5.2.
	The following sections have been updated:
2.02	EU Declaration of Conformity
2.02	Agency Approvals
	Added iXC4e
2.01	Absolute Encoder support on the Auxiliary I/O connector has been added.
2.01	System Wiring (best practices) drawing has been added
2.00	General Update
	The following sections have been updated:
1.02	Agency Approvals
	Section 2.3.1. Primary Encoder Inputs
	Section 2.5.1. Auxiliary Encoder Inputs
	The following sections have been updated:
1.01	• Section 2.1.2.
1.00	Section 2.10.  New Manage I
1.00	New Manual

This page intentionally left blank.

Index		Analog Input Typical Connection [-EB1]	100
		Analog Inputs [-EB1]	100
		Analog Output 0 on the Aux I/O Connector	79
-		Analog Output 0 Schematic (Aux I/O Connector)	79
-EB1		Analog Output 0 Specifications (Aux I/O Connector)	79
Analog Inputs	100	Analog Output Connector [-EB1] Mating Connector Part	
Analog Outputs	99	Numbers	99
Digital Inputs	96	Analog Output Connector Pinout [-EB1]	99
Digital Outputs	92	Analog Output Pins (Aux I/O Connector)	79
I/O Option Board	91	Analog Output Specifications [-EB1]	99
Position Synchronized Output (PSO) Interface	101	Analog Output Typical Connection [-EB1]	99
-MX2	49	Analog Outputs [-EB1]	99
	49,69	Aux Connector	
-SX1	,	Analog Encoder	69
External Shunt Option	83	Sine Wave Encoder	69
		Aux I/O Connector	
2		Analog Input 0	80
		Analog Output 0	79
2006/42/EC	9	Auxiliary Encoder Inputs	66
2011/65/EU	9	Digital Inputs	76
2014/30/EU	9	Digital Outputs	73
2014/35/EU	9	High-Speed User Inputs	78
		Position Synchronized Output	71
Α		PSO	71
Absolute Encoder (Auxiliary I/O Connector)	68	Aux I/O Connector Mating Connector Part Numbers	65
Absolute Encoder (Feedback Connector)	48	Auxiliary Encoder Inputs (Aux I/O Connector)	66
Absolute Encoder Schematic (Auxiliary I/O Connector)	68	Auxiliary I/O Connector	65
Absolute Encoder Schematic (Feedback Connector)	48	Absolute Encoder	68
AC line filter	30	Analog Encoder	49
Agency Approvals	11	RS-422 Line Driver Encoder	67
Altitude	27	Sine Wave Encoder	49
Ambient Temperature	27	Square Wave Encoder	67
Analog Encoder (Aux Connector)	69	Auxiliary I/O Connector Pinout	65
Analog Encoder (Auxiliary I/O Connector)	49	Auxiliary I/O Pins (Aux I/O Connector)	66
Analog Encoder Phasing Reference Diagram	69		
Analog Encoder Schematic (Auxiliary I/O Connector)	70	В	
Analog Encoder Specifications (Auxiliary I/O Connector)	69	BiSS absolute encoder	48,68
Analog Encoder Specifications (Feedback Connector)	49	Brake Connected to the Feedback Connector	58
Analog Input 0 on the Aux I/O Connector	80	Brake Control Relay Specifications	58
Analog Input 0 Schematic (Aux I/O Connector)	80	Brake Output Connector Pinout	81
Analog Input 0 Specifications (Aux I/O Connector)	80	•	
Analog Input Connector [-EB1] Mating Connector Part		Brake Outputs (Foodback Connector)	58 50
Numbers	100	Brake Outputs (Feedback Connector)	58 91
Analog Input Connector Pinout [-EB1]	100	Brake Power Supply Connector Mating Connector Part	81
Analog Input Pins (Aux I/O Connector)	80	Brake Power Supply Connector Mating Connector Part Numbers	81

40	Digital Input 1 Connector [-EB1] Mating Connector Part Numbers	96
	Digital Input 1 Connector Pinout [-EB1]	96
40	Digital Input 2 Connector [-EB1] Mating Connector Part	
42	Numbers	97
42	Digital Input 2 Connector Pinout [-EB1]	97
41	Digital Input Pins on the Aux I/O Connector	76
	Digital Input Specifications (Aux I/O Connector)	76
42	Digital Input Specifications [-EB1]	96
	Digital Inputs (Aux I/O Connector)	76
	Digital Inputs [-EB1]	96
	Digital Inputs Connected to a Current Sinking Device [-	
40	•	98
43	• •	- 98
44	•	
	I/O Connector)	77
82	Digital Inputs Connected to Current Sourcing Devices	
85		77
		rt 93
108		93
100		
	Numbers	93
100	Digital Output 2 Connector Pinout [-EB1]	93
OE	Digital Output Pins (Aux I/O Connector)	73
	Digital Output Schematic (Aux I/O Connector)	74
	Digital Output Specifications (Aux I/O Connector)	73
	Digital Output Specifications [-EB1]	92
	Digital Outputs (Aux I/O Connector)	73
	Digital Outputs [-EB1]	92
	Digital Outputs Connected in Current Sinking Mode (Au	
		75
23		ux 75
108	•	, 0
15	EB1]	95
	Digital Outputs Schematic [-EB1]	94
	Dimensions	25
	Dimensions (without -EB1)	25
43	Dimensions with -EB1	26
	Drawing number	15
43	Drive and Software Compatibility	27
43		
9	E	
100	Efficiency of Power Amplifier specifications	23
	40 42 42 41 42 41 42 43 44 82 85 103 108 108 108 23 109 29 29 29 29 29 29 29 29 29 29 29 29 29	Digital Input 1 Connector Pinout [-EB1]  Digital Input 2 Connector [-EB1] Mating Connector Part Numbers  Digital Input 2 Connector Pinout [-EB1]  Digital Input Pins on the Aux I/O Connector  Digital Input Specifications (Aux I/O Connector)  Digital Input Specifications (Aux I/O Connector)  Digital Input Specifications [-EB1]  Digital Inputs (Aux I/O Connector)  Digital Inputs [-EB1]  Digital Inputs Connected to a Current Sinking Device [-EB1]  Digital Inputs Connected to a Current Sourcing Devices (Aux I/O Connector)  Digital Inputs Connected to Current Sourcing Devices (Aux I/O Connector)  Digital Inputs Connected to Current Sourcing Devices (Aux I/O Connector)  Digital Output 1 Connector [-EB1] Mating Connector Pa Numbers  Digital Output 1 Connector Pinout [-EB1]  Digital Output 2 Connector Pinout [-EB1]  Digital Output 2 Connector Pinout [-EB1]  Digital Output 2 Connector Pinout [-EB1]  Digital Output 5 Pecifications (Aux I/O Connector)  Digital Output Specifications (Aux I/O Connector)  Digital Output Specifications (Aux I/O Connector)  Digital Output Specifications [-EB1]  Digital Outputs Secifications (Aux I/O Connector)  Digital Outputs (Aux I/O Connector)  Digital Outputs Connected in Current Sinking Mode (Au I/O Connector)  Digital Outputs Connected in Current Sinking Mode (Au I/O Connector)  Digital Outputs Connected in Current Sinking Mode (Au I/O Connector)  Digital Outputs Connected in Current Sourcing Mode (Aux I/O Connector)  Digital Outputs Connected in Current Sourcing Mode (Aux I/O Connector)  Digital Outputs Connected in Current Sourcing Mode (Aux I/O Connector)  Digital Outputs Schematic (-EB1)  Dimensions  Dimensions (without -EB1)  Dimensions with -EB1  Drawing number  Drive and Software Compatibility

Electrical Safety for Power Drive Systems	9	Feedback Monitoring	41
Electrical Specifications	23	Figure	
Electromagnetic Compatibility (EMC)	9	-EB1 I/O Option Board Connectors	91
EMC/CE Compliance	38	Absolute Encoder Schematic (Auxiliary I/O Connector	) 68
Enclosure	24	Absolute Encoder Schematic (Feedback Connector)	48
encoder		Analog Encoder Schematic (Auxiliary I/O Connector)	70
absolute	48,68	Analog Input 0 Schematic (Aux I/O Connector)	80
Encoder and Hall Signal Diagnostics	41	Analog Input Typical Connection [-EB1]	100
Encoder Fault Input (Feedback Connector)	54	Analog Output 0 Schematic (Aux I/O Connector)	79
Encoder Fault Input Pin on the Feedback Connector	54	Analog Output Typical Connection [-EB1]	99
Encoder Input (Feedback Connector)	46	Brake Connected to the Feedback Connector	58
Encoder Input Pins on the Feedback Connector	46	Brushless Motor Configuration (Motor Power Output	
Encoder Phasing	51	Connector)	40
Encoder Phasing Reference Diagram	51	Control Supply Connections	29
End of Travel Limit Input (Feedback Connector)	55	DC Brush Motor Configuration (Motor Power Output	4.5
End of Travel Limit Input Connections	56	Connector)	43 -
End of Travel Limit Input Diagnostic Display	57	Digital Inputs Connected to a Current Sinking Device   EB1]	- 98
End of Travel Limit Input Pins on the Feedback Conn	ector 55	Digital Inputs Connected to a Current Sourcing Device	
End of Travel Limit Phasing	57	[-EB1]	98
EnDat absolute encoder	48,68	Digital Inputs Connected to Current Sinking Devices	
Environmental Specifications	27	(Aux I/O Connector)	77
EU 2015/863	9	Digital Inputs Connected to Current Sourcing Devices	
examining parts		(Aux I/O Connector)	77
cables	108	Digital Output Schematic (Aux I/O Connector)	74
connections	108	Digital Outputs Connected in Current Sinking Mode (Aux I/O Connector)	75
examining, dangerous fluids	108	Digital Outputs Connected in Current Sourcing Mode	
examining, dangerous material	108	(Aux I/O Connector)	75
External Shunt Option [-SX1]	83	Digital Outputs Schematic [-EB1]	94
		Dimensions (without -EB1)	25
F		Dimensions with -EB1	26
Feedback Connector	45	End of Travel Limit Input Connections	56
Absolute Encoder	48	End of Travel Limit Input Diagnostic Display	57
Brake Outputs	58	Hall-Effect Inputs Schematic	52
Encoder Fault Input	54	High-Speed Inputs	78
Encoder Input Encoder Input	46	Home Limit Input Connections	56
End of Travel Limit Input	55	Home Limit Input Diagnostic Display	57
Hall-Effect Inputs	52	Isolated Output Current Sinks Schematic (PSO)	102
Home Limit Input	55	Isolated Output Current Sources Schematic (PSO)	102
Pinout	45	Motor Supply Connections	30
	45	Outputs Connected in Current Sinking Mode [-IO]	95
Primary Encoder Input RS-422 Line Driver Encoder	46 47	Outputs Connected in Current Sourcing Mode [-EB1]	95
Square Wave Encoder	47 47	Positive Motor Direction	41
	53	PSO Isolated Output Sinks Current	102
Thermistor Input	55 55	•	102
Travel Limit Input	22	·	

PSO TTL Outputs Schematic	102	Inspection	108
Sine Wave Encoder Schematic (Auxiliary I/O		Installation and Configuration	29
Connector)	70	Installation Overview	17
Square Wave Encoder Inputs Schematic (Aux I/O	67	Introduction	19
Connector) Square Wave Encoder Schematic (Feedback	67	IP54 Compliant	24
Connector)	47	Isolated Output Current Sinks Schematic (PSO)	102
Stepper Motor Configuration	44	Isolated Output Current Sources Schematic (PSO)	102
STO Timing	64	Isolation	23
Thermistor Input Schematic	53		
TTL Outputs Schematic (PSO)	102	J	
Typical STO Configuration	60	Joystick Interface	104
fluids, dangerous	108		
Functional Diagram	22	L	
Fuse Specifications	109	Locar Firing	71
Control Supply at L	109	Laser Firing	71
External Shunt (-SX1)	109		
Motor Supply at AC1	109	М	
		Maintenance	107
Н		material, electrically conductive	108
Hall-Effect Feedback Pins on the Feedback Connector	52	Mating Connector	
Hall-Effect Inputs (Feedback Connector)	52	Analog Output Connector [-EB1]	99
Hall-Effect Inputs Schematic	52	Mating Connector P/N	
Handling	15	Analog Input Connector [-EB1]	100
Handwheel Interconnection (to Aux I/O through a BBA3		Aux I/O Connector	65
Module)	106	Brake Power Supply Connector	81
Handwheel Interconnection to the Aux I/O Connector	106	Control Supply Connector	29
Handwheel Interface	106	Digital Input 1 Connector [-EB1]	96
High-Speed Input Pins on the Aux I/O Connector	78	Digital Input 2 Connector [-EB1]	97
High-Speed Input Specifications	78	Digital Output 1 Connector [-EB1]	93
High-Speed Inputs	78	Digital Output 2 Connector [-EB1]	93
High-Speed User Inputs (Aux I/O Connector)	78	Feedback Connector	45
Home Limit Input (Feedback Connector)	55	Motor Power Output Connector	39
Home Limit Input Connections	56	Motor Supply Connector	30
Home Limit Input Diagnostic Display	57	PSO Connector [-EB1]	101
Home Limit Input Pins on the Feedback Connector	55	STO Connector	59
Humidity	27	Mechanical Specifications	24
HyperWire	82	Minimizing Conducted, Radiated, and System Noise for	
Cable Part Numbers	82	EMC/CE Compliance	38
Card Part Number	82	Minimum Load Inductance specifications	23
		Modes of Operation	23
1		Motor Connector	4-
I/O Ontion Roard LEP11	Ω1	Mating Connector Part Numbers	45
I/O Option Board [-EB1] Input Power Connections	91 20	Motor Function Relative to STO Input State	63
•	29 109	Motor Power Output Connector	39
inspecting cooling vents	108	Brushless Motor Connections	40

DC Brush Motor Connections	43	Digital Output 1 Connector [-EB1]	93
Mating Connector Part Numbers	39	Digital Output Pins (Aux I/O Connector)	73
Pinout	39	Encoder Fault Input Pin (Feedback Connector)	54
Stepper Motor Connections	44	Encoder Input (Feedback Connector)	46
Motor Supply Connections	30	End of Travel Limit Input Pins (Feedback Connector)	55
Motor Supply Connector	30	Feedback Connector	45
Mating Connector Part Numbers	30	Hall-Effect Feedback Pins (Feedback Connector)	52
Wiring Specifications	30	High-Speed Input Pins (Aux I/O Connector)	78
Motor Supply specifications	23	Home Limit Input Pins (Feedback Connector)	55
Mounting and Cooling	24	Motor Power Output Connector	39
Mounting Hardware	24	Primary Encoder Inputs (Feedback Connector)	46
Mounting Orientation	24	PSO Interface Connector [-EB1]	101
		PSO Pins (Aux I/O Connector)	71
N		STO Connector	59
Nominal Motor Operating Voltages / Required AC		Thermistor Input Pin (Feedback Connector)	53
Voltages	31	Pollution	27
		Position Feedback in the Diagnostic Display	51
0		Position Synchronized Output (Aux I/O Connector)	71
Operation	27	Position Synchronized Output (PSO) Interface [-EB1]	101
Output Voltage specifications	23	Positive Motor Direction	41
Overview	23 19	Power Amplifier Bandwidth specifications	23
Overview	13	Power Requirements	23
P		Preventative Maintenance	108
		Primary Encoder Input (Feedback Connector)	46
packing list	15	Primary Encoder Input Pins on the Feedback Connector	r 46
PC Configuration and Operation Information	89	Protective Features	23
Peak Output Current specifications	23	PSO	
Phasing		Isolated Output Sinks Current Schematic	102
DC Brush Motor	43	Isolated Output Sources Current Schematic	102
End of Travel Limits	57	TTL Outputs Schematic	102
Powered Brushless Motor	41	PSO (Aux I/O Connector)	71
Stepper Motor	44	PSO Connector [-EB1] Mating Connector Part Numbers	101
Unpowered Brushless Motor/Feedback	42	PSO Interface Connector Pinout [-EB1]	101
Pinout		PSO Output Sources	71
Analog Input Connector [-EB1]	100	PSO Pins (Aux I/O Connector)	71
Analog Input Pins (Aux I/O Connector)	80	PSO Specifications (Aux I/O Connector)	71
Analog Output Connector [-EB1]	99	PSO Specifications [-EB1]	101
Analog Output Pins (Aux I/O Connector)	79	PWM Switching Frequency specifications	23
Auxiliary I/O Connector	65		
Auxiliary I/O Pins (Aux I/O Connector)	66	R	
Brake Output Connector	81	Resolute absolute encoder	48,68
Brake Output Pins (Feedback Connector)	58	Revision History	113
Digital Input 1 Connector [-EB1]	96		47,67
Digital Input 2 Connector [-EB1]	97	RS-422 Line Driver Encoder	47,07 47
Digital Input Pins (Aux I/O Connector)	76	Elife Driver Effected	т/

RS-422 Line Driver Encoder (Auxiliary I/O Connector)	67	Standard Features	21
		Stepper Motor Configuration	44
S		Stepper Motor Connections (Motor Power Output Connector)	44
Safe Torque Off Input (STO)	59	Stepper Motor Phasing	44
Safety Procedures and Warnings	13	STO	59
serial data stream	48,68	Connector Pinout	59
serial number	15	Diagnostics	64
Sine Wave Encoder (Aux Connector)	69	Electrical Specifications	60
Sine Wave Encoder (Auxiliary I/O Connector)	49	External Delay Timer	62
Sine Wave Encoder Phasing Reference Diagram	69	Functional Description	62
Sine Wave Encoder Schematic (Auxiliary I/O Connector	r) 70	Mating Connector Part Numbers	59
Sine Wave Encoder Specifications (Auxiliary I/O Connector)	69	Motor Function Relative to the STO Input State	63
Sine Wave Encoder Specifications (Feedback Connecto	r) 49	Signal Delay	63
Specifications		Standards	61
Analog Encoder (Auxiliary I/O Connector)	69	Standards Data	61
Analog Encoder (Feedback Connector)	49	Startup Validation Testing	63
Analog Input 0 (Aux I/O Connector)	80	Timing	64
Analog Output 0 (Aux I/O Connector)	79	Typical Configuration	60
Analog Outputs [-EB1]	99	Storage	15
Brake Control Relay	58	Sync-Related Commands	85
Control Board Fuses	109	Sync Port Cables	85
Control Supply Connector Wiring	29	Sync Ports	85
Differential Analog Inputs [-EB1]	100	System part number	15
Digital Inputs (Aux I/O Connector)	76	System Power Requirements	23
Digital Inputs [-EB1]	96		
Digital Outputs (Aux I/O Connector)	73	Т	
Digital Outputs [-EB1]	92	Table of Contents	3
High-Speed Inputs	78	Thermistor Input (Feedback Connector)	53
Motor Supply Connector Wiring	30	Thermistor Input Pin on the Feedback Connector	53
PSO (Aux I/O Connector)	71	Thermistor Input Schematic	53
PSO [-EB1]	101	TM3	31
RS-422 Encoder (Feedback Connector)	47,67	TM5	31
Sine Wave Encoder (Auxiliary I/O Connector)	69	Transformer Options	31
Sine Wave Encoder (Feedback Connector)	49	Travel Limit Input (Feedback Connector)	55
Square Wave Encoder (Feedback Connector)	47,67	TTL Outputs Schematic (PSO)	102
STO Electrical Specifications	60	TV0.3-28	31
Unit Weight	24	TV0.3-28-56-ST Transformer	31
Square Wave Encoder	47	TV0.3-28-56-ST Transformer (160 VDC Bus)	34
Square Wave Encoder (Auxiliary I/O Connector)	67	TV0.3-28-56-ST Transformer (40 VDC Bus)	32
Square Wave Encoder Inputs Schematic (Aux I/O		TV0.3-28-56-ST Transformer (80 VDC Bus)	33
Connector)	67	TV0.3-28 Transformer (40 VDC Bus)	35
Square Wave Encoder Schematic (Feedback Connecto	r) 47	TV0.3-56	31
Square Wave Encoder Specifications (Feedback Connector)	47,67	TV0.3-56 Transformer (80 VDC Bus)	36

Two Axis Joystick Interface	104
Two Axis Joystick Interface (to the I/O board of two drives)	105
Typical STO Configuration	60
U	
Unit Weight	24
Use	27
User Power Supply specifications	23
w	
Warranty and Field Service	111
Wire Colors for Aerotech-Supplied Brushless Motor Cables	40
Wire Colors for Aerotech-Supplied DC Brush Motor Cables	43
Wire Colors for Aerotech-Supplied Stepper Motor Cables	44

This page intentionally left blank.