

Global Technical Support

Go to www.aerotech.com/global-technical-support for information and support about your Aerotech, Inc. products. The website supplies software, product manuals, Help files, training schedules, and PC-to-PC remote technical support. If necessary, you can complete Product Return (RMA) forms and get information about repairs and spare or replacement parts. To get help immediately, contact a service office or your sales representative. Include your customer order number in your email or have it available before you call.

United States (World Headquarters)	
Email: Support@aerotech.com Phone: +1-412-967-6440 Fax: +1-412-967-6870	
101 Zeta Drive Pittsburgh, PA 15238-2811 www.aerotech.com	
United Kingdom	China
Email: Support@aerotech.com Phone: +44 (0)1256 855055 Fax: +44 (0)1256 855649	Email: Support@aerotech.com Phone: +86 (21) 5508 6731
Germany	Taiwan
Email: Support@aerotech.com Phone: +49 (0)911 967 9370 Fax: +49 (0)911 967 93720	Email: Support@aerotech.com Phone: +886 (0)2 8751 6690
France	
Email: Support@aerotech.com Phone: +33 2 37 21 87 65	

This manual contains proprietary information and may not be reproduced, disclosed, or used in whole or in part without the express written permission of Aerotech, Inc. Product names mentioned herein are used for identification purposes only and may be trademarks of their respective companies.

Copyright © 2018-2020, Aerotech, Inc., All rights reserved.

Aerotech Worldwide

United States ■ France ■ Germany ■ United Kingdom
China ■ Taiwan



Table of Contents

XL4s HARDWARE MANUAL	1
Table of Contents	3
List of Figures	4
List of Tables	5
EU Declaration of Conformity	7
Agency Approvals	9
Safety Procedures and Warnings	11
Quick Installation Guide	13
Chapter 1: Introduction	15
1.1. Electrical Specifications	17
1.2. Mechanical Specifications	18
1.2.1. Mounting and Cooling	18
1.2.2. Dimensions	19
1.3. Environmental Specifications	20
1.4. Drive and Software Compatibility	21
Chapter 2: Installation and Configuration	23
2.1. Input Power Connections	23
2.1.1. Control Supply Connector	23
2.1.2. Motor Supply Connector	24
2.1.3. External Power Supply Options	25
2.1.4. Minimizing Conducted, Radiated, and System Noise for EMC/CE Compliance	27
2.2. HyperWire Interface	28
2.3. Position Synchronized Output Connector	29
2.4. Encoder Output Connector	30
2.5. Stage Motor and Feedback Connector	32
2.5.1. Analog Encoder Inputs	33
2.6. Digital and Analog I/O Connectors	34
2.6.1. Digital Outputs	35
2.6.2. Digital Inputs	37
2.6.3. Analog Outputs	38
2.6.4. Analog Inputs (Differential)	39
2.7. Encoder Input Connectors	40
2.7.1. Emergency Stop Sense Input	42
2.8. Laser Output Polarity Switch	43
2.9. Sync Port	44
2.10. PC Configuration and Operation Information	45
Chapter 3: Maintenance	47
3.1. Preventative Maintenance	47
3.2. Board Assembly	48
Appendix A: Warranty and Field Service	51
Appendix B: Revision History	53
Index	55

List of Figures

Figure 1-1:	XL4s High Performance Linear Amplifier	15
Figure 1-2:	Functional Diagram	16
Figure 1-3:	Dimensions	19
Figure 2-1:	Control Supply Connections	23
Figure 2-2:	Motor Supply Connections	24
Figure 2-3:	Control and Motor Power Wiring using a TM3 Transformer	25
Figure 2-4:	Third-Party Power Supply Connection	26
Figure 2-5:	Encoder Outputs Schematic	30
Figure 2-6:	PSO External Sync Input Schematic	31
Figure 2-7:	Digital Outputs Connected in Current Sourcing Mode	36
Figure 2-8:	Digital Outputs Connected in Current Sinking Mode	36
Figure 2-9:	Digital Inputs Connected to Current Sinking Devices	37
Figure 2-10:	Digital Inputs Connected to Current Sourcing Devices	37
Figure 2-11:	Analog Outputs Schematic	38
Figure 2-12:	Analog Inputs Schematic	39
Figure 2-13:	Encoder Input Connector Encoder Connections	41
Figure 2-14:	ESTOP Sense Input Schematic	42
Figure 2-15:	Laser Output Polarity Switch Location	43
Figure 3-1:	Control Board Assembly	48
Figure 3-2:	Power Board Assembly	49

List of Tables

Table 1-1:	Feature Summary	15
Table 1-2:	Electrical Specifications	17
Table 1-3:	Mounting Specifications	18
Table 1-4:	Environmental Specifications	20
Table 1-5:	Drive and Software Compatibility	21
Table 2-1:	Control Supply Connector Wiring Specifications	23
Table 2-2:	Mating Connector Part Numbers for the Control Supply Connector	23
Table 2-3:	Motor Supply Wiring Specifications	24
Table 2-4:	Mating Connector Part Numbers for the Motor Supply Connector	24
Table 2-5:	HyperWire Card Part Number	28
Table 2-6:	HyperWire Cable Part Numbers	28
Table 2-7:	PSO Connector A Pinout	29
Table 2-8:	PSO Connector B Pinout	29
Table 2-9:	Mating Connector Part Numbers for the PSO Connectors	29
Table 2-10:	PSO Specifications	29
Table 2-11:	Encoder Output Connector Pinout	30
Table 2-12:	Mating Connector Part Numbers for the Encoder Output Connector	30
Table 2-13:	PSO External Sync Specifications	31
Table 2-14:	Stage Motor and Feedback Connector Pinout	32
Table 2-15:	Mating Connector Part Numbers for the Stage Motor and Feedback Connector	32
Table 2-16:	Analog Encoder Input Specifications	33
Table 2-17:	Digital and Analog I/O Connector A Pinout	34
Table 2-18:	Digital and Analog I/O Connector B Pinout	34
Table 2-19:	Mating Connector Part Numbers for the Digital / Analog I/O Connectors	34
Table 2-20:	Digital Output Specifications	35
Table 2-21:	Digital Output Pins on the Digital/Analog I/O A Connector	35
Table 2-22:	Digital Input Specifications	37
Table 2-23:	Digital Input Pins on the Digital/Analog I/O B Connector	37
Table 2-24:	Analog Output Specifications	38
Table 2-25:	Analog Output Pins on the Digital / Analog I/O B Connector	38
Table 2-26:	Analog Input Specifications	39
Table 2-27:	Analog Input Pins on the Digital / Analog I/O B Connector	39
Table 2-28:	Encoder Input Connector Specifications	40
Table 2-29:	Encoder Input Connector A Pinout	40
Table 2-30:	Encoder Input Connector B Pinout	40
Table 2-31:	Mating Connector Part Numbers for the Encoder Input Connector	40
Table 2-32:	ESTOP Pins on the Encoder Input Connector	42
Table 2-33:	Electrical Noise Suppression Devices	42
Table 2-34:	Sync-Related Commands	44
Table 2-35:	Sync Port Cables	44
Table 3-1:	Preventative Maintenance	47
Table 3-2:	Control Board Fuse Specifications	48
Table 3-3:	Power Board Fuse Specifications	49

This page intentionally left blank.

EU Declaration of Conformity

Manufacturer Aerotech, Inc.
Address 101 Zeta Drive
Pittsburgh, PA 15238-2811
USA
Product XL4s
Model/Types All

This is to certify that the aforementioned product is in accordance with the applicable requirements of the following Directive(s):

2014/35/EU
EU 2015/863

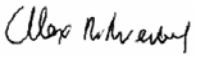
Low Voltage Directive
RoHS 3 Directive

and has been designed to be in conformity with the applicable requirements of the following Standard(s) when installed and used in accordance with the manufacturer's supplied installation instructions.

EN 61010-1:2010

Safety Requirements for Electrical Equipment

Authorized Representative: Simon Smith, European Director
Address: Aerotech Ltd
The Old Brick Kiln, Ramsdell, Tadley
Hampshire RG26 5PR
UK

Name  / Alex Weibel
Position Engineer Verifying Compliance
Location Pittsburgh, PA
Date 4/27/2020



This page intentionally left blank.

Agency Approvals

Aerotech tested its XL4s drives and found that they obey the standards that follow:

Approval / Certification:	CUS NRTL
Approving Agency:	TUV SUD America Inc.
Certificate #:	U8 16 04 68995 018
Standards:	CAN/CSA-C22.2 No. 61010-1:2012; EN 61010-1:2010; UL 61010-1:2012

Visit <https://www.tuev-sued.de/product-testing/certificates> to view Aerotech's TÜV SÜD certificates. Type the certificate number listed above in the search bar or type "Aerotech" for a list of all Aerotech certificates.

This page intentionally left blank.

Safety Procedures and Warnings

This manual tells you how to carefully and correctly use and operate the XL4s. Read all parts of this manual before you install or operate the XL4s or before you do maintenance to your system. To prevent injury to you and damage to the equipment, obey the precautions in this manual. The precautions that follow apply when you see a Danger or Warning symbol in this manual. If you do not obey these precautions, injury to you or damage to the equipment can occur. If you do not understand the information in this manual, contact Aerotech Global Technical Support.

This product has been designed for light industrial manufacturing or laboratory environments. The protection provided by the equipment could be impaired if the product is used in a manner not specified by the manufacturer.

NOTE: All specifications and illustrations are for reference only and were complete and accurate as of the release of this manual. To find the newest information about this product, refer to www.aerotech.com.



DANGER: The voltage from this product can kill you. To decrease the risk of electrical shock, injury, and death, you must obey the precautions that follow.

1. Before you do maintenance to the equipment, disconnect the electrical power.
2. Wait at least ten (10) minutes after removing the power supply before doing maintenance or an inspection. Otherwise, there is the danger of electric shock.
3. Before you connect wires to this product, disconnect the electrical power.
4. To decrease the risk of electrical shock and injury, you must supply operators with the necessary precautions and protection from live electrical circuits.
5. While the drive is connected to a power source, do not connect or disconnect electrical components and cables.
6. Make sure that all components are grounded correctly and that they obey the local electrical safety requirements.
7. Make sure that you install the necessary precautions to supply safety and protection to the operator.
8. Moving parts can cause crushing or shearing injuries. You must limit access to all motor and stage parts while your system is connected to a power source.



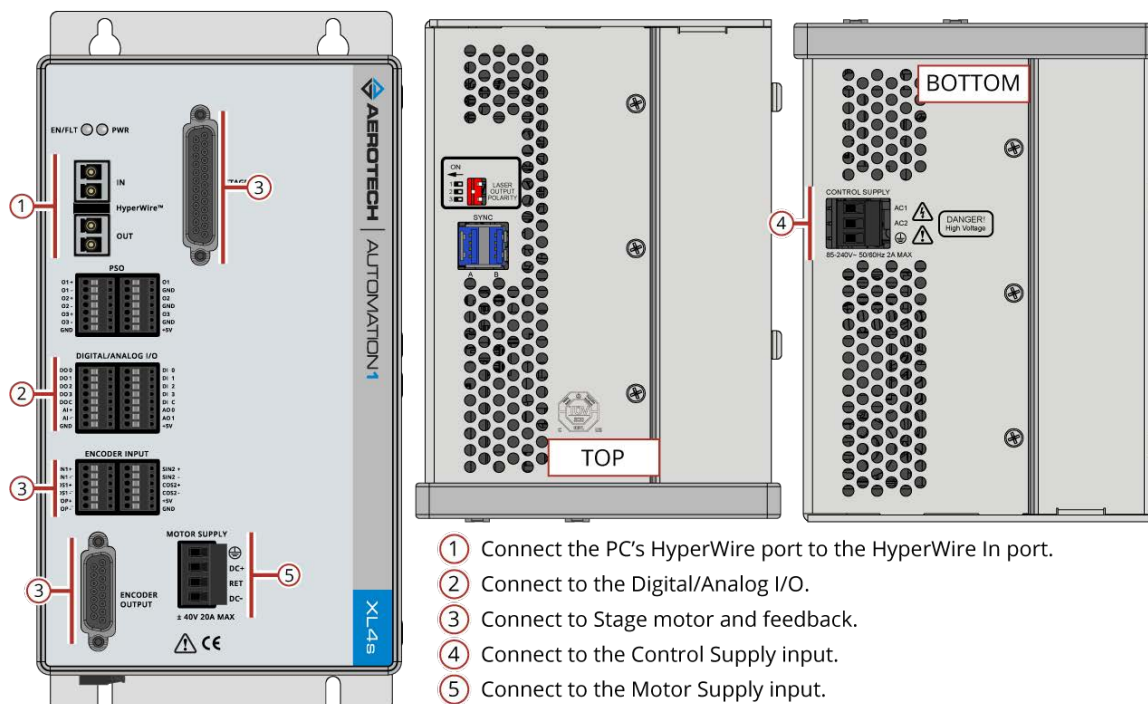
WARNING: To prevent damage to the equipment and decrease the risk of electrical shock, injury, and death, you must obey the precautions that follow.

1. Make sure that all system cables are correctly attached and positioned.
2. Use this product only in environments and operating conditions that are approved in this manual.
3. Only operators who have received training can operate this equipment. All servicing and maintenance must be done only by approved personnel.

This page intentionally left blank.

Quick Installation Guide

This image shows the order in which to make connections and settings that are typical to the XL4s. If a custom interconnect drawing was supplied with your system, that drawing is on your Storage Device and shows as a line item on your Sales Order in the Integration section.



HyperWire	Section 2.2. HyperWire Interface
Digital / Analog I/O	Section 2.6. Digital and Analog I/O Connectors
Motor and Feedback Connections	Section 2.5. Stage Motor and Feedback Connector
Control Supply	Section 2.1.1. Control Supply Connector
Motor Supply	Section 2.1.2. Motor Supply Connector

Figure 1: Quick Start Connections

This page intentionally left blank.

Chapter 1: Introduction

The XL4s is a high-performance linear amplifier designed to eliminate the non-linearities common with PWM amplifiers. The drive provides deterministic behavior, auto-identification, and easy software setup.

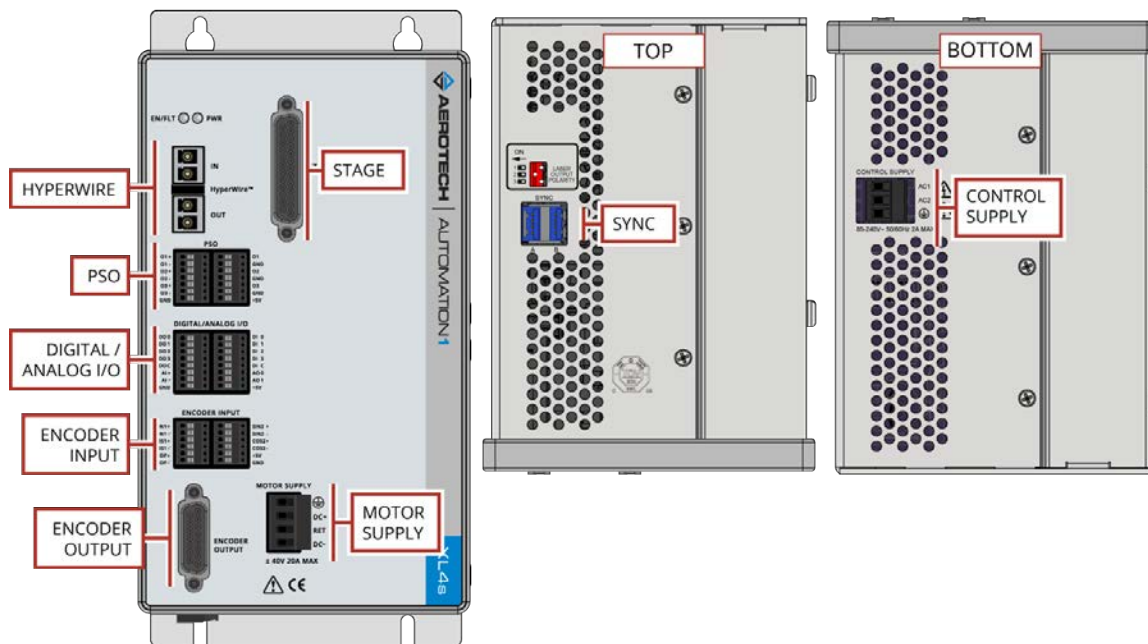


Figure 1-1: XL4s High Performance Linear Amplifier

Table 1-1: Feature Summary

Standard Features		
• 85-240 VAC; 50-60 Hz control supply		Section 2.1.1.
• ± 40 VDC max motor supply		Section 2.1.2.
• Two HyperWire ports		Section 2.2.
• Dual-Axis PSO firing		Section 2.3.
• Three-axis Part-Speed PSO firing		Refer to the online Help
• Two auxiliary channels of 40 MHz line driver quadrature encoder inputs		Section 2.7.
• Four optically-isolated digital outputs; 5-24V		Section 2.6.1.
• Four optically-isolated digital inputs; 5-24V		Section 2.6.2.
• Two 16-bit single-ended analog outputs; ± 10 V		Section 2.6.3.
• One 16-bit differential analog input; ± 10 V		Section 2.6.4.
• Dedicated 5-24V Emergency Stop sense input		Section 2.7.1.
• Two Sync ports		Section 2.9.

The block diagram that follows shows a summary of the connector signals.

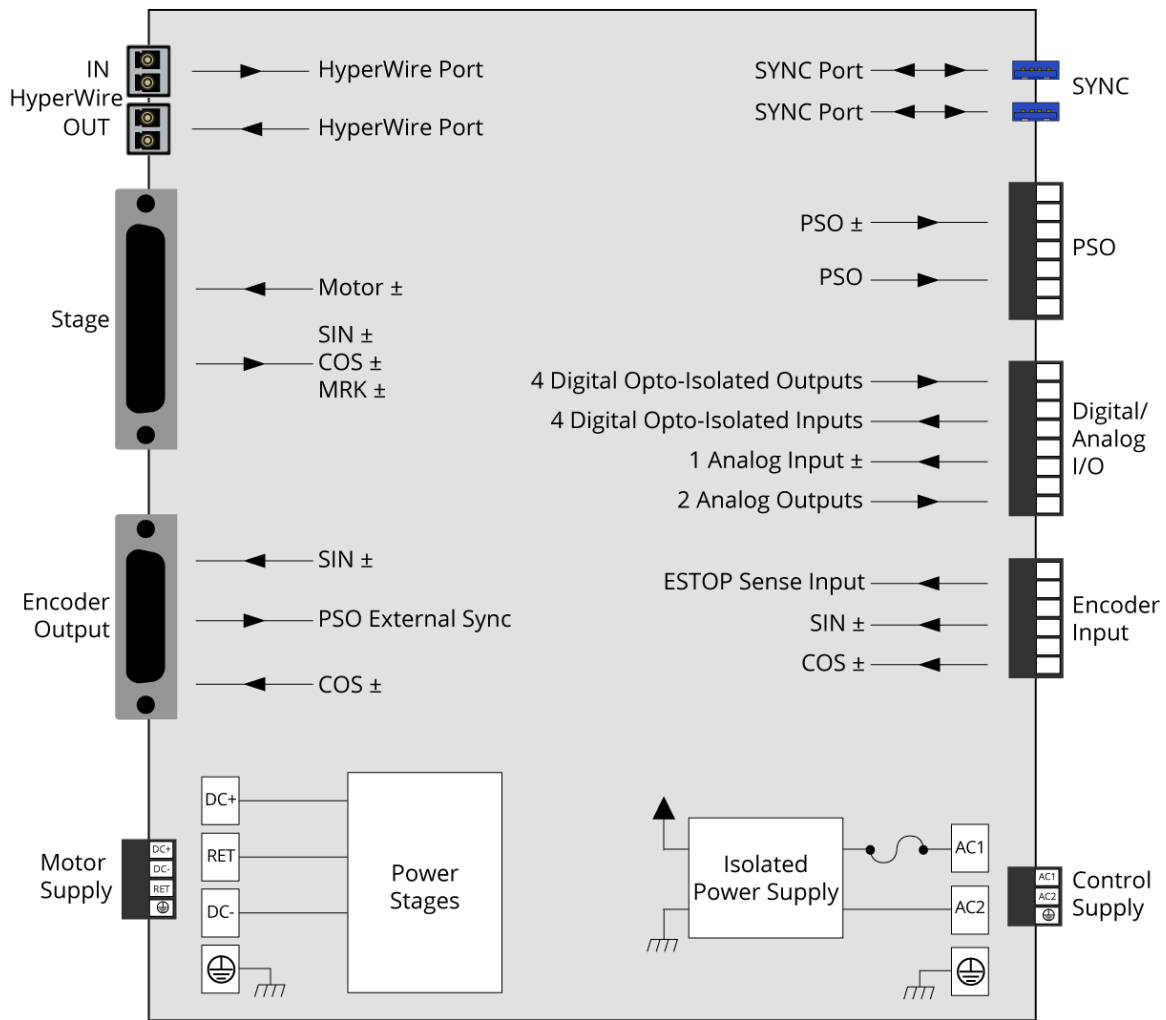


Figure 1-2: Functional Diagram

1.1. Electrical Specifications

Table 1-2: Electrical Specifications

Description		XL4s
Motor Supply	Input Voltage	± 40 VDC (max)
	Input Current (continuous)	10 A
Control Supply	Input Voltage	85-240 VAC
	Input Frequency	50-60 Hz
	Inrush Current	16 A
	Input Current	0.35 A (max)
Output Voltage		76 V
Peak Output Current		20 A
Continuous Output Current		5 A
Minimum Load Resistance		0.5 Ω
User Power Supply Output		5 VDC (@ 500 mA)

1.2. Mechanical Specifications

1.2.1. Mounting and Cooling

Install the XL4s in an IP54 compliant enclosure to comply with safety standards. Make sure that there is sufficient clearance surrounding the drive for free airflow and for the cables and connections.

Table 1-3: Mounting Specifications

		XL4s
Enclosure		IP54 Compliant
Weight		~2.9 kg
Mounting Hardware		M4 [#8] screws (four locations, not included)
Mounting Orientation		Vertical (typical)
Dimensions		Refer to Section 1.2.2. Dimensions
Minimum Clearance	Airflow	~25 mm
	Connectors	~100 mm
Operating Temperature		Refer to Section 1.3. Environmental Specifications

1.2.2. Dimensions

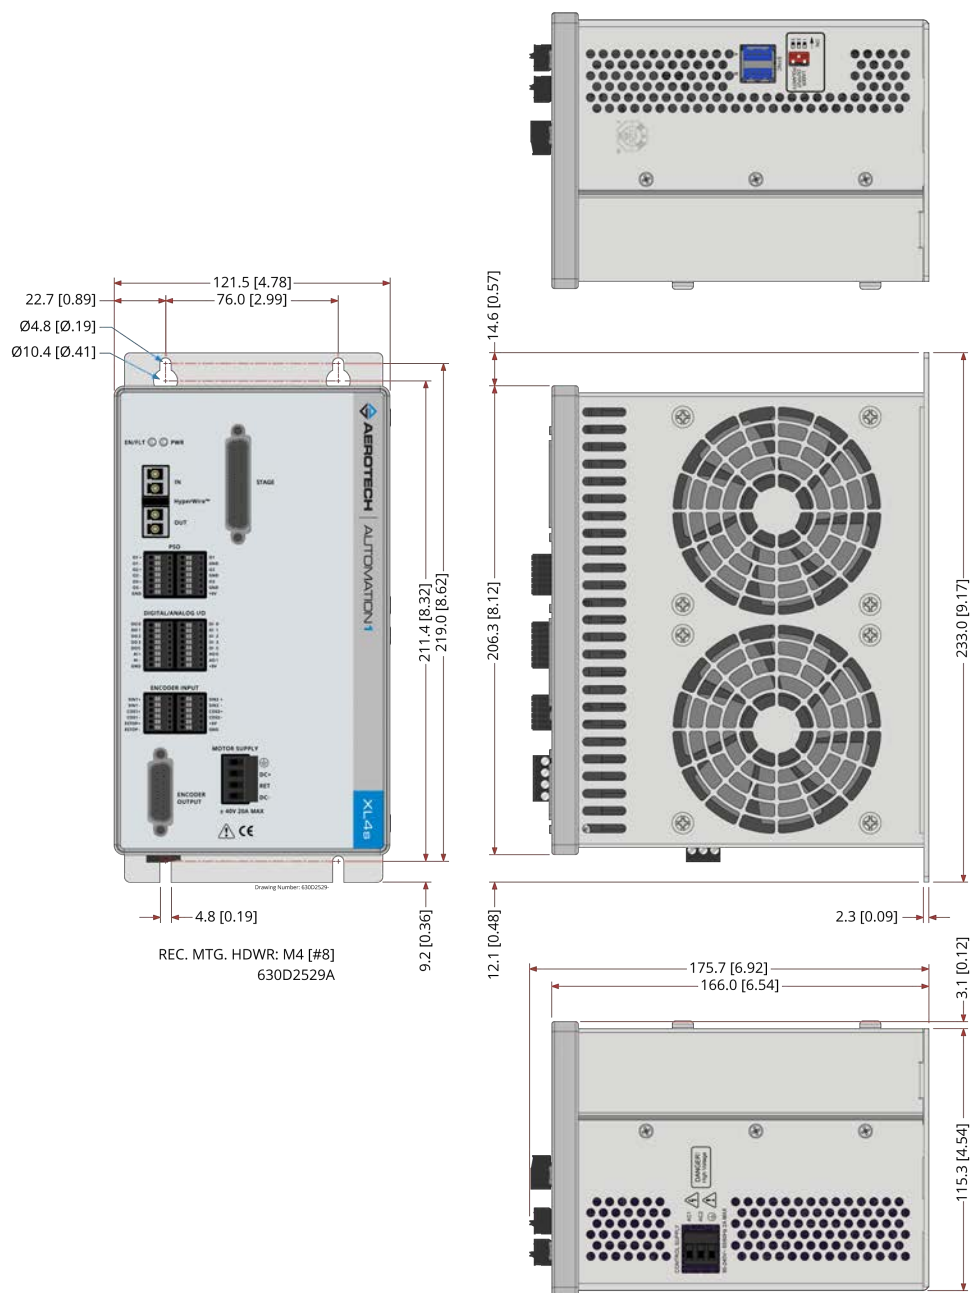


Figure 1-3: Dimensions

1.3. Environmental Specifications

Table 1-4: Environmental Specifications

Ambient Temperature	Operating: 0° to 40°C (32° to 104° F)
	Storage: -30° to 85°C (-22° to 185° F)
Humidity Non-condensing	The maximum relative humidity is 80% for temperatures that are less than 31°C and decreases linearly to 50% relative humidity at 40°C.
Operating Altitude	0 m to 2,000 m (0 ft to 6,562 ft) above sea level. If you must operate this product above 2,000 m or below sea level, contact Aerotech, Inc.
Pollution	Pollution Degree 2 Typically only nonconductive pollution occurs.
Operation	Use only indoors

1.4. Drive and Software Compatibility

This table shows the available drives and which version of the software first supported each drive. In the **Last Software Version** column, drives that show a specific version number are not supported after that version.

Table 1-5: Drive and Software Compatibility

Drive Type	Firmware Revision	First Software Version	Last Software Version
XL4s	-	6.04.000	Current

This page intentionally left blank.

Chapter 2: Installation and Configuration

2.1. Input Power Connections

The XL4s has two input power connectors. One connector is for AC control power and the other connector is for DC motor power. For a full list of electrical specifications, refer to [Section 1.1](#).

2.1.1. Control Supply Connector

NOTE: To operate correctly, this product must have a power supply connected to the Motor Supply and a power supply connected to the Control Supply.

The Control Supply input supplies power to the communications and logic circuitry of the XL4s. The AC1 input and the AC2 input are connected to fuses inside the XL4s. Refer to [Table 3-3](#) for fuse values and part numbers.

The Control Supply contains an internal filter. It is not necessary to use an external filter for CE compliance.

NOTE: Refer to local electrical safety requirements to correctly size external system wires.



DANGER: Before you operate the XL4s, install a ground connection for your safety and to prevent damage to the equipment.

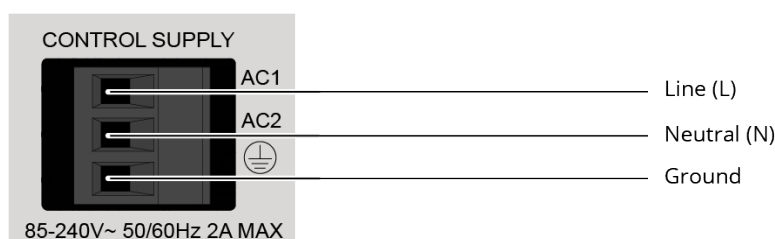



Figure 2-1: Control Supply Connections

Table 2-1: Control Supply Connector Wiring Specifications

Pin	Description	Recommended Wire Size ⁽¹⁾
AC1	Line Input: 85 - 240 Volt AC Input Range	1.3 mm ² [#16 AWG]
AC2	Neutral (0V) or 85 - 240 Volt AC Input Range	1.3 mm ² [#16 AWG]
	Protective Ground	1.3 mm ² [#16 AWG]

(1) The wire insulation is rated for 300 V.

Table 2-2: Mating Connector Part Numbers for the Control Supply Connector

Type	Aerotech P/N	Third Party P/N	Screw Torque Value: N·m	Wire Size: mm ² [AWG]
3-Pin Terminal Block	ECK00213	Phoenix 1754465	0.5 - 0.6	3.3 - 0.516 [12-30]

2.1.2. Motor Supply Connector

NOTE: To operate correctly, this product must have a power supply connected to the Motor Supply and a power supply connected to the Control Supply.

Motor power is applied to the XL4s at the four terminals of the Motor Supply connector. The DC+ input and the DC- input are connected to fuses inside the XL4s. Refer to [Table 3-3](#) for fuse values and part numbers.

NOTE: Refer to local electrical safety requirements to correctly size external system wires.



DANGER: To prevent the risk of electric shock, do not operate the XL4s without a ground connection.

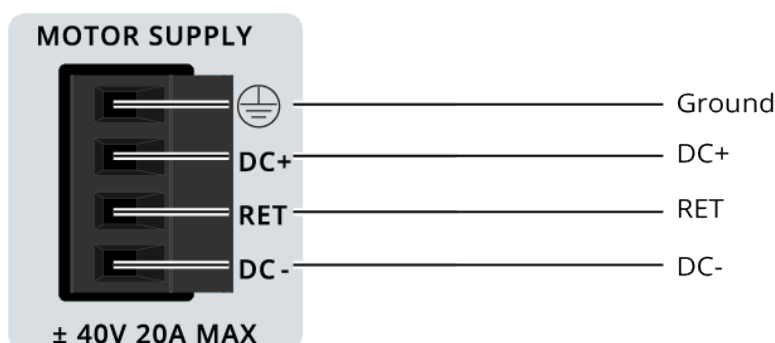


Figure 2-2: Motor Supply Connections

Table 2-3: Motor Supply Wiring Specifications


Pin	Description	Recommended Wire Size ⁽¹⁾
DC+	+40 VDC Input Range	2.1 mm ² (#14 AWG)
RET	Return for DC Input	2.1 mm ² (#14 AWG)
DC-	-40 VDC Input Range	2.1 mm ² (#14 AWG)
	Protective Ground	2.1 mm ² (#14 AWG)
⁽¹⁾ The wire insulation is rated for 300 V.		

Table 2-4: Mating Connector Part Numbers for the Motor Supply Connector

Type	Aerotech P/N	Third Party P/N	Screw Torque Value: N·m	Wire Size: mm ² [AWG]
4-Pin Terminal Block	ECK01581	Phoenix 1757035	0.5 - 0.6	3.3 - 0.0516 [12-30]

2.1.3. External Power Supply Options

You must connect the Motor Supply to a bipolar power supply. Aerotech recommends that you use an Aerotech TM3 transformer which can supply power to a maximum of four controllers. Refer to [Figure 2-3](#).

As an alternative to a bipolar power supply, you can use two third-party power supplies but they must obey these conditions. Refer to [Figure 2-4](#).

- The output of each power supply must not be ground referenced.
- The output of each power supply must be specified to be used in positive or negative polarity.

The XL4s controller can source 10 A peak current to each motor. This current must be supplied by the external power supply. A switching power supply must be rated for the peak current requirement of the system because the switching power supply might shut down if it is overloaded.

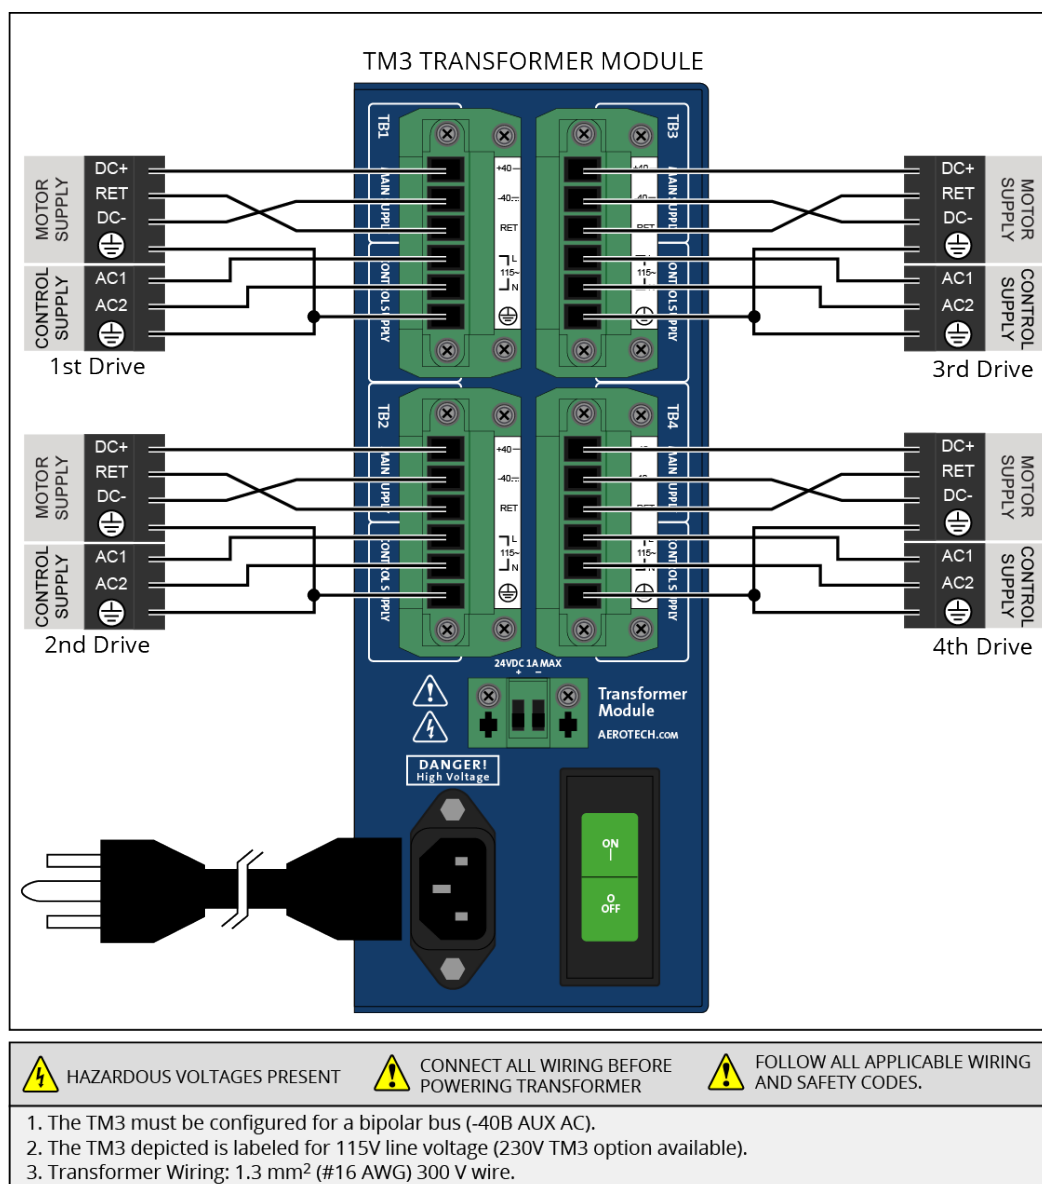


Figure 2-3: Control and Motor Power Wiring using a TM3 Transformer

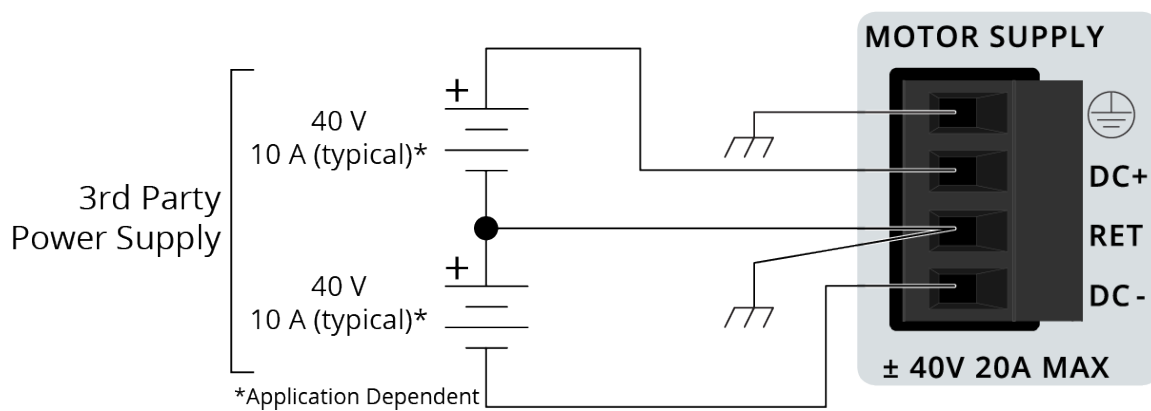


Figure 2-4: Third-Party Power Supply Connection

2.1.4. Minimizing Conducted, Radiated, and System Noise for EMC/CE Compliance

NOTE: The XL4s is a component designed to be integrated with other electronics. EMC testing must be conducted on the final product configuration.

To reduce electrical noise, observe the following motor and input power wiring techniques.

1. Separate motor and power wiring from encoder and I/O wiring.
2. Mount drives, power supplies, and filter components on a conductive panel. Mount line filters close to the drive to keep the wire length between the drive and filter to a minimum. Use a line filter, such as Aerotech's UFM-ST, on the Control Supply AC inputs.

The following additional changes could be required for EMC compliance and are recommended during initial EMC system evaluation.

1. Add a clamp-on ferrite to the motor feedback cable close to the drive.
[Aerotech PN ECZ02348, Fair-rite PN 0446167281]
2. Add a ferrite core to the UFM-ST AC input wires. Wrap the AC wires and ground wire around the core one time.
[Ferrite core: Aerotech PN ECZ02350, Fair-rite PN 2646102002]

2.2. HyperWire Interface

The HyperWire bus is the high-speed communications connection to the XL4s operating at 2 gigabits per second. The PC sends all command and configuration information through the HyperWire bus.

Table 2-5: HyperWire Card Part Number

Part Number	Description
HYPERWIRE-PCIE	HyperWire adapter, PCIe x4 interface

Table 2-6: HyperWire Cable Part Numbers

Part Number	Description
HYPERWIRE-AO10-5	HyperWire cable, active optical, 0.5 m
HYPERWIRE-AO10-10	HyperWire cable, active optical, 1.0 m
HYPERWIRE-AO10-30	HyperWire cable, active optical, 3.0 m
HYPERWIRE-AO10-50	HyperWire cable, active optical, 5.0 m
HYPERWIRE-AO10-200	HyperWire cable, active optical, 20.0 m

2.3. Position Synchronized Output Connector

You can program the Position Synchronized Output (PSO) to generate an output that is synchronized to the feedback position of an axis. PSO is typically used to fire a laser or trigger an external hardware device.

A PSO firing event can be triggered from a feedback channel or from a software trigger. You can get quadrature signals from feedback channels and PSO firing event signals after a PSO firing event occurs. When the PSO generates pulses, minimum latency occurs between the trigger condition and the output.

Aerotech recommends that you use an RS-422 line receiver or an opto-isolator if your system:

- Uses cables with long lengths in work areas where a lot of electrical noise occurs.
- Uses high-frequency pulse transmission.

For best performance, put the RS-422 line receiver or the opto-isolator near the electronics that receive the PSO output pulse.

Table 2-7: PSO Connector A Pinout

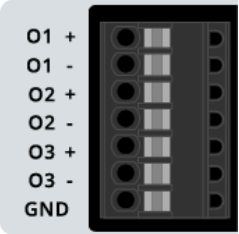
Pin #	Label	Description	In/Out/Bi	Connector
1	O1+	PSO Output	Output	
2	O1-	PSO Output	Output	
3	O2+	Reserved	--	
4	O2-	Reserved	--	
5	O3+	Reserved	--	
6	O3-	Reserved	--	
7	GND	Ground	--	

Table 2-8: PSO Connector B Pinout

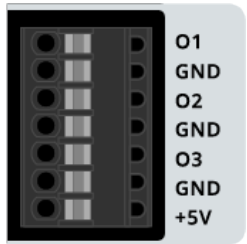
Pin #	Label	Description	In/Out/Bi	Connector
1	O1	PSO Output (5V TTL)	Output	
2	GND	Ground	--	
3	O2	Reserved	--	
4	GND	Ground	--	
5	O3	Reserved	--	
6	GND	Ground	--	
7	+5V	5 Volt Power Supply (500 mA)	Output	

Table 2-9: Mating Connector Part Numbers for the PSO Connectors

Type	Aerotech P/N	Third Party P/N	Wire Size: mm ² [AWG]
7-Pin Terminal Block	ECK01631	Phoenix 1881370	0.5 - 0.080 [20-28]

Table 2-10: PSO Specifications

Specification		Value
Maximum PSO Output (Fire) Frequency	TTL	12.5 MHz
	Isolated	5 MHz
Output Latency [Fire event to output change]	TTL	50 ns
	Isolated	150 ns
1. Signals in excess of this rate will cause a loss of PSO accuracy		

2.4. Encoder Output Connector

The Encoder Output interface echos the encoder signals out of the axis.

Table 2-11: Encoder Output Connector Pinout


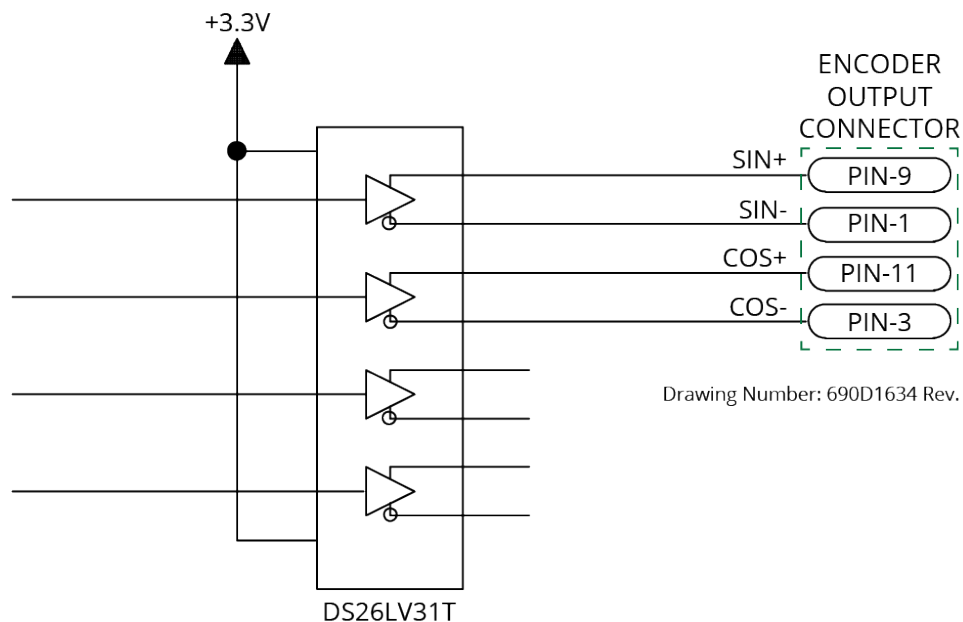
Pin	Description	In/Out/Bi	Connector
1	SIN-	Output	
2	Reserved	--	
3	COS-	Output	
4	Reserved	--	
5	Reserved	--	
6	Reserved	--	
7	PSO External Sync	Input	
8	+5V	Output	
9	SIN+	Output	
10	Reserved	--	
11	COS+	Output	
12	Reserved	--	
13	Reserved	--	
14	Reserved	--	
15	Ground	--	

Table 2-12: Mating Connector Part Numbers for the Encoder Output Connector

Mating Connector	Aerotech P/N	Third Party P/N
15-Pin D-Connector	ECK00100	Amphenol DA15P064TXLF
Backshell	ECK01022	Amphenol 17E-1725-2

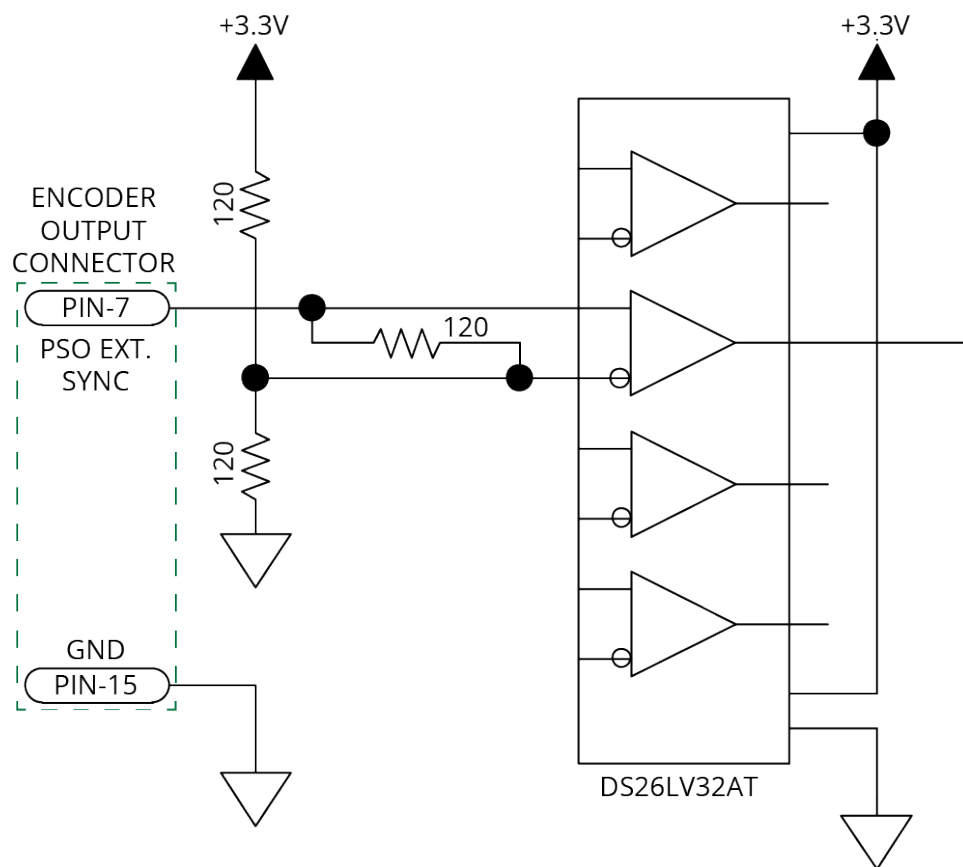


Drawing Number: 690D1634 Rev. -

Figure 2-5: Encoder Outputs Schematic

Table 2-13: PSO External Sync Specifications

Specification	Value
Voltage	3.3 VDC
Frequency	25 MHz Maximum
On Time	20 ns Minimum

**Figure 2-6: PSO External Sync Input Schematic**

2.5. Stage Motor and Feedback Connector

You can only use the XL4s to control a DC Brush motor.

Table 2-14: Stage Motor and Feedback Connector Pinout

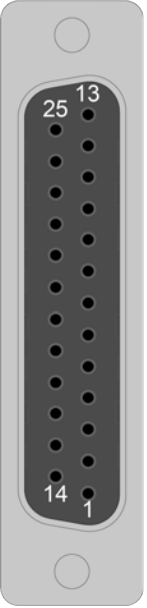
Pin	Description	In/Out/Bi	Pin Location
1	Sine +	Input	
2	Cosine +	Input	
3	Encoder Ground	--	
4	Reserved	--	
5	Reserved	--	
6	Reserved	--	
7	Marker +	Input	
8	Encoder Power (+5V, 500 mA)	--	
9	Reserved	--	
10	Flash Configuration	Input	
11	Frame Ground	--	
12	Motor +	Output	
13	Motor +	Output	
14	Sine -	Input	
15	Cosine -	Input	
16	Encoder Ground	--	
17	Reserved	--	
18	Reserved	--	
19	Reserved	--	
20	Marker -	Input	
21	Encoder Ground	--	
22	Reserved	--	
23	Frame Ground	--	
24	Motor -	Output	
25	Motor -	Output	

Table 2-15: Mating Connector Part Numbers for the Stage Motor and Feedback Connector

Mating Connector	Aerotech P/N	Third Party P/N
25-Pin D-Connector	ECK00101	FCI DB25P064TXLF
Backshell	ECK00656	Amphenol 17E-1726-2

2.5.1. Analog Encoder Inputs

The XL4s has one analog encoder input channel. The XL4s uses this input channel for position feedback.

Use the Feedback Tuning tab of Digital Scope to automatically adjust the value of the gain, offset, and phase balance controller parameters to get the best performance. For more information, refer to the Help file.

Table 2-16: Analog Encoder Input Specifications

Specification	Value
Input Frequency (max)	500 kHz
Input Amplitude ⁽¹⁾	0.6 to 1.2 Vpk-pk
Interpolation Factor (max)	262,144
Input Common Mode	1.5 to 3.5 VDC
(1) Any single-ended encoder signal measured with respect to ground.	

2.6. Digital and Analog I/O Connectors

This connector has four digital, optically-isolated outputs, four digital, optically-isolated inputs, one differential analog input, and two analog outputs.

Table 2-17: Digital and Analog I/O Connector A Pinout

Pin #	Label	Description	In/Out/Bi	Connector
1	DO0	Digital Output 0 (Optically-Isolated)	Output	
2	DO1	Digital Output 1 (Optically-Isolated)	Output	
3	DO2	Digital Output 2 (Optically-Isolated)	Output	
4	DO3	Digital Output 3 (Optically-Isolated)	Output	
5	DOC	Digital Output Common	Input	
6	AI+	Analog Input +	Input	
7	AI-	Analog Input -	Input	
8	GND	Ground	--	

Table 2-18: Digital and Analog I/O Connector B Pinout

Pin #	Label	Description	In/Out/Bi	Connector
1	DI0	Digital Input 0 (Optically-Isolated)	Input	
2	DI1	Digital Input 1 (Optically-Isolated)	Input	
3	DI2	Digital Input 2 (Optically-Isolated)	Input	
4	DI3	Digital Input 3 (Optically-Isolated)	Input	
5	DIC	Digital Input Common	Input	
6	AO0	Analog Output 0	Output	
7	AO1	Analog Output 1	Output	
8	+5V	+5V	Input	

Table 2-19: Mating Connector Part Numbers for the Digital / Analog I/O Connectors

Mating Connector	Aerotech P/N	Third Party P/N	Wire Size: mm ² [AWG]
8-Pin Terminal Block	ECK01386	Phoenix 1881383	0.5 - 0.080 [20-28]

2.6.1. Digital Outputs

Optically-isolated solid-state relays drive the digital outputs. You can connect the digital outputs in current sourcing or current sinking mode but you must connect all four outputs in the same configuration. Refer to [Figure 2-7](#) and [Figure 2-8](#).

You must install suppression diodes on digital outputs that drive relays or other inductive devices. To see an example of a current sourcing output that has diode suppression, refer to [Figure 2-7](#). To see an example of a current sinking output that has diode suppression, refer to [Figure 2-8](#).

The digital outputs are not designed for high-voltage isolation applications and they should only be used with ground-referenced circuits.

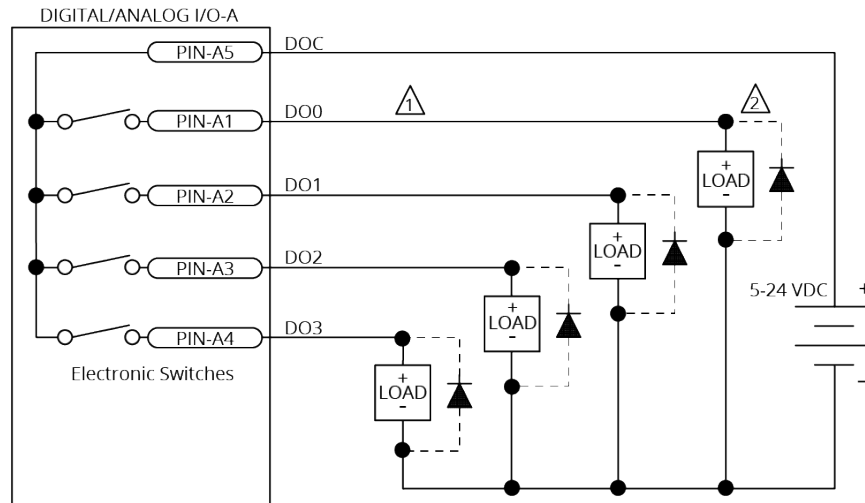
NOTE: The digital outputs have overload protection. They will resume normal operation when the overload is removed.

Table 2-20: Digital Output Specifications

Digital Output Specifications	Value
Maximum Voltage	24 V (26 V Maximum)
Maximum Sink/Source Current	50 mA/output
Output Saturation Voltage	0.2 V at maximum current
Output Resistance	4 Ω
Rise / Fall Time	250 μ s (2K pull up to 24V)
Reset State	Output Off (High Impedance State)

Table 2-21: Digital Output Pins on the Digital/Analog I/O A Connector

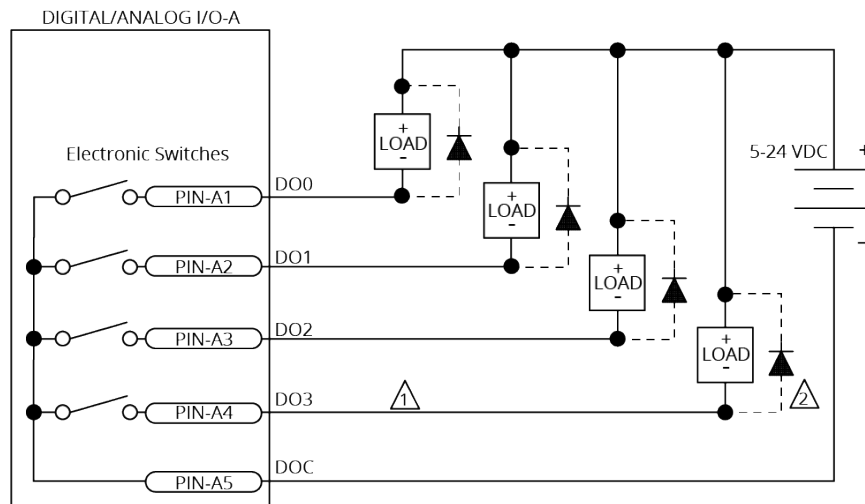
Pin #	Label	Description	In/Out/Bi
1	DO0	Digital Output 0 (Optically-Isolated)	Output
2	DO1	Digital Output 1 (Optically-Isolated)	Output
3	DO2	Digital Output 2 (Optically-Isolated)	Output
4	DO3	Digital Output 3 (Optically-Isolated)	Output
5	DOC	Digital Output Common	Input



⚠ Each output 50 mA maximum

⚡ Diode required on each output that drives an inductive device (coil), such as a relay.

Figure 2-7: Digital Outputs Connected in Current Sourcing Mode



⚠ Each output 50 mA maximum

⚡ Diode required on each output that drives an inductive device (coil), such as a relay.

Figure 2-8: Digital Outputs Connected in Current Sinking Mode

2.6.2. Digital Inputs

You can connect the digital inputs to current sourcing or current sinking devices but you must connect all four inputs in the same configuration. Refer to [Figure 2-10](#) and [Figure 2-9](#). The digital inputs are not designed for high-voltage isolation applications. They should only be used with ground-referenced circuits.

Table 2-22: Digital Input Specifications

Input Voltage	Approximate Input Current	Turn On Time	Turn Off Time
+5 V to +24 V	6 mA	10 μ s	43 μ s

Table 2-23: Digital Input Pins on the Digital/Analog I/O B Connector

Pin #	Label	Description	In/Out/Bi
1	DI0	Digital Input 0 (Optically-Isolated)	Input
2	DI1	Digital Input 1 (Optically-Isolated)	Input
3	DI2	Digital Input 2 (Optically-Isolated)	Input
4	DI3	Digital Input 3 (Optically-Isolated)	Input
5	DIC	Digital Input Common	Input

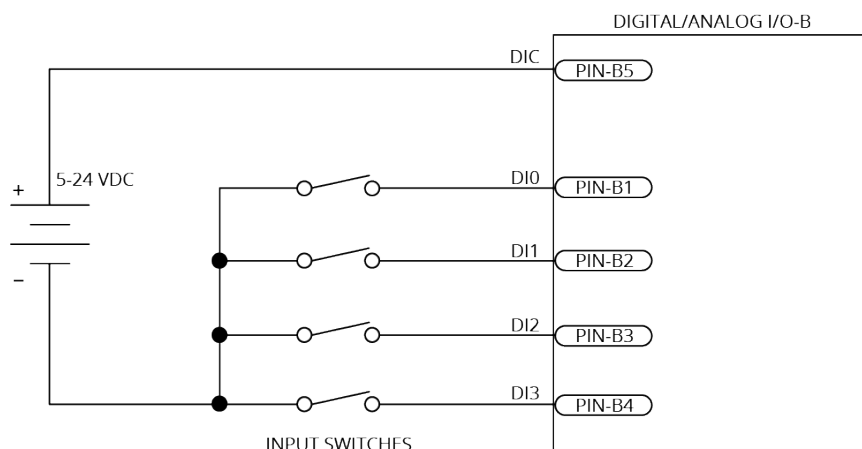


Figure 2-9: Digital Inputs Connected to Current Sinking Devices

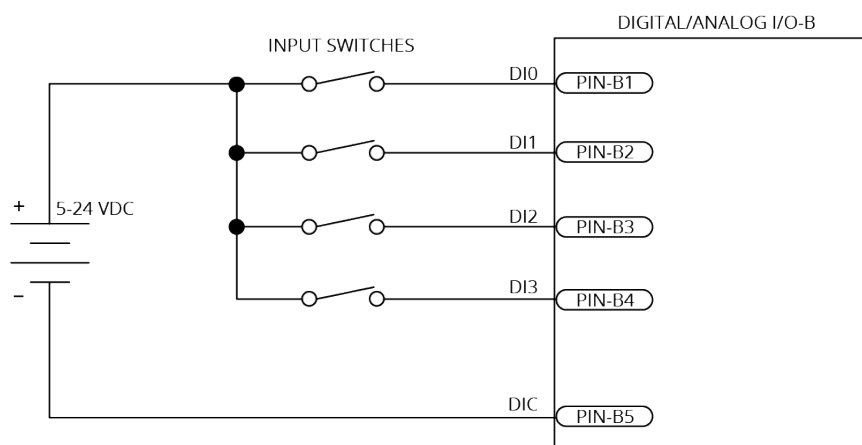


Figure 2-10: Digital Inputs Connected to Current Sourcing Devices

2.6.3. Analog Outputs

The analog output is set to zero when you power on the system or reset the drive.

Table 2-24: Analog Output Specifications

Specification	Value
Output Voltage	-10 V to +10 V
Output Current	5 mA
Resolution (bits)	16 bits

Table 2-25: Analog Output Pins on the Digital / Analog I/O B Connector

Pin #	Label	Description	In/Out/Bi
6	AO0	Analog Output 0	Output
7	AO1	Analog Output 1	Output

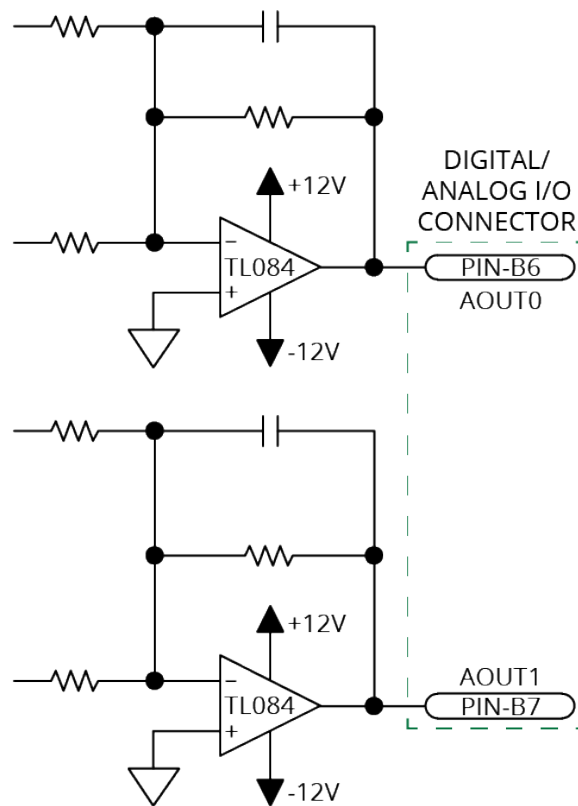


Figure 2-11: Analog Outputs Schematic

2.6.4. Analog Inputs (Differential)

To interface to a single-ended, non-differential voltage source, connect the signal common of the source to the negative input and connect the analog source signal to the positive input. A floating signal source must be referenced to the analog common. Refer to [Figure 2-12](#).

Table 2-26: Analog Input Specifications

Specification	Value
(AI+) - (AI-)	+10 V to -10 V ⁽¹⁾
Resolution (bits)	16 bits
Input Impedance	1 M Ω

1. Signals outside of this range may damage the input

Table 2-27: Analog Input Pins on the Digital / Analog I/O B Connector

Pin #	Label	Description	In/Out/Bi
6	AI+	Analog Input +	Input
7	AI-	Analog Input -	Input
8	GND	Ground	--

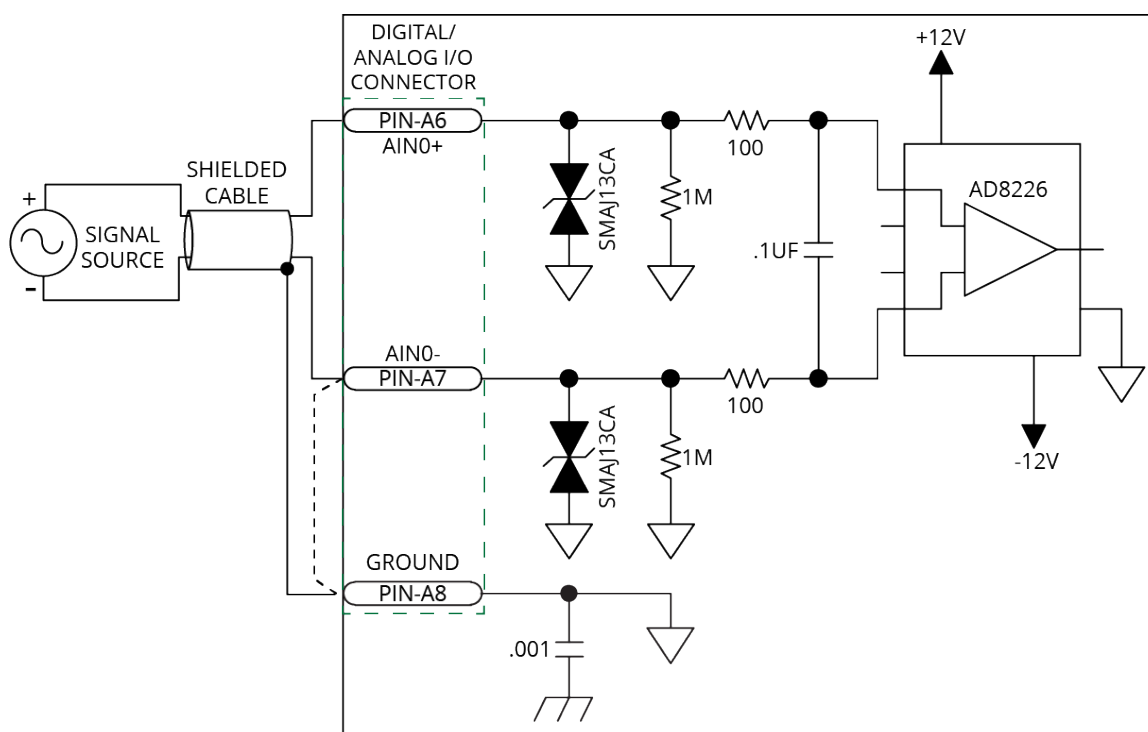


Figure 2-12: Analog Inputs Schematic

2.7. Encoder Input Connectors

The XL4s has one auxiliary encoder input channel. The encoder interface accepts an RS-422 differential line driver. You cannot use the auxiliary encoder input channels to close the position loop.

Table 2-28: Encoder Input Connector Specifications

Specification	Value
Encoder Frequency	10 MHz maximum (25 ns minimum edge separation)
x4 Quadrature Decoding	40 million counts/sec

Table 2-29: Encoder Input Connector A Pinout

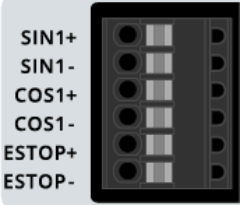
Pin	Label	Description	In/Out/Bi	Connector
1	SIN1+	Encoder SIN+ Input	Input	
2	SIN1-	Encoder SIN- Input	Input	
3	COS1+	Encoder COS+ Input	Input	
4	COS1-	Encoder COS- Input	Input	
5	ESTOP+	Emergency Stop Opto-Isolated Input +	Input	
6	ESTOP-	Emergency Stop Opto-Isolated Input -	Input	

Table 2-30: Encoder Input Connector B Pinout

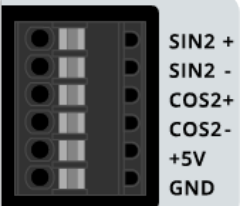
Pin	Label	Description	In/Out/Bi	Connector
1	SIN2+	Reserved	--	
2	SIN2-	Reserved	--	
3	COS2+	Reserved	--	
4	COS2-	Reserved	--	
5	+5V	+5V Encoder Power	Output	
6	GND	Ground	--	

Table 2-31: Mating Connector Part Numbers for the Encoder Input Connector

Type	Aerotech P/N	Third Party P/N	Wire Size: mm ² [AWG]
6-Pin Terminal Block	ECK02220	Phoenix 1881367	0.5 - 0.080 [20-28]

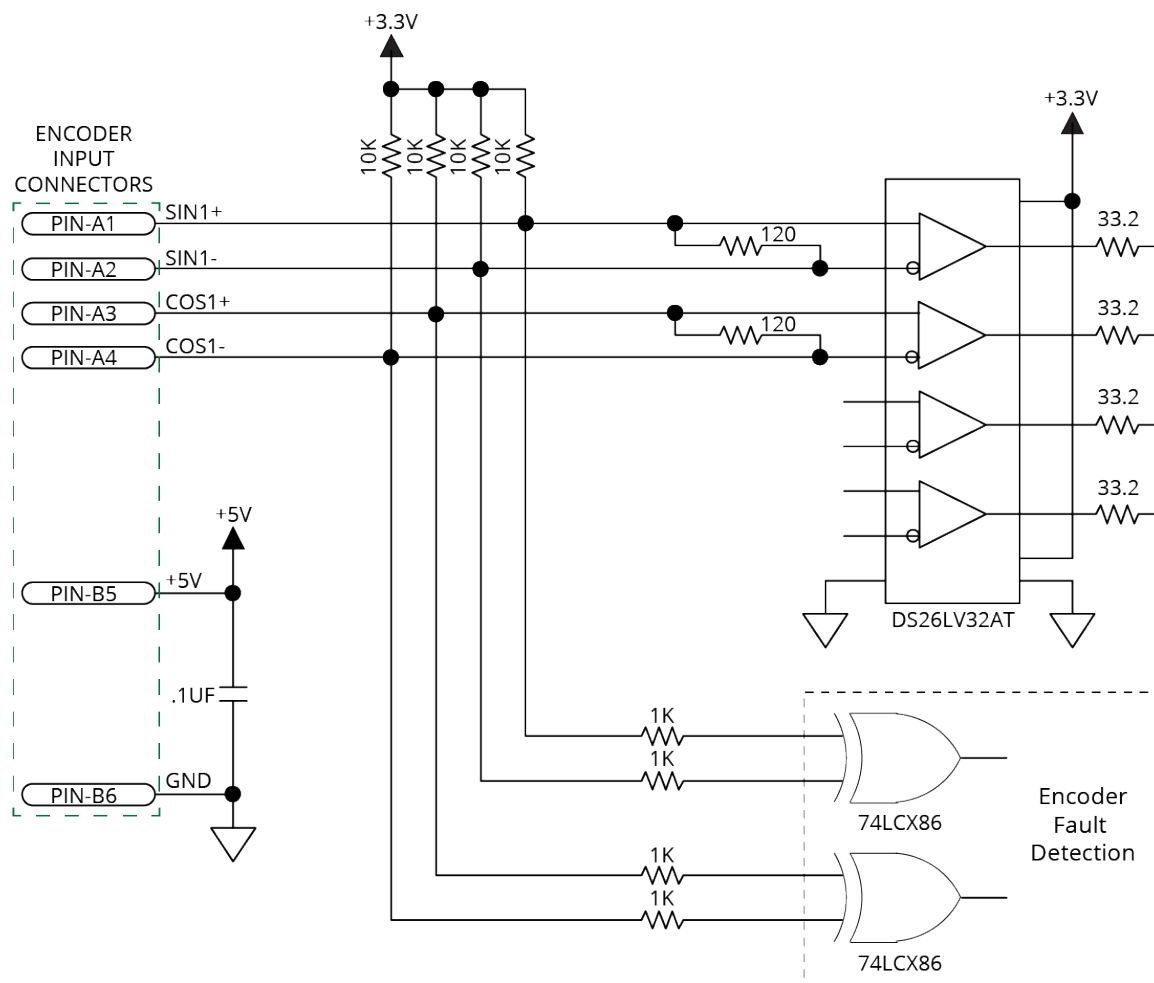


Figure 2-13: Encoder Input Connector Encoder Connections

2.7.1. Emergency Stop Sense Input



WARNING: It is your responsibility to assemble the external safety circuits of your system to minimize the risk to the operator.

NOTE: The ESTOP sense input is not a safety-rated system.

Use the ESTOP sense input to monitor the state of an external safety circuit only. The software identifies this state by using the **Emergency Stop Input Level** bit of the Drive Status. To get the software to generate an ESTOP fault when power is removed at the ESTOP input, set the ESTOP bit in the FaultMask parameter.

The ESTOP input is scaled for an input voltage of 5 - 24 volts.

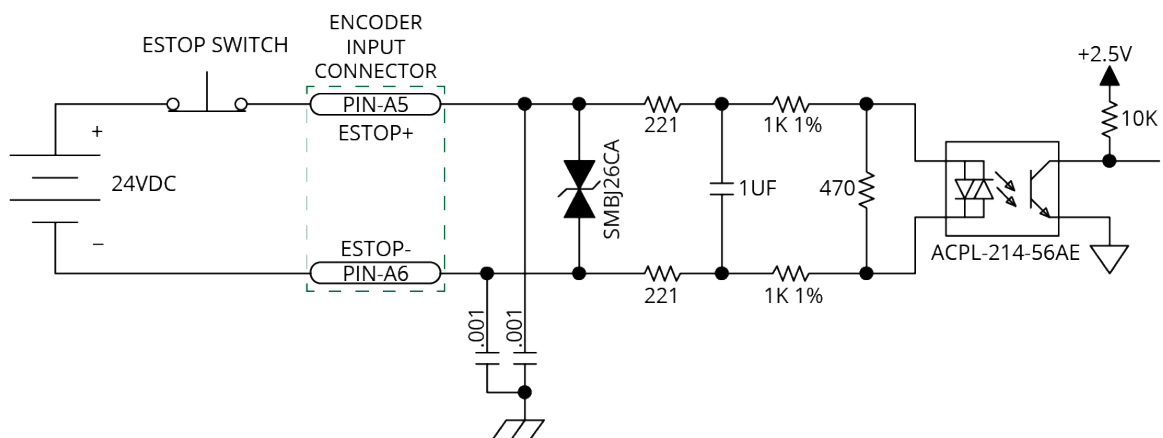


Figure 2-14: ESTOP Sense Input Schematic

Table 2-32: ESTOP Pins on the Encoder Input Connector

Pin #	Label	Description	In/Out/Bi
5	ESTOP+	Emergency Stop Digital Input +	Input
6	ESTOP-	Emergency Stop Digital Input -	Input

NOTE: If you connect the ESTOP input to a device that makes electrical noise, you must connect an electrical noise suppression device across the switched coil. Refer to [Table 2-33](#) to see the types of devices you can use.

Table 2-33: Electrical Noise Suppression Devices

Device	Aerotech P/N	Third Party P/N
RC (.1uf / 200 ohm) Network	EIC00240	Electrocube RG1782-8
Varistor	EID00160	Littelfuse V250LA40A

2.8. Laser Output Polarity Switch

The Laser Output Polarity switches are reserved for future use.

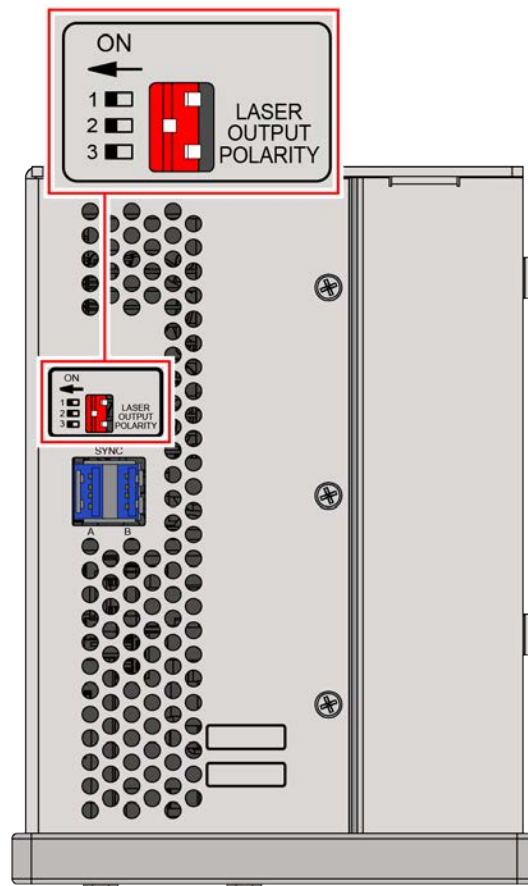


Figure 2-15: Laser Output Polarity Switch Location

2.9. Sync Port

The Sync port is a bi-directional high speed proprietary interface that lets you transmit encoder signals between drives. This is typically used for multi-axis PSO applications where one or two drives send their encoder signals to a main drive that has the PSO logic and PSO output signal. The XL4s contains two Sync ports, labeled A and B.

To avoid signal contention, all Sync ports default to the input state during reset and immediately after power is applied to the drive.

Table 2-34: Sync-Related Commands

Command	Description
ENCODER OUT	Configure each Sync port as an input or an output
PSOTRACK INPUT	Let the PSO to track the SYNC A or SYNC B port.
PSOWINDOW INPUT	

The Sync port uses low-voltage differential signaling (LVDS) and standard USB 3.0 type A (cross over) cables.

Table 2-35: Sync Port Cables

Part Number	Description
CBL-SYNC-3	Length 3 dm; Connectors: USB Type A to USB Type A
CBL-SYNC-5	Length 5 dm; Connectors: USB Type A to USB Type A
CBL-SYNC-7	Length 7 dm; Connectors: USB Type A to USB Type A
CBL-SYNC-10	Length 10 dm; Connectors: USB Type A to USB Type A

2.10. PC Configuration and Operation Information

For more information about hardware requirements, PC configuration, programming, system operation, and utilities, refer to the Help file.

This page intentionally left blank.

Chapter 3: Maintenance



DANGER: Before you open the XL4s chassis, you must disconnect the Mains power connection.



DANGER: All tests must be done by an approved service technician. Voltages inside the controller and at the input and output power connections can kill you.

3.1. Preventative Maintenance

Do an inspection of the XL4s and the external wiring one time each month. It might be necessary to do more frequent inspections based on:

- The operating conditions of the system.
- How you use the system.

Table 3-1: Preventative Maintenance

Check	Action to be Taken
Examine the chassis for hardware and parts that are damaged or loose. It is not necessary to do an internal inspection unless you think internal damage occurred.	Repair all damaged parts.
Do an inspection of the cooling vents.	Remove all material that collected in the vents.
Examine the work area to make sure there are no fluids and no electrically conductive materials.	Do not let fluids and electrically conductive material go into the XL4s.
Examine all cables and connections to make sure they are correct.	Make sure that all connections are correctly attached and not loose. Replace cables that are worn. Replace all broken connectors.

Cleaning



DANGER: Before you clean the XL4s, disconnect the electrical power from the drive.

Use a clean, dry, soft cloth to clean the chassis of the XL4s. If necessary, you can use a cloth that is moist with water or isopropyl alcohol. If you use a moist cloth, make sure that moisture does not go into the XL4s. Also make sure that it does not go onto the outer connectors and components.

Do not use fluids and sprays to clean the XL4s because they can easily go into the chassis or onto the outer connectors and components. If a cleaning solution goes into the XL4s, internal contamination can cause corrosion and electrical short circuits.

Do not clean the labels with a cleaning solution because it might remove the label information.

3.2. Board Assembly

Figure 3-1 highlights the important components located on the control board.



DANGER: Before you open the XL4s chassis, you must disconnect the Mains power connection.

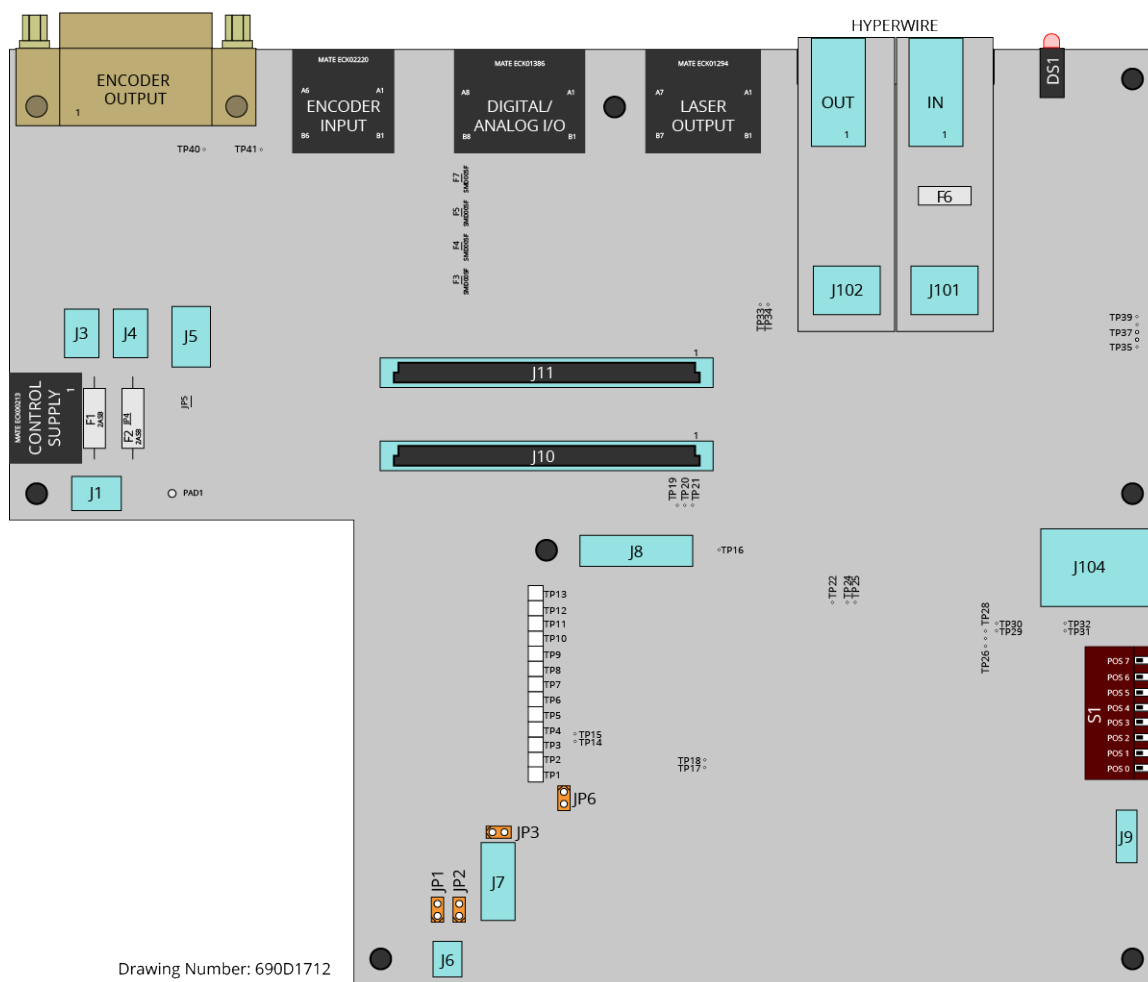


Figure 3-1: Control Board Assembly

Table 3-2: Control Board Fuse Specifications

Fuse	Description	Size	Aerotech P/N	Third Party P/N
F1	Control Supply Power at Pin-1	2 A S.B.	EIF01048	Littelfuse 0875002.MXEP
F2	Control Supply Power at Pin-1	2 A S.B.	EIF01048	Littelfuse 0875002.MXEP
F6	HyperWire power	--	--	--
NOTE: F6 is a resettable fuse. It is not necessary to replace the fuse. Turn off the power and remove the short circuit.				



DANGER: Before you open the XL4s chassis, you must disconnect the Mains power connection.

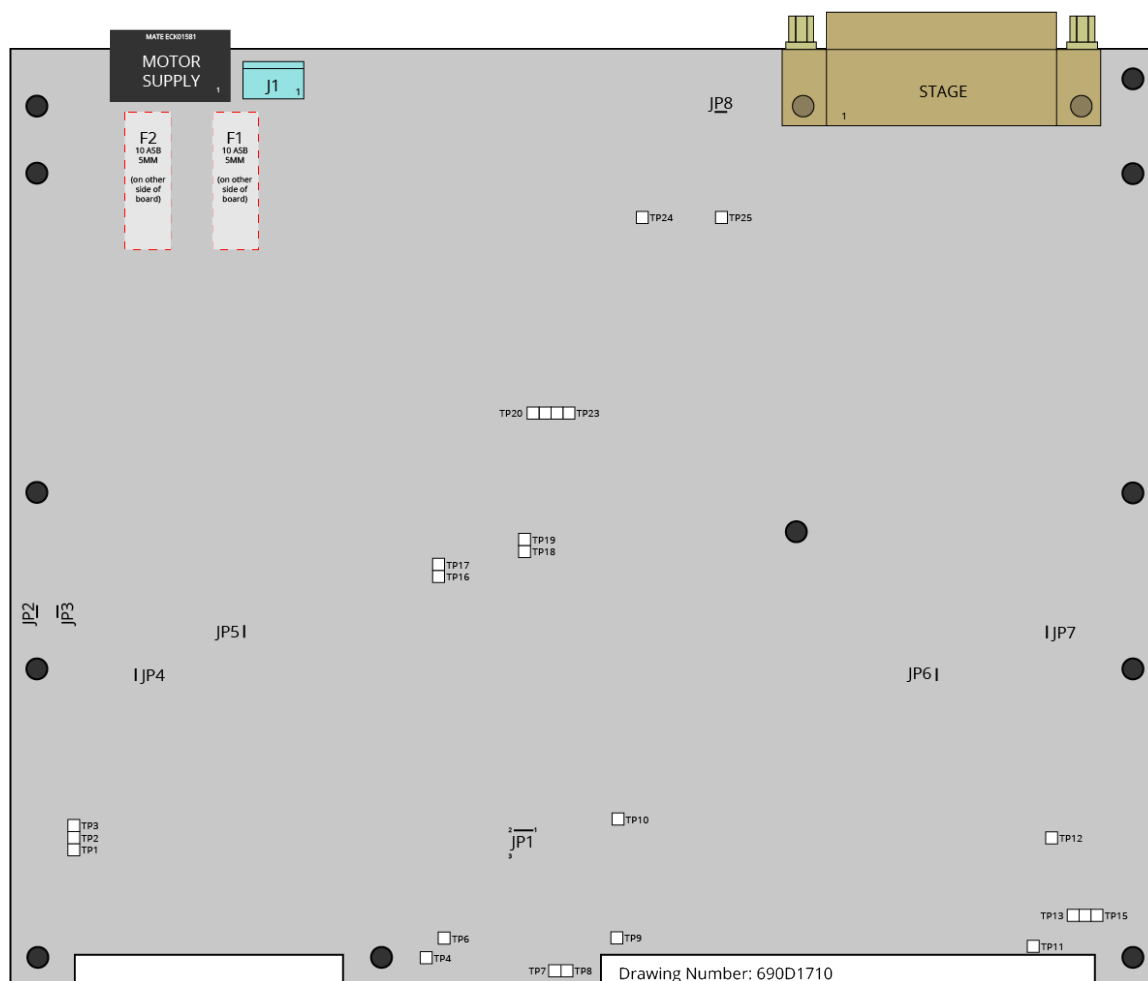


Figure 3-2: Power Board Assembly

Table 3-3: Power Board Fuse Specifications

Fuse	Description	Size	Aerotech P/N	Third Party P/N
F1	Motor Bus Supply	10 A S.B.	EF01020	Littelfuse 215010.P
F2	Motor Bus Supply	10 A S.B.	EF01020	Littelfuse 215010.P

NOTE: F1 and F2 are on the bottom of the board.

This page intentionally left blank.

Appendix A: Warranty and Field Service

Aerotech, Inc. warrants its products to be free from harmful defects caused by faulty materials or poor workmanship for a minimum period of one year from date of shipment from Aerotech. Aerotech's liability is limited to replacing, repairing or issuing credit, at its option, for any products that are returned by the original purchaser during the warranty period. Aerotech makes no warranty that its products are fit for the use or purpose to which they may be put by the buyer, whether or not such use or purpose has been disclosed to Aerotech in specifications or drawings previously or subsequently provided, or whether or not Aerotech's products are specifically designed and/or manufactured for buyer's use or purpose. Aerotech's liability on any claim for loss or damage arising out of the sale, resale, or use of any of its products shall in no event exceed the selling price of the unit.

THE EXPRESS WARRANTY SET FORTH HEREIN IS IN LIEU OF AND EXCLUDES ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, BY OPERATION OF LAW OR OTHERWISE. IN NO EVENT SHALL AEROTECH BE LIABLE FOR CONSEQUENTIAL OR SPECIAL DAMAGES.

Return Products Procedure

Claims for shipment damage (evident or concealed) must be filed with the carrier by the buyer. Aerotech must be notified within thirty (30) days of shipment of incorrect material. No product may be returned, whether in warranty or out of warranty, without first obtaining approval from Aerotech. No credit will be given nor repairs made for products returned without such approval. A "Return Materials Authorization (RMA)" number must accompany any returned product(s). The RMA number may be obtained by calling an Aerotech service center or by submitting the appropriate request available on our website (www.aerotech.com). Products must be returned, prepaid, to an Aerotech service center (no C.O.D. or Collect Freight accepted). The status of any product returned later than thirty (30) days after the issuance of a return authorization number will be subject to review.

Visit <https://www.aerotech.com/global-technical-support.aspx> for the location of your nearest Aerotech Service center.

Returned Product Warranty Determination

After Aerotech's examination, warranty or out-of-warranty status will be determined. If upon Aerotech's examination a warranted defect exists, then the product(s) will be repaired at no charge and shipped, prepaid, back to the buyer. If the buyer desires an expedited method of return, the product(s) will be shipped collect. Warranty repairs do not extend the original warranty period.

Fixed Fee Repairs - Products having fixed-fee pricing will require a valid purchase order or credit card particulars before any service work can begin.

All Other Repairs - After Aerotech's evaluation, the buyer shall be notified of the repair cost. At such time the buyer must issue a valid purchase order to cover the cost of the repair and freight, or authorize the product(s) to be shipped back as is, at the buyer's expense. Failure to obtain a purchase order number or approval within thirty (30) days of notification will result in the product(s) being returned as is, at the buyer's expense.

Repair work is warranted for ninety (90) days from date of shipment. Replacement components are warranted for one year from date of shipment.

Rush Service

At times, the buyer may desire to expedite a repair. Regardless of warranty or out-of-warranty status, the buyer must issue a valid purchase order to cover the added rush service cost. Rush service is subject to Aerotech's approval.

On-site Warranty Repair

If an Aerotech product cannot be made functional by telephone assistance or by sending and having the customer install replacement parts, and cannot be returned to the Aerotech service center for repair, and if Aerotech determines the problem could be warranty-related, then the following policy applies:

Aerotech will provide an on-site Field Service Representative in a reasonable amount of time, provided that the customer issues a valid purchase order to Aerotech covering all transportation and subsistence costs. For warranty field repairs, the customer will not be charged for the cost of labor and material. If service is rendered at times other than normal work periods, then special rates apply.

If during the on-site repair it is determined the problem is not warranty related, then the terms and conditions stated in the following "On-Site Non-Warranty Repair" section apply.

On-site Non-Warranty Repair

If any Aerotech product cannot be made functional by telephone assistance or purchased replacement parts, and cannot be returned to the Aerotech service center for repair, then the following field service policy applies:

Aerotech will provide an on-site Field Service Representative in a reasonable amount of time, provided that the customer issues a valid purchase order to Aerotech covering all transportation and subsistence costs and the prevailing labor cost, including travel time, necessary to complete the repair.

Service Locations

<http://www.aerotech.com/contact-sales.aspx?mapState=showMap>

USA, CANADA, MEXICO	CHINA	GERMANY
Aerotech, Inc. Global Headquarters Phone: +1-412-967-6440 Fax: +1-412-967-6870	Aerotech China Full-Service Subsidiary Phone: +86 (21) 5508 6731	Aerotech Germany Full-Service Subsidiary Phone: +49 (0)911 967 9370 Fax: +49 (0)911 967 93720
TAIWAN	UNITED KINGDOM	
Aerotech Taiwan Full-Service Subsidiary Phone: +886 (0)2 8751 6690	Aerotech United Kingdom Full-Service Subsidiary Phone: +44 (0)1256 855055 Fax: +44 (0)1256 855649	

Have your customer order number ready before calling.

Appendix B: Revision History

Revision	Description
1.04.00	Updated Section 1.2. Mechanical Specifications
	Updated Table 1-1
1.02.00	Updated to AUTOMATION1 hardware
1.01.00	Added Table 2-13
1.00.00	New Manual

This page intentionally left blank.

Index

		connections, examining	47
		Continuous Output Current	17
		Control and Motor Power Wiring using a TM3 Transformer	25
		Control Board Assembly	48
		Control Board Fuse Specifications	48
		Control Supply	17
		Control Supply Connections	23
		Control Supply Connector	23
		Mating Connector Part Numbers	23
		Wiring Specifications	23
		cooling vents, inspecting	47
		D	
		Declaration of Conformity	7
		Digital / Analog I/O Connectors	
		Analog Inputs (Differential)	39
		Mating Connector Part Numbers	34
		Digital and Analog I/O Connector	
		Analog Outputs	38
		Digital Inputs	37
		Digital Outputs	35
		Digital and Analog I/O Connector A Pinout	34
		Digital and Analog I/O Connector B Pinout	34
		Digital and Analog I/O Connectors	34
		Digital Input Pins (Digital/Analog I/O B Connector)	37
		Digital Input Specifications	37
		Digital Inputs (Digital and Analog I/O Connector)	37
		Digital Inputs Connected to Current Sinking Devices	37
		Digital Inputs Connected to Current Sourcing Devices	37
		Digital Output Pins (Digital/Analog I/O A Connector)	35
		Digital Output Specifications	35
	2		
2014/35/EU	7		
	A		
Agency Approvals	9		
Altitude	20		
Ambient Temperature	20		
Analog Encoder Input Specifications	33		
Analog Encoder Inputs	33		
Analog Input Pins on the Digital / Analog I/O B Connector	39		
Analog Input Specifications (Digital / Analog I/O B Connector)	39		
Analog Inputs (Digital / Analog I/O B Connector)	39		
Analog Inputs Schematic	39		
Analog Output Pins on the Digital / Analog I/O B Connector	38		
Analog Output Specifications (Digital and Analog I/O Connector)	38		
Analog Outputs (Digital and Analog I/O Connector)	38		
Analog Outputs Schematic	38		
	B		
Board Assembly	48		
	C		
Cables			
HyperWire	28		
Sync Port	44		
cables, examining	47		
CAN/CSA-C22.2 No. 61010-1	9		
Check for fluids or electrically conductive material exposure	47		
Cleaning	47		
Commands			
Sync	44		

Digital Outputs (Digital and Analog I/O Connector)	35	examining, dangerous fluids	47
Digital Outputs Connected in Current Sinking Mode	36	examining, dangerous material	47
Digital Outputs Connected in Current Sourcing Mode	36	External Power Supply Options	25
Dimensions	19	F	
Drive and Software Compatibility	21	Feature Summary	15
E		Figure	
Electrical Noise Suppression Devices	42	Analog Inputs Schematic	39
Electrical Specifications	17	Analog Outputs Schematic	38
EMC/CE Compliance	27	Control Board Assembly	48
Emergency Stop Sense Input	42	Control Supply Connections	23
Enclosure	18	Digital Inputs Connected to Current Sinking Devices	37
Encoder Input Connector	40	Digital Inputs Connected to Current Sourcing Devices	37
Mating Connector Part Numbers	40	Digital Outputs Connected in Current Sinking Mode	36
Encoder Input Connector A Pinout	40	Digital Outputs Connected in Current Sourcing Mode	36
Encoder Input Connector B Pinout	40	Dimensions	19
Encoder Input Connector Encoder Connections	41	Encoder Input Connector Encoder Connections	41
Encoder Input Connector Specifications	40	Encoder Outputs Schematic	30
Encoder Output Connector	30	ESTOP Sense Input Schematic	42
Encoder Output Connector Mating		Motor Supply Connections	24
Connector Part Numbers	30	Power Board Assembly	49
Encoder Output Connector Pinout	30	PSO External Sync Input Schematic	31
Encoder Outputs Schematic	30	Third-Party Power Supply Connection	25-26
Environmental Specifications	20	TM3 Transformer Control and Power Wiring	25
ESTOP	42	fluids, dangerous	47
ESTOP Pins on the Encoder Input Connector	42	Functional Diagram	16
ESTOP Sense Input Schematic (Encoder Input Connector)	42	G	
EU 2015/863	7	Global Technical Support	2
examining parts		H	
cables	47	Humidity	20
connections	47		

HyperWire	28	Mounting Hardware	18
Cable Part Numbers	28	Mounting Orientation	18
Card Part Number	28		
		O	
		Operation	20
Input Power Connections	23	Output Voltage	17
inspecting cooling vents	47	Overview	15
Inspection	47		
		P	
Installation and Configuration	23	PC Configuration and Operation Information	45
Introduction	15	Peak Output Current	17
IP54 Compliant	18	Pinout	
		L	
		Analog Input Pins (Digital / Analog I/O B Connector)	39
Laser Output Polarity Switch	43		
		M	
		Analog Output Pins (Digital / Analog I/O B Connector)	38
Maintenance	47	Digital and Analog I/O Connector A	34
material, electrically conductive	47	Digital and Analog I/O Connector B	34
Mating Connector P/N		Digital Input Pins (Digital/Analog I/O B Connector)	37
Control Supply Connector	23		
Digital / Analog I/O Connectors	34	Digital Output Pins (Digital/Analog I/O A Connector)	35
Encoder Input Connector	40	Encoder Input Connector A	40
Encoder Output Connector	30	Encoder Input Connector B	40
Motor Supply Connector	24	Encoder Output Connector	30
PSO Connectors	29	ESTOP Pins on the Encoder Input Connector	42
Stage Motor and Feedback Connector	32	PSO (Connector A)	29
Mechanical Specifications	18	PSO (Connector B)	29
Minimizing Conducted, Radiated, and System Noise for EMC/CE Compliance	27	Stage Motor and Feedback Connector	32
Minimum Load Resistance	17	Pollution	20
Motor Supply	17	Position Synchronized Output Connector	29
Motor Supply Connections	24	Power Board Assembly	49
Motor Supply Connector	24	Power Board Fuse Specifications	49
Mating Connector Part Numbers	24	Power Supply Options	25
Motor Supply Wiring Specifications	24	Preventative Maintenance	47
Mounting and Cooling	18	PSO Connector	29

PSO Connector A Pinout	29	Standard Features	15
PSO Connector B Pinout	29	Support	2
PSO Connectors		Sync-Related Commands	44
Mating Connector Part Numbers	29	Sync Port Cables	44
PSO External Sync Input Schematic	31	Sync Ports	44
PSO External Sync Specifications	31	T	
PSO Output Sources	29	Table of Contents	3
PSO Specifications	29	Technical Support	2
Q		Third-Party Power Supply Connection	26
Quick Installation Guide	13	TM3 Transformer Control and Power Wiring	25
Quick Start Connections	13	U	
R		Unit Weight	18
Revision History	53	Use	20
S		User Power Supply Output	17
Safety Procedures and Warnings	11	W	
Specifications		Warranty and Field Service	51
Analog Encoder Input	33		
Analog Input (Digital / Analog I/O B Connector)	39		
Analog Output (Digital and Analog I/O Connector)	38		
Control Board Fuses	48		
Control Supply Connector Wiring	23		
Digital Inputs	37		
Digital Outputs	35		
Encoder Input Connector	40		
Motor Supply Wiring	24		
Power Board Fuses	49		
PSO	29		
Unit Weight	18		
Stage Motor and Feedback Connector	32		
Mating Connector Part Numbers	32		
Stage Motor and Feedback Connector Pinout	32		